



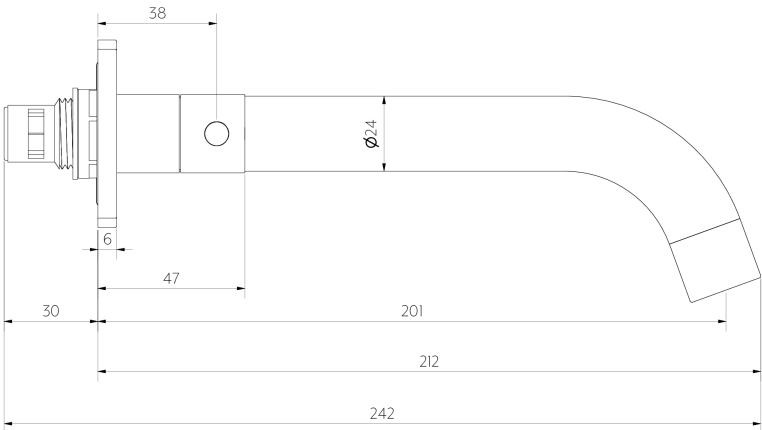

Side View

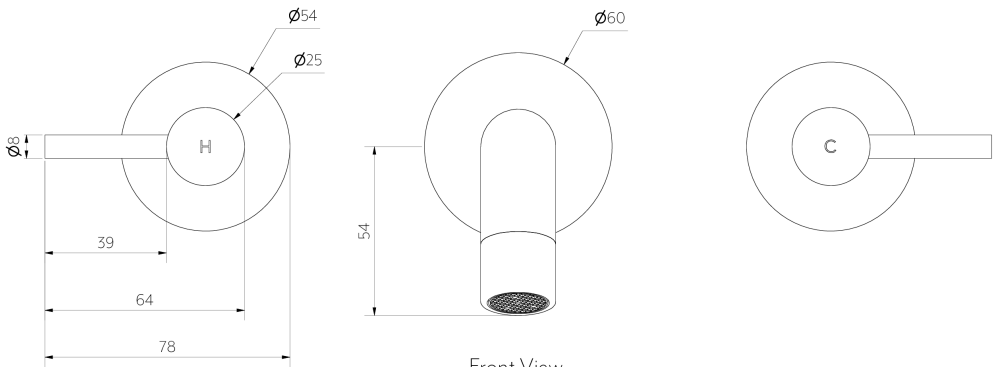

Front View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

MATERIAL

Solid Brass | [Click here for warranty periods](#)

TEMPERATURE RATING

Maximum continuous working temperature 75°C
If the water temperature exceeds 75°C, an approved tempering valve must be fitted

PRESSURE RATING

Recommended minimum working pressure 150kPa
Recommended maximum working pressure 500kPa
Hot and cold water inlet pressure should be equal

SUITABLE HOT WATER UNITS

Storage tank: Yes
Continuous Flow: Yes
Gravity Feed: Not suitable

PACKAGING

Box 1 of 3 In-Wall Assembly Taps - Adjustable Extended Spindle Set (Rough-In)
Box 2 of 3 Elysian Assembly Handle Kit (Fit-Off)
Box 3 of 3 Wall Mounted Spout (Fit-Off)

WELS


WELS 5 star, 6L/min, T49702

INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.



- 1 Determine the orientation for your chosen handle kit.
The black and white rubber at the base of the spindle determines whether it turns clockwise or anticlockwise for the ON position.

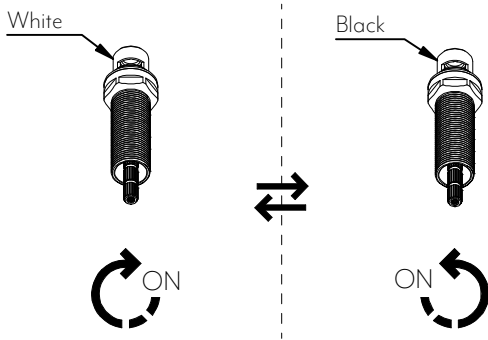

- 2 **New Build**
Install breach in desired position

Retrofitting Existing


Remove existing tapware & reseal body seats until shiny & smooth.

Fit-Off


If your spindles have already been installed into the breach please skip to next page for adjustment to handle kit.

- 3 Remove locking nut and screw spindle into breach, hand tighten until rear of spindle meets the body seat. **Be sure not to overtighten.** If necessary apply more pressure lightly with a spanner.*


*At this point it is recommended to test the orientation of your chosen handles. Micro adjustments can be made to spindle to ensure correct handle orientation before installing the locking nut.

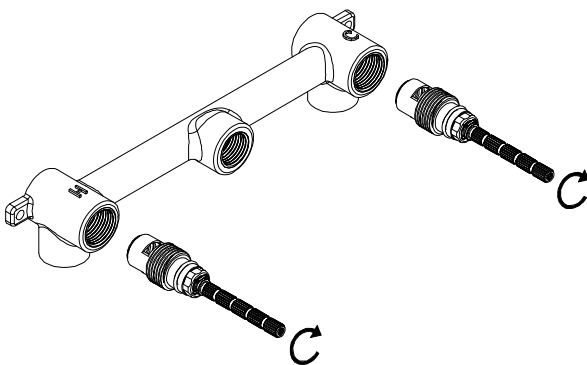

- 4 Place compression washer over spindle and screw on the locking nut, tightening with a spanner.
TEST AND COMMISSION.
ENSURE THERE ARE NO LEAKS.

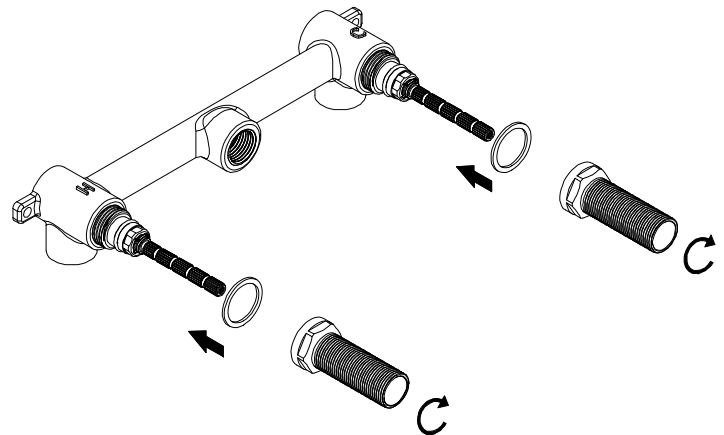


- 5 Nut and spindle are trimmable onsite to fit your chosen handle kit. Please see handle kit install guide for setback from finish wall guides.

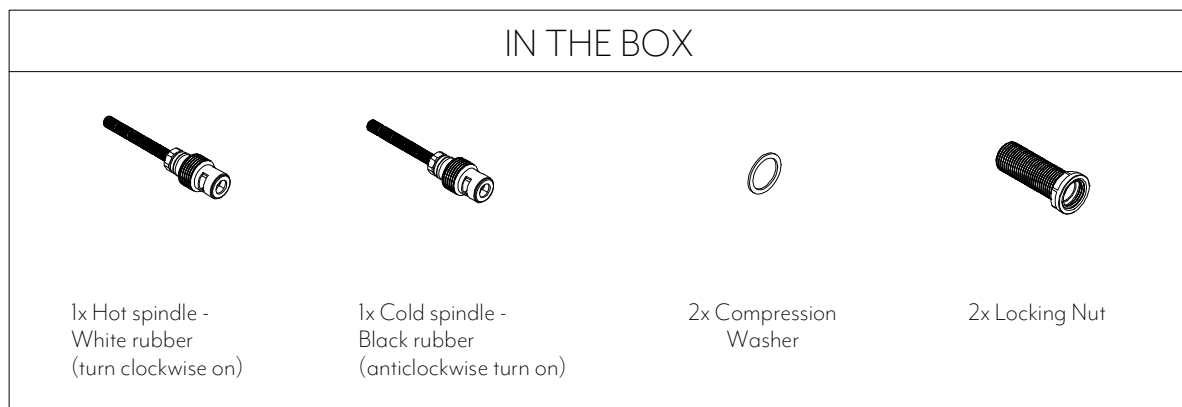

Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

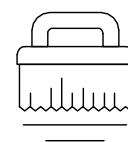

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material


INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.



ADJUSTING YOUR SPINDLES TO FIT YOUR HANDLE KIT.

Elysian Assembly Taps


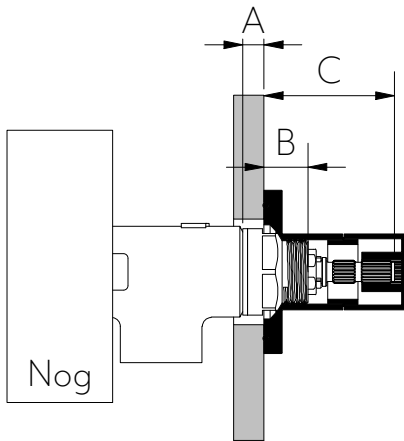


Example at minimum setback

- ① Ensure finish wall is between 7-42mm from face of breach (A)
- ② Measure 15mm from finish wall and mark Nut for cutting (B)
- ③ Measure 45mm from finish wall and mark Spline for cutting (C)

- ③ Unscrew nut and spindle. Ensure fibre washer is set aside for re-installation.

- ④ Cut nut and spindle at marked positions. Ensure to debur cuts.

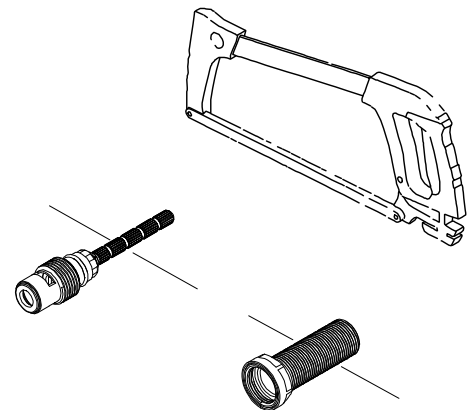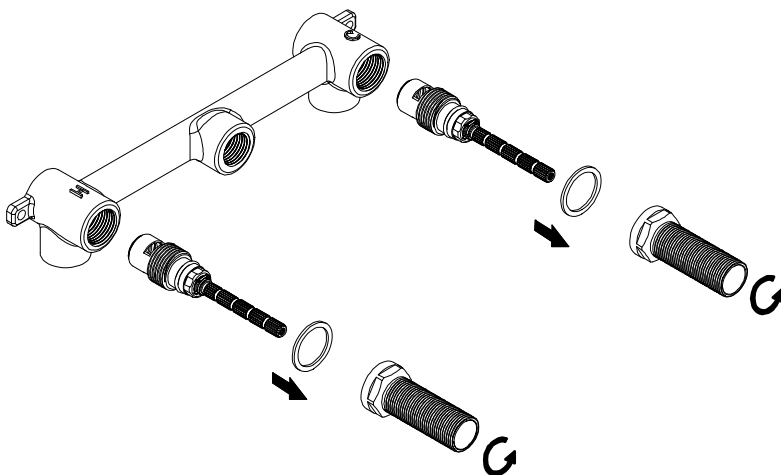

- ⑤ Re-install spindles in reverse order. Screw spindle into breach, hand tighten until rear of spindle meets the body seat. **Be sure not to overtighten.** If necessary apply more pressure lightly with a spanner. *

- ⑥ Place compression washer over spindle and screw on the locking nut, tightening with a spanner. **TEST AND COMMISSION. ENSURE THERE ARE NO LEAKS.**


*At this point it is recommended to test the orientation of your chosen handles. Micro adjustments can be made to spindle to ensure correct handle orientation before installing the locking nut.



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

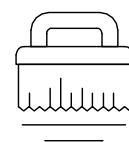


DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

ABI
INTERIORS


- 1 Install back plate onto spindle nut.
Ensure o-ring is correctly recessed into base.

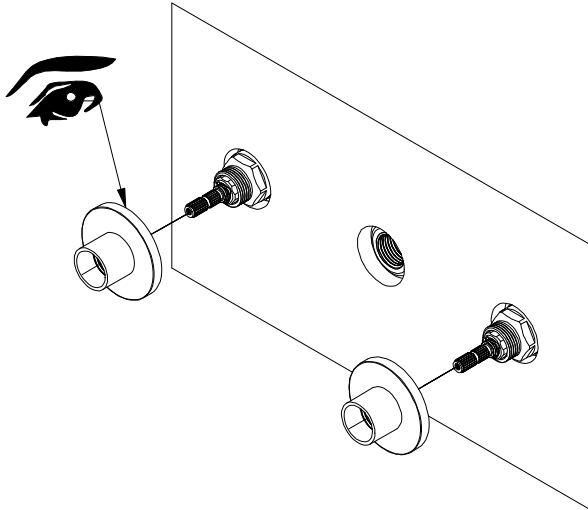


- 2 Slide Plastic slip collar into back plate.
Slide handle onto spindle, ensuring correct orientation in closed position for H&C.

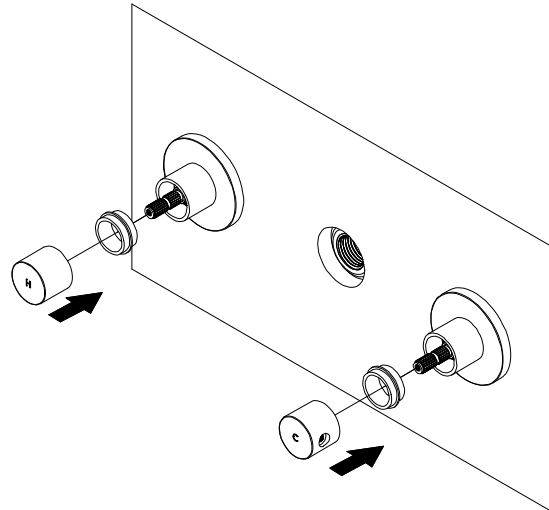

- 3 Lock handle to spindle with grub screw, using provided Allen key.
Place o-ring over grub screw and screw handle stem onto grub screw.

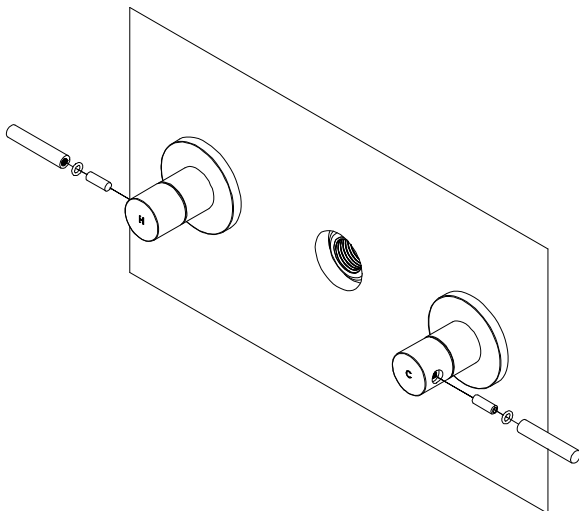

- 4 Ensure handle is level in closed position. If adjustment, see install steps of spindle for details on micro adjustment of handle positioning.

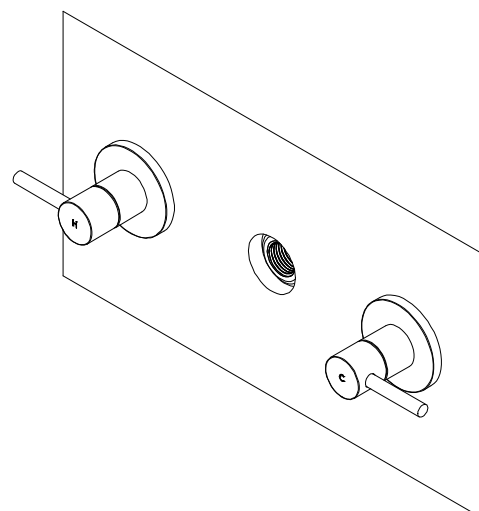

In the box



2 x Back plate



2 x Slip collar



2 x Handle



2 x Handle stem



2 x Small o-ring




2 x Grub screw




Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

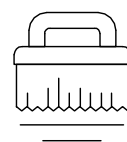

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

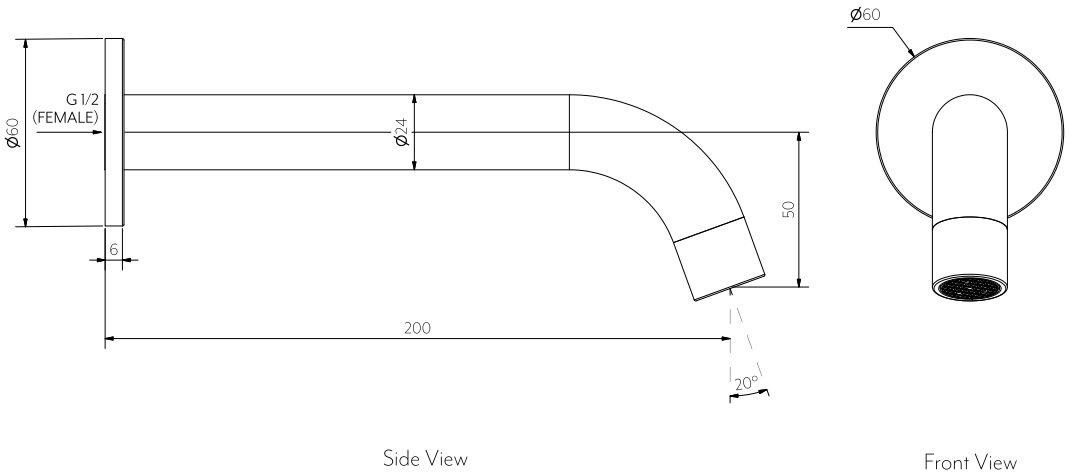

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE | WARRANTY

Domestic/Commercial | [Click here for warranty periods](#)

INSTALLATION

Installation is subject to the requirements of the applicable regulatory authority, the National Construction Code Volume Three (NCC Vol.3)- Plumbing Code of Australia, associated reference standards as applicable at the time and AS/NZS 3500

TEMPERATURE RATING

Maximum continuous working temperature 75°C
If the water temperature exceeds 75°C,an approved tempering valve must be fitted

PRESSURE RATING

Recommended minimum working pressure 150kPa
Recommended maximum working pressure 500kPa
Hot and cold water inlet pressure should be equal

SUITABLE HOT WATER UNITS

Storage tank: Yes
Continuous Flow: Yes
Gravity Feed: Not suitable

STANDARDS/LEAD FREE/REQUIREMENTS

WELS 5 star, 6L/min, T43739 - For water supply use only, test before concealing.

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide- there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply(Water Fittings) Regulations and Water Supply(Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.


ABI

- 1 Slide the back plate onto the spout, make sure that the rubber is firmly in place to protect the spout and stop the back plate from moving around.

- 2 Apply teflon thread tape to the breech point, twist the spout on and hand tighten. Remove aerator from the spout and flush. Reinstall aerator. Test and commission.

Note: Please tighten aerator so that it cannot be removed by hand.

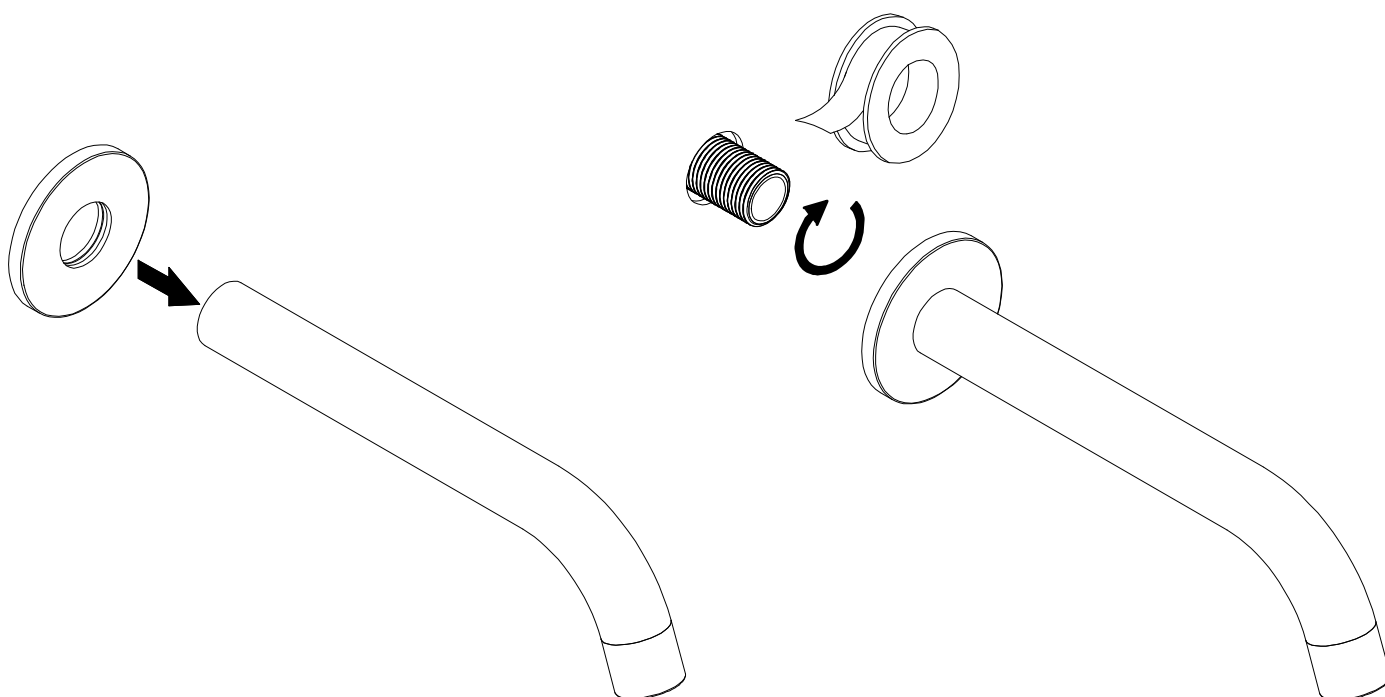

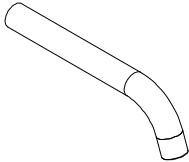
IN THE BOX	
	
1 x Back plate	1 x Spout



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

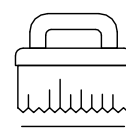

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material