


MILANI BASIN HOB MIXER SET

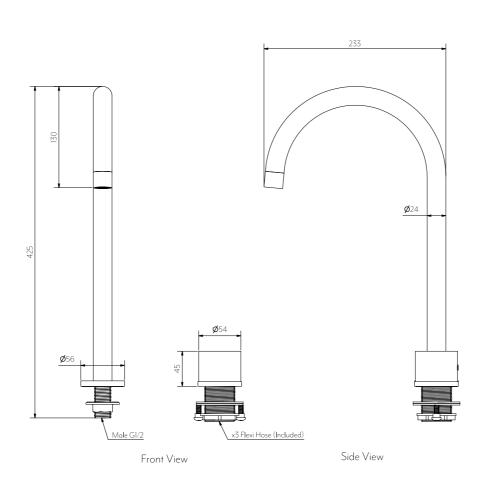




Note: Dimensions are nominal measurements only

SPECIFICATIONS	
MATERIAL	Solid Brass
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C,an approved tempering valve must be fitted
PRESSURE RATING	Recommended minimum working pressure 150kPa Recommended maximum working pressure 500kPa Hot and cold water inlet pressure should be equal
SUITABLE HOT WATER UNITS	Storage tank: Yes Continuous Flow: Yes Gravity Feed: Not suitable
STANDARDS	WELS 5 Star, 5.5L/min, T41254
PACKAGING	Box 1 of 2 - Milani Hob Mixer Box 2 of 2 Gooseneck Spout





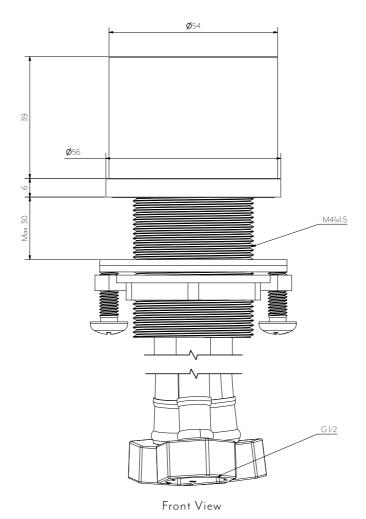



Note: Dimensions are nominal measurements only

SPECIFICATIONS	
RECOMMENDED USE	Domestic
MATERIAL	Solid Brass
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C, an approved tempering valve must be fitted
PRESSURE RATING	Recommended minimum working pressure 150kPa Recommended maximum working pressure 500kPa Hot and cold water inlet pressure should be equal
SUITABLE HOT WATER UNITS	Storage tank: Yes Continuous Flow: Yes Gravity Feed: Not suitable
STANDARDS	WELS Star Rating 5 Star - Flow Rate 5.5L/Min

Registration No. T36893 (V), WM-022852 - AS/NZS 3718:2005


INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.




1 Make a hole 45mm in diameter.


Note: If cutting a stone benchtop it will need to be cut in a controlled environment by a licensed tradesperson as per OH&S regulations.

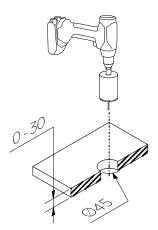

Push the flexi hoses through the hole. Fix to the bench by screwing the fixing nut and washers.

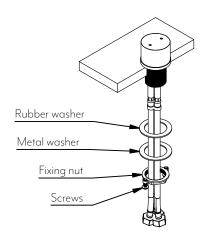


(5) Mixer Operation

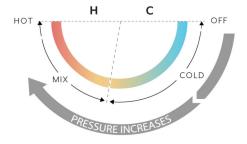





- 1. Remove the fixing nut and washers.
- 2. Connect the flexi hoses (take note of red & blue mark)

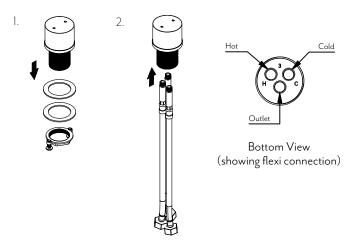

Attach the hot/cold flexi hoses to the corresponding hot/cold water supply.

Note: Purge the lines with fresh water before connecting the flexi hoses to any spout.

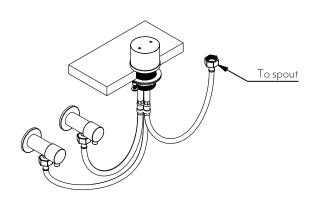

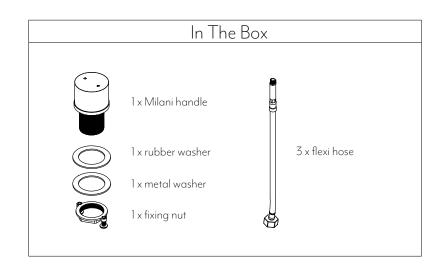



Regularly clean with mild liquid detergent or soap and water




DO NOT use cream cleaners or bleach.
These substances are abrasive



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material



GOOSENECK HOB SPOUT

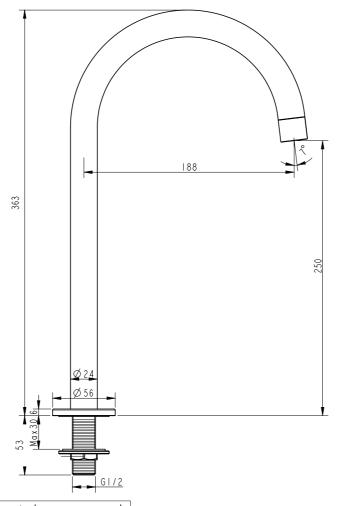



Note: Dimensions are nominal measurements only

Disclaimer * This product is designed to be used with wall mounted tapware

SPECIFICATIONS

STANDARDS


RECOMMENDED USE	Domestic
MATERIAL	Solid Brass
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C,an approved tempering valve must be fitted
PRESSURE RATING	Recommended minimum working pressure 150kPa Recommended maximum working pressure 500kPa Hot and cold water inlet pressure should be equal
SUITABLE HOT WATER UNITS	Storage tank: Yes Continuous Flow: Yes Gravity Feed: Not suitable

WELS 5 Star, 6L/min, T38391

INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with AS/NZS 3500.



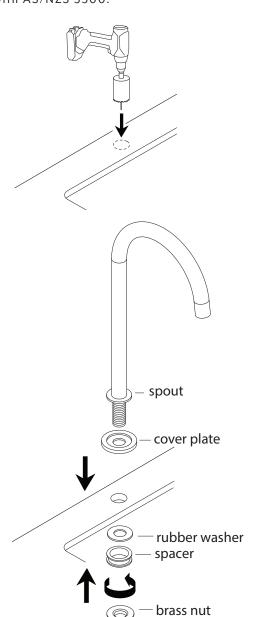




Mark out desired location of spout.


Cut hole using a 30 mm hole saw.

Note: If cutting a stone benchtop it will need to be cut in a controlled environment by a licensed tradesperson as per OH&S regulations.

Fix spout to benchtop with brass nut ensuring cover plate is fitted above the bench and the rubber washer and spacer is fitted to underside of benchtop.

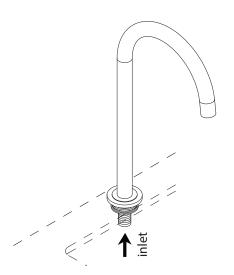

3 Connect pipework to inlet of spout.

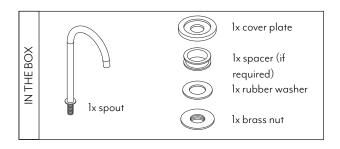



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach These substances are abrasive



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material