


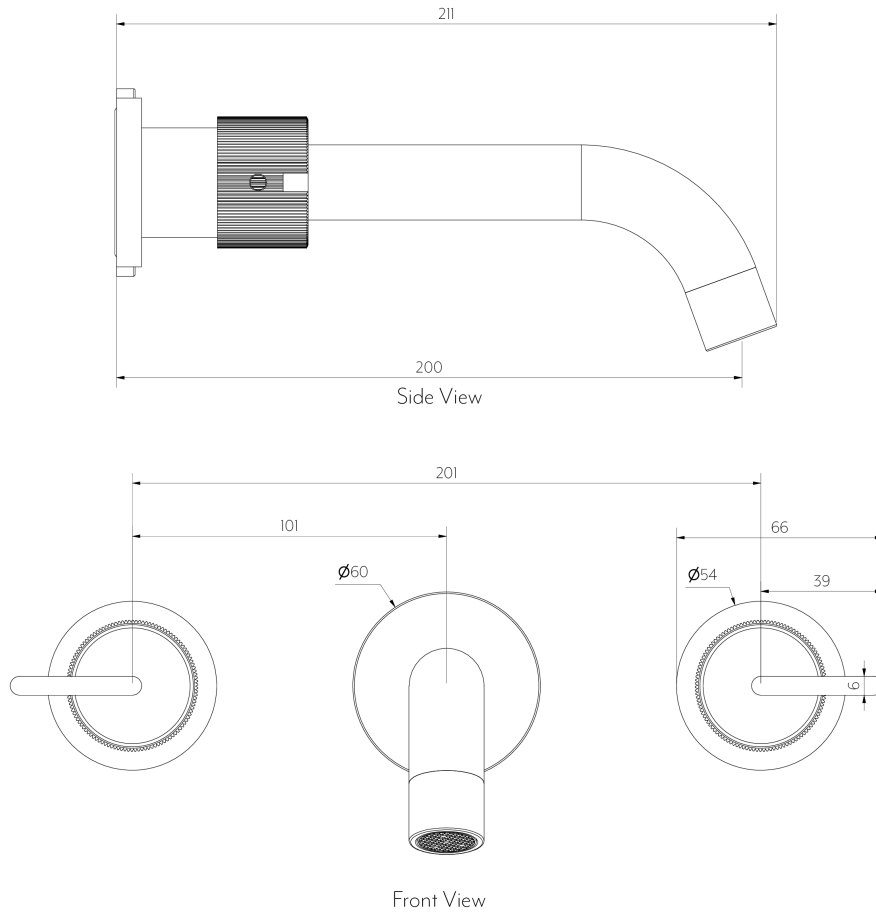

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE | WARRANTY


Domestic/Commercial | [Click here for warranty periods](#)

BOX


Box 1: Namika Assembly Taps
Box 2: In wall components
Box 3: Wall mounted spout

STANDARDS

WELS TBD

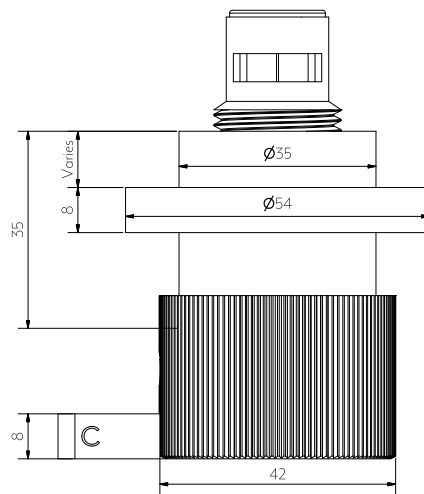

Top View

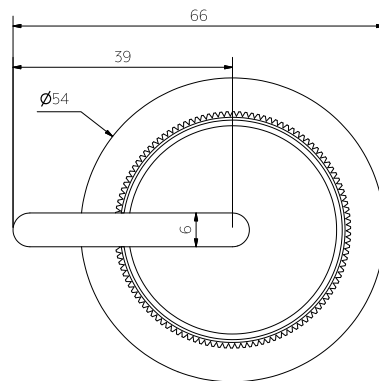

Front View



Note: Dimensions are nominal measurements only

SPECIFICATIONS

SPECIFICATIONS	
RECOMMENDED USE	Domestic, commercial
CONSTRUCTION	Solid Brass
PRESSURE RATING	Recommended minimum working pressure 150kPa Recommended maximum working pressure 500kPa Hot and cold water inlet pressure should be equal
TEMPERATURE RATING	Maximum continuous working temperature 75°C. If the water temperature exceeds 75°C, an approved tempering valve must be fitted
STANDARDS	AS/NZS 3718:2005, WM-022852
PACKAGING	Box 1 of 2 - In-wall assembly taps - Spindle standard set (rough in) Box 2 of 2 - Namika Assembly Handle Kit (fit off)

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.




New Build: Install breach in desired position (please refer to additional install information regarding breach setbacks).

Retrofitting Existing: Remove existing tapware & reseal body seats until shiny and smooth.


- 1 Remove locking nut from spindle. Screw spindle into breach and hand tighten until rear of spindle meets the body seat, be sure not to over tighten. If necessary apply more pressure lightly with spanner.

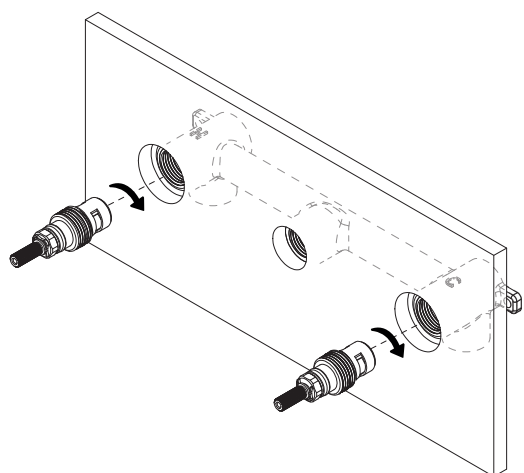


- 2 Fit the fibre washer over the spindle. Screw the locking nut and tighten with spanner. TEST AND CHECK FOR LEAKS.

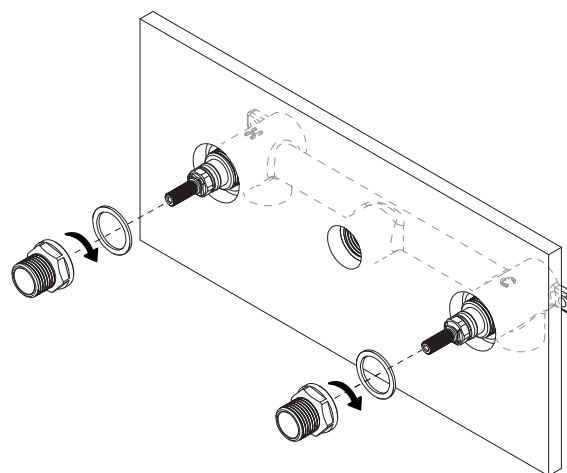

- 3 Install the sleeve onto the locking nut and hand tighten. Slide backplate over sleeve.

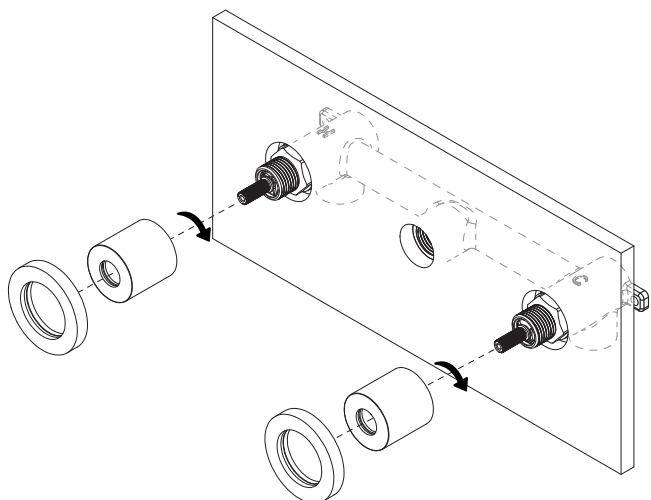


- 4 Fit the handle to the spindle and tighten grub screw with Allen key.

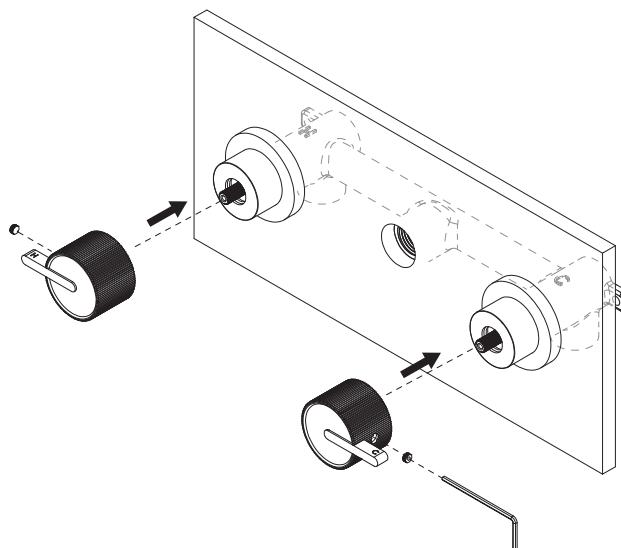

Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

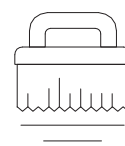


DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

ASSEMBLY SETUP GUIDE




Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.


Example One: Offset basin mixer/bath spout setup

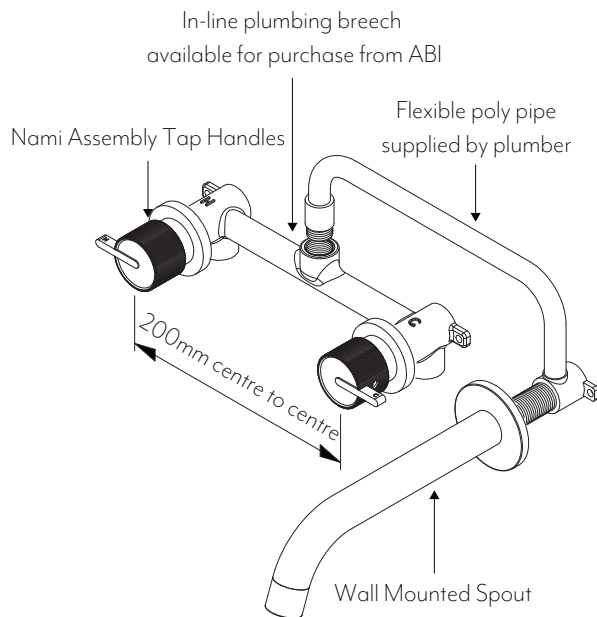

Example Two: Centred basin mixer/bath spout setup

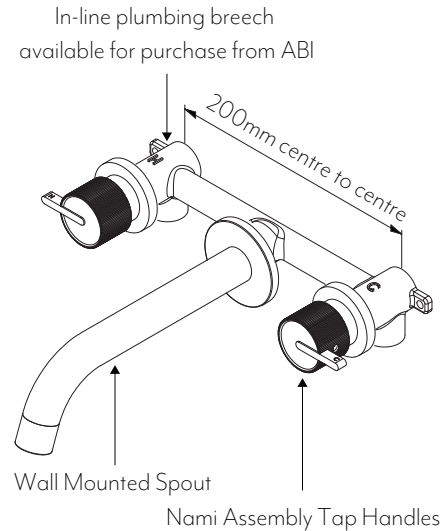


Example Three: Shower Setup

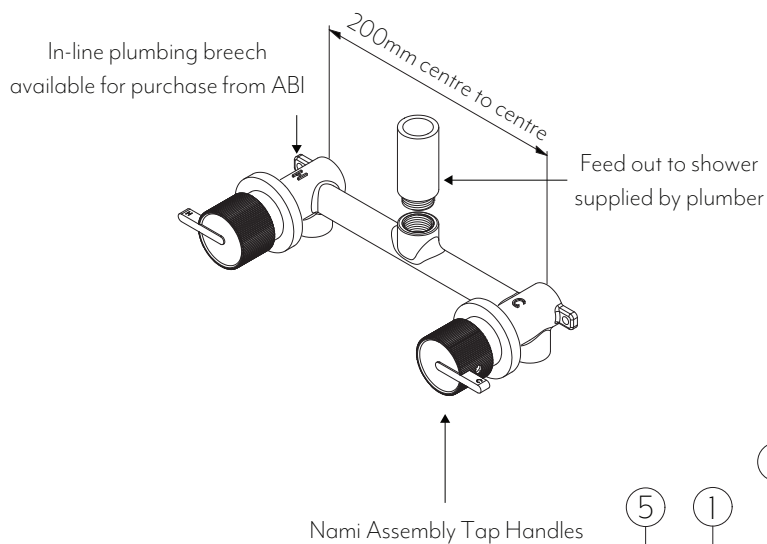

WHAT'S IN THE BOX


1. Handle x2
2. Backplate x2
3. Sleeve x2
4. Spindle x2
5. Grub screw x2
6. Allen key x1

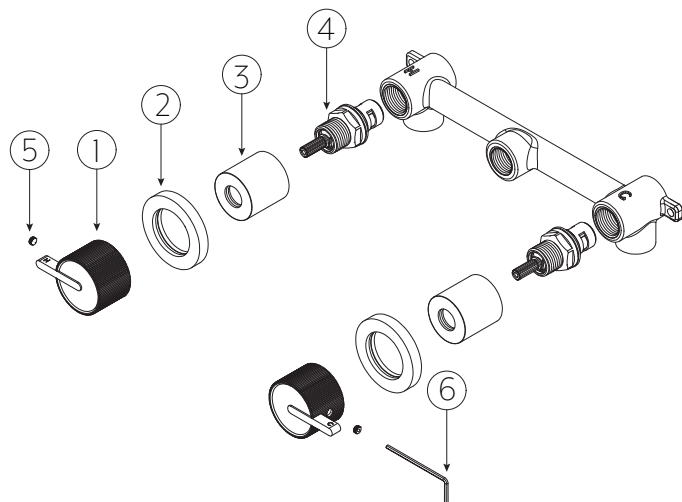

Regularly clean with mild liquid detergent or soap and water




DO NOT use cream cleaners or bleach. These substances are abrasive

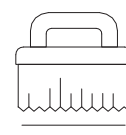


DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

SETBACK GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

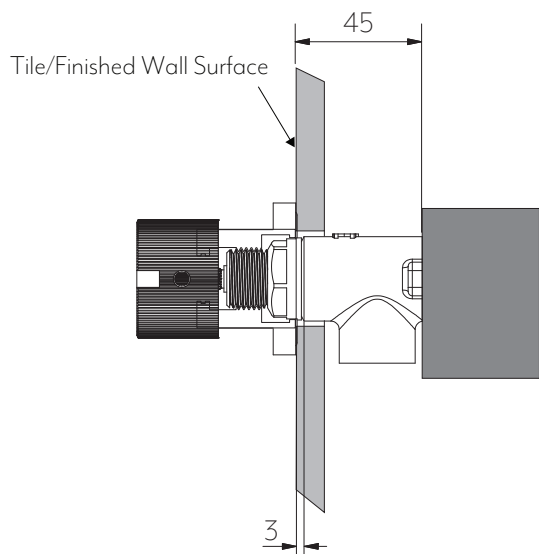


Minimum distance between nogging and finished wall surface is 45 mm when using the standard spindle provided or 3 mm from in-wall breach to finished wall surface.

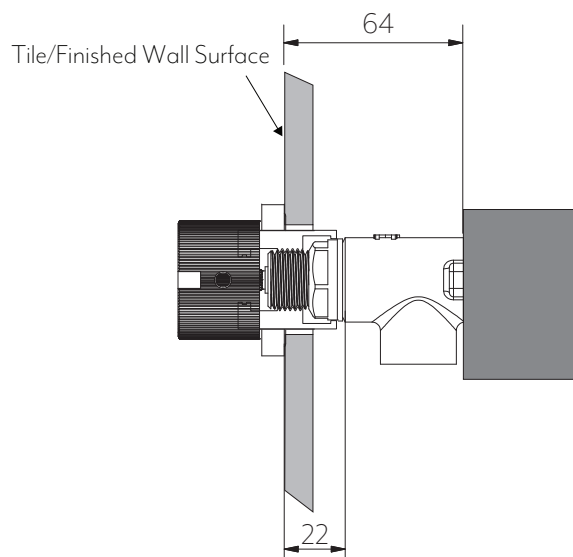

Maximum distance between nogging and finished wall surface is 64 mm when using the standard spindle provided or 22 mm from in-wall breach to finished wall surface.

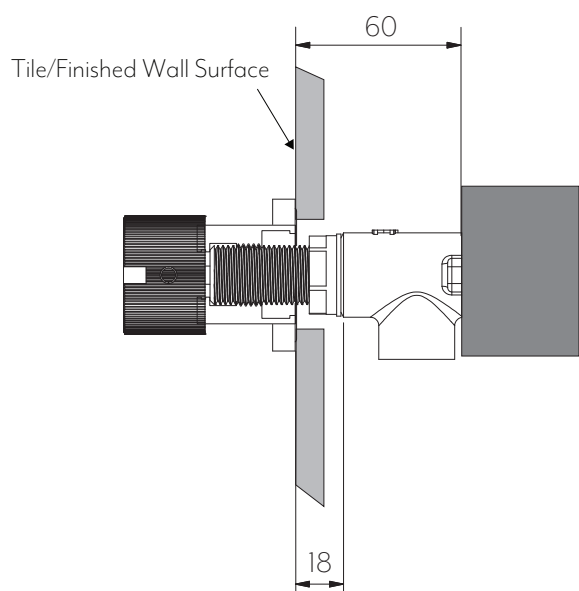

Minimum distance between nogging and finished wall surface is 60 mm when using the extended spindle (purchased separately) or 14 mm from in-wall breach to finished wall surface.

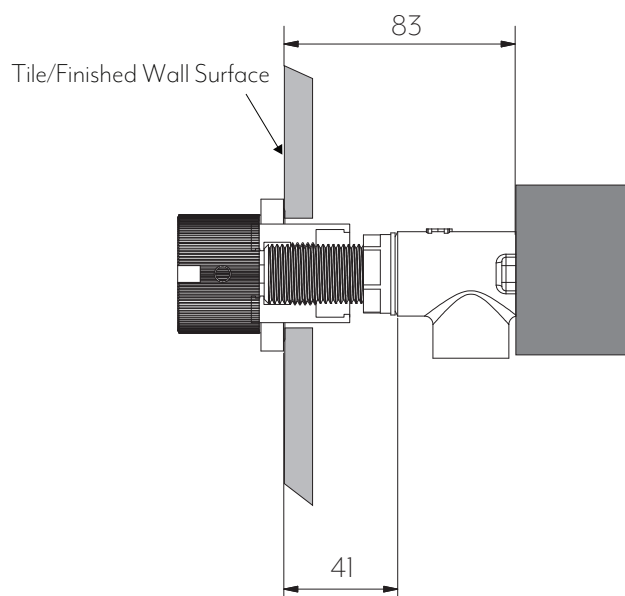


Maximum distance between nogging and finished wall surface is 83 mm when using the extended spindle (purchased separately) or 41 mm from in-wall breach to finished wall surface.




Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

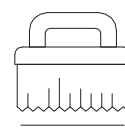

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

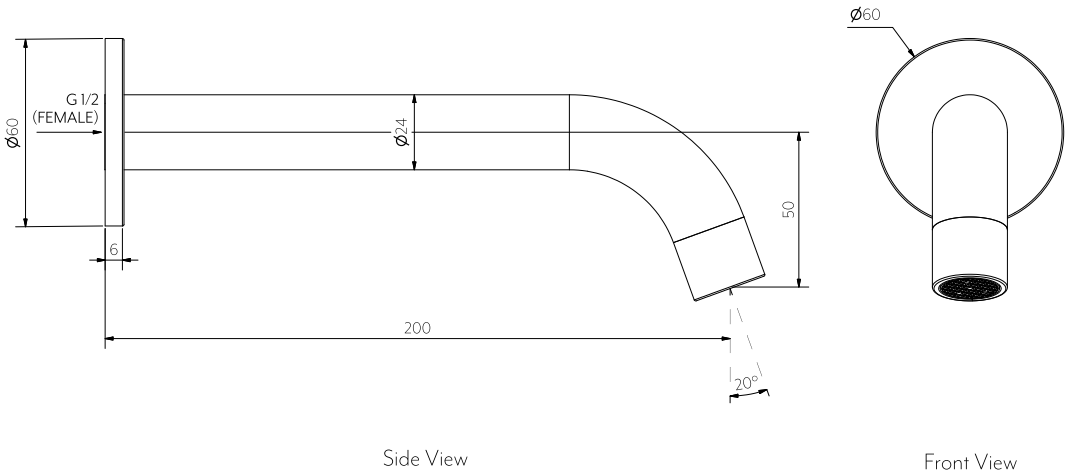

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE | WARRANTY

Domestic/Commercial | [Click here for warranty periods](#)

INSTALLATION

Installation is subject to the requirements of the applicable regulatory authority, the National Construction Code Volume Three (NCC Vol.3)- Plumbing Code of Australia, associated reference standards as applicable at the time and AS/NZS 3500

TEMPERATURE RATING

Maximum continuous working temperature 75°C
If the water temperature exceeds 75°C,an approved tempering valve must be fitted

PRESSURE RATING

Recommended minimum working pressure 150kPa
Recommended maximum working pressure 500kPa
Hot and cold water inlet pressure should be equal

SUITABLE HOT WATER UNITS

Storage tank: Yes
Continuous Flow: Yes
Gravity Feed: Not suitable

STANDARDS/LEAD FREE/REQUIREMENTS

WELS 5 star, 6L/min, T43739 - For water supply use only, test before concealing.

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide- there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply(Water Fittings) Regulations and Water Supply(Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.


ABI

- 1 Slide the back plate onto the spout, make sure that the rubber is firmly in place to protect the spout and stop the back plate from moving around.

- 2 Apply teflon thread tape to the breech point, twist the spout on and hand tighten. Remove aerator from the spout and flush. Reinstall aerator. Test and commission.

Note: Please tighten aerator so that it cannot be removed by hand.

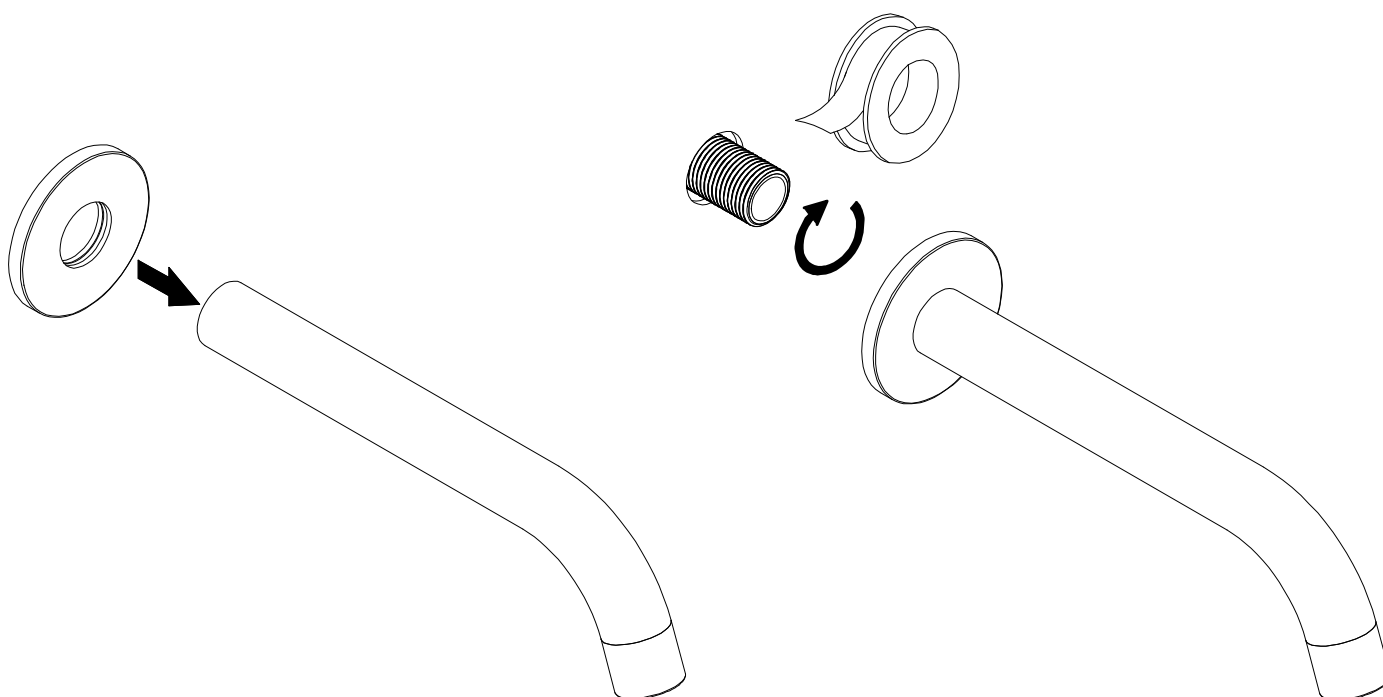

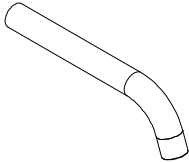
IN THE BOX	
	
1 x Back plate	1 x Spout



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

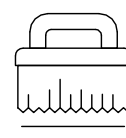

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material