




Top View

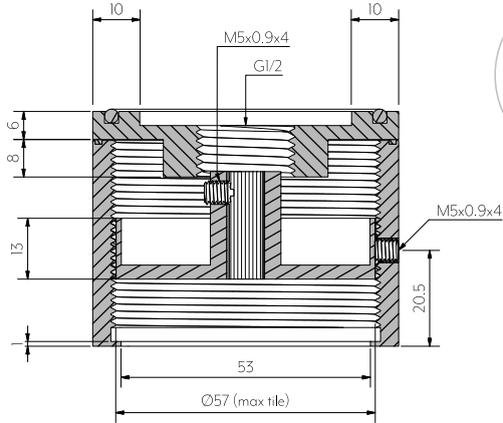

A-A

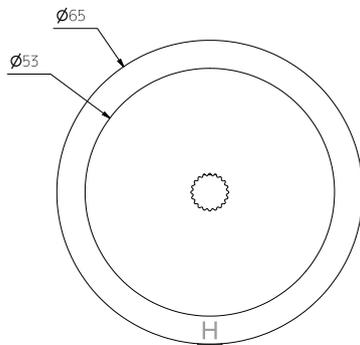

Front View

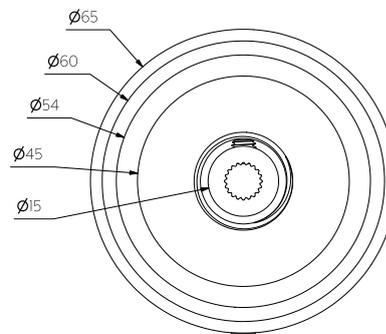

Back View

**Note:** Dimensions are nominal measurements only

## SPECIFICATIONS

### RECOMMENDED USE

Domestic

### MATERIAL

Solid Brass

### TEMPERATURE RATING

Maximum continuous working temperature 75°C  
If the water temperature exceeds 75°C, an approved tempering valve must be fitted

### PRESSURE RATING

Recommended minimum working pressure 150kPa  
Recommended maximum working pressure 500kPa  
Hot and cold water inlet pressure should be equal

### SUITABLE HOT WATER UNITS

Storage tank: Yes  
Continuous Flow: Yes  
Gravity Feed: Not suitable


# INSTALLATION GUIDE




**Note:** This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

**IMPORTANT: Spindle set backs are critical, refer to following pages for more details**


1 Screw backplate onto spindle & tighten firmly.

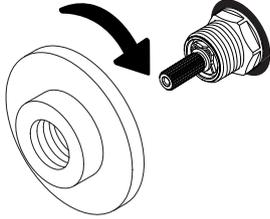


2 Mount spindle attachment to spindle. **\*IMPORTANT:** Ensure spindles are in the off position, turn clockwise to turn off cold and anti-clockwise for hot

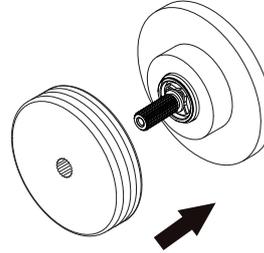


3 Place cut tile on face of the spindle attachment, push both back until it is aligned with the inner face of the handle (43mm).

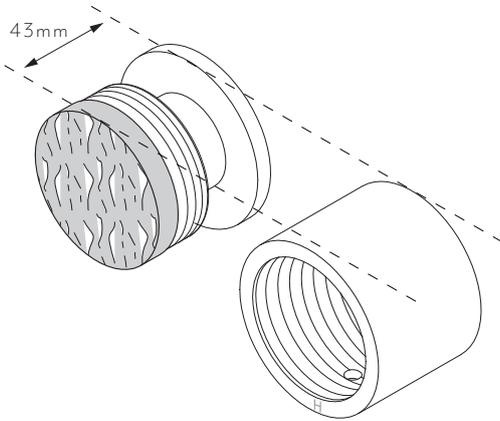


4 1. Remove tile from spindle attachment.  
2. Fix spindle attachment into position by inserting and tightening M5 grub screw using the allen key provided.

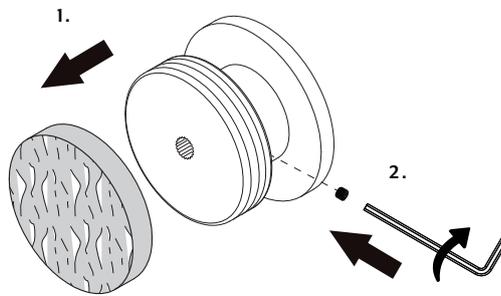

5 Put a small amount of silicone on the front perimeter of the tile and push into handle.

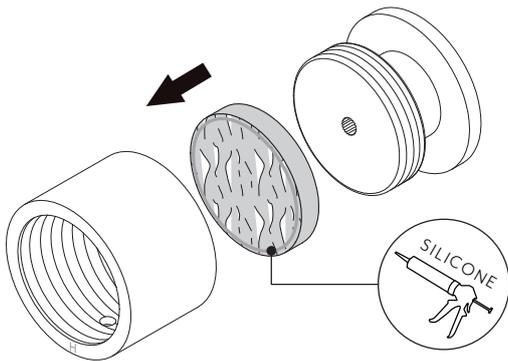

6 1. Screw handle onto the spindle attachment.  
2. Fix handle into position by inserting and tightening the grub screw using allen key.

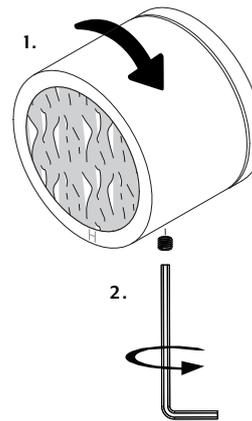

## How to orientate H/C symbol.

At step 6 note where the symbol is located when the handle is in the off position. Mark with a pencil the position it needs to be. Return to step 2 and rotate the base plate by the referenced amount.

IN THE BOX						
	Handle x2	Backplate x2	Spindle Attachment x2	Diamond Hole Saw x1	5mm Allen key x1	M5 Grub Screw x4



Regularly clean with mild liquid detergent or soap and water




DO NOT use cream cleaners or bleach. These substances are abrasive



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

## Set Back Range for tile thickness

Note: Thicker tiles have decreased range

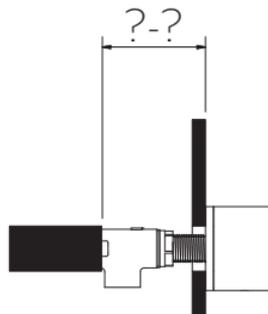

Tile Thickness	Standard Spindle	Extended Spindle
<b>5mm TILE</b>	52-62	69-80
<b>6mm TILE</b>	52-62	70-81
<b>7mm TILE</b>	52-62	71-82
<b>8mm TILE</b>	52-62	72-82
<b>9mm TILE</b>	53-62	73-82
<b>10mm TILE</b>	54-62	74-82
<b>11mm TILE</b>	55-62	75-82
<b>12mm TILE</b>	56-62	76-82
<b>13mm TILE</b>	57-62	77-82
<b>14mm TILE</b>	58-62	78-82
<b>15mm TILE</b>	59-62	79-82