




SOLA MINIMAL MIXER & SPOUT SET

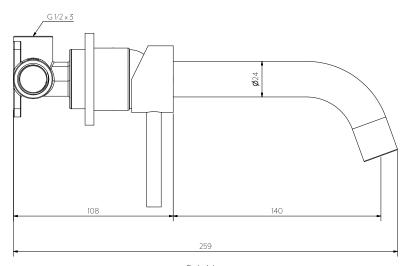

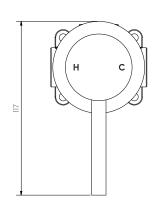





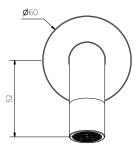

Front View

Note: Dimensions are nominal measurements only

SPECIFICATIONS


MATERIAL	316 Stainless Steel
TEMPERATURE RATING	Maximum continuous working temperature 75°C lf the water temperature exceeds 75°C, an approved tempering valve must be fitted
PRESSURE RATING	Recommended minimum working pressure 150kPa Recommended maximum working pressure 500kPa Hot and cold water inlet pressure should be equal
SUITABLE HOT WATER UNITS	Storage tank: Yes Continuous Flow: Yes Gravity Feed: Not suitable
PACKAGING	Box 1 of 3 In-Wall Minimal Mixer Body SS-316 (Rough-In) Box 2 of 3 Sola Minimal Handle Kit (Fit-Off) Box 3 of 3 Sola Wall Mounted Spout (Fit-Off)



IN-WALL MINIMAL MIXER BODY - 316 SS

Side View



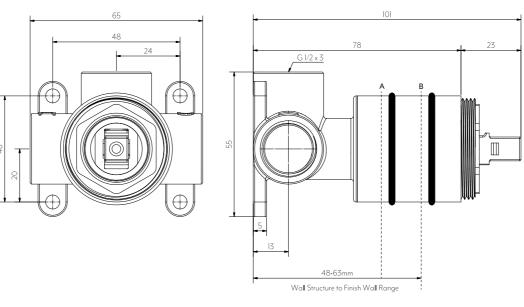

DISCLAIMER: To achieve infinity (interchangeable sleeves) finish wall must fall between point A and B. Please ensure waterproofing is set back from finish wall and does not obstruct sleeves.

Note: Dimensions are nominal measurements only

Front View

SPECIFICATIONS	
RECOMMENDED USE	Domestic
MATERIAL	316 Stainless Steel
PRESSURE RATING	Recommended minimum working pressure 150kPa Recommended maximum working pressure 500kPa Hot and cold water inlet pressure should be equal
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C, an approved tempering valve must be fitted
STANDARDS	AS/NZS 3718:2005, WM-022852

INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.



ROUGH IN

See Specification image for finish wall setback



Fasten screws to secure the wall mixer into wall structure.



Attach water supply and water outlet. TEST AND CHECK FOR LEAKS.




Sheeting and waterproof layer can now be applied.

*Ensure cutout in finish wall is 47mm diameter.


DO NOT WATERPROOF SLEEVE.


Please ensure that the hole is big enough to allow for the sleeve to slide on at fit-off stage.

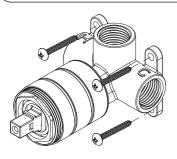

Note for Aliro Handle Kit Install:

Ensure setback is compliant with AS1428.1:2021

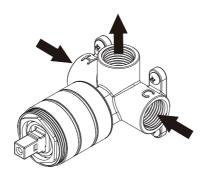


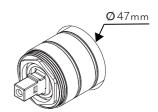

Note: For handle kit installation guide please refer to their respective install guides. This can be found on our website.

IN THE BOX (IN-WALL)

- 1. Body
- 2. Fixing Screws
- 3. Cartridge
- 4. Locking nut

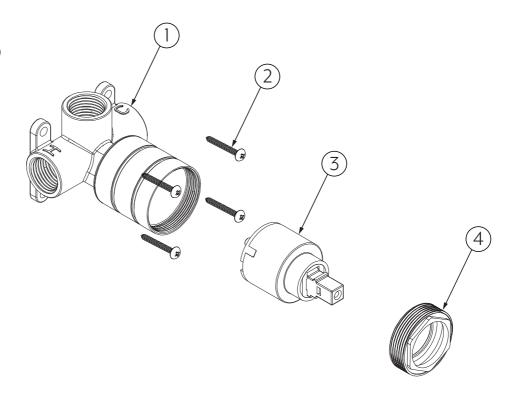



Regularly clean with mild liquid detergent or soap and water




DO NOT use cream cleaners or bleach.
These substances are abrasive




DO NOT use cleaning pads with abrasive surfaces as this may scratch the material



SOLA - MINIMAL HANDLE KIT

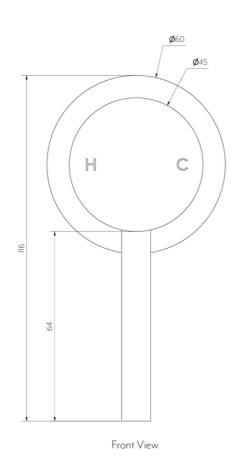

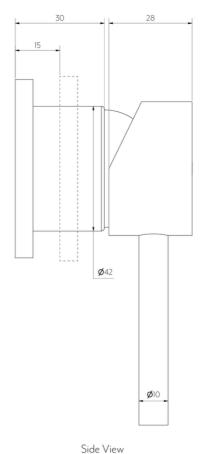

Note: Dimensions are nominal measurements only

SPECIFICATIONS	
RECOMMENDED USE	Domestic
MATERIAL	316 Stainless Steel

INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.




Note: See 316 Stainless Steel In Wall Mixer Body installation guide for in-wall set out.


 \bigcirc

Choose sleeve based on how far your in-wall body protrudes from finish wall and slide on.




Slide back plate over sleeve ensuring not to scratch. Screw dome on and fit handle onto cartridge.

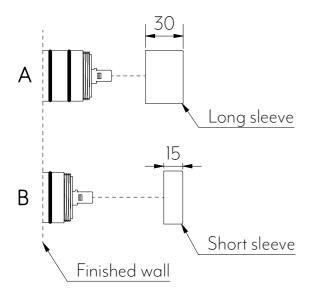


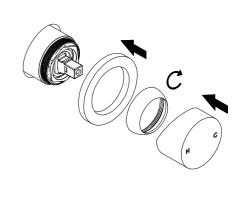

Tighten grub screw with provided Allen Key.
Screw stem into handle.
Test and commission.

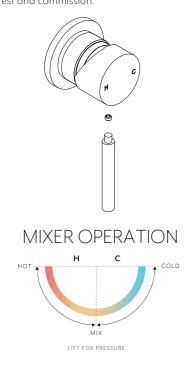

WHAT'S IN THE BOX

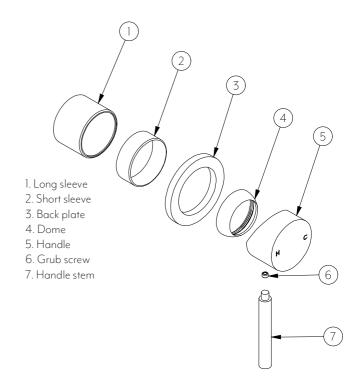



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive




DO NOT use cleaning pads with abrasive surfaces as this may scratch the material



SOLA WALL-MOUNTED SPOUT



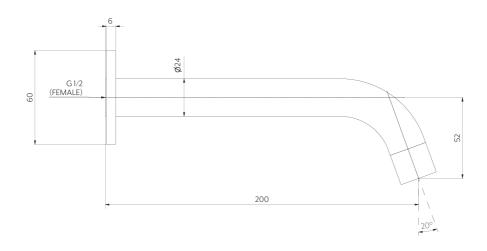

SIDE VIEW

Note: Dimensions are nominal measurements only

SPECIFICATIONS	
RECOMMENDED USE	Domestic
MATERIAL	316 Stainless Steel
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C,an approved tempering valve must be fitted
PRESSURE RATING	Recommended minimum working pressure 150kPa Recommended maximum working pressure 500kPa Hot and cold water inlet pressure should be equal
SUITABLE HOT WATER UNITS	Storage tank: Yes Continuous Flow: Yes Gravity Feed: Not suitable
STANDARDS	WELS 5 Star, 5.5L/min, T39796

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide- there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply(Water Fittings) Regulations and Water Supply(Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.




Slide the back plate onto the spout, make sure that the rubber is firmly in place to protect the spout and stop the back plate from moving around.

Apply teflon thread tape to the breech point, twist the spout on and hand tighten.
Remove aerator from the spout and flush. Reinstall aerator. Test and commission.

Note: Please tighten aerator so that it cannot be removed by hand.

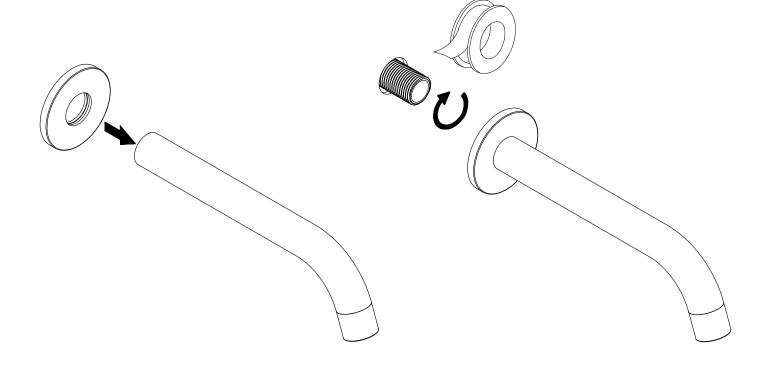

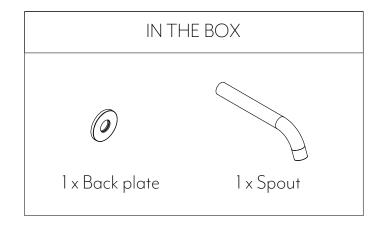



Regularly clean with mild

liquid detergent or soap

and water

