 


CROSS ASSEMBLY BENCH-MOUNTED SET

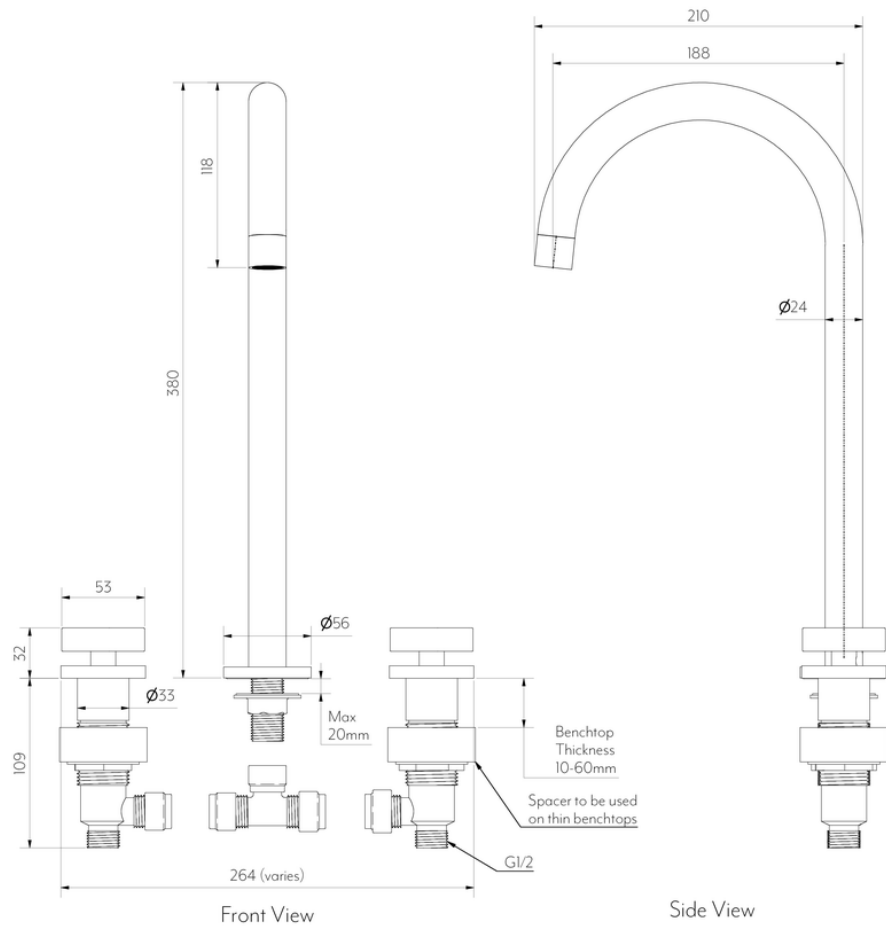

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

Domestic

MATERIAL

Solid Brass

TEMPERATURE RATING

Maximum continuous working temperature 75°C
If the water temperature exceeds 75°C, an approved tempering valve must be fitted

PRESSURE RATING

Recommended minimum working pressure 0.2 Bar
Recommended maximum working pressure 5 Bar
Hot and cold water inlet pressure should be equal

SUITABLE HOT WATER UNITS

Storage tank: Yes
Continuous Flow: Yes
Gravity Feed: Suitable

BOXES IN SET

 
4 boxes

INSTALLATION GUIDE



This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. AU/NZ: For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. UK: For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. Other: For installations outside these countries, this product must be installed in compliance with the standards in your respective country.




- 1 Use a 35mm hole saw to drill the holes out.

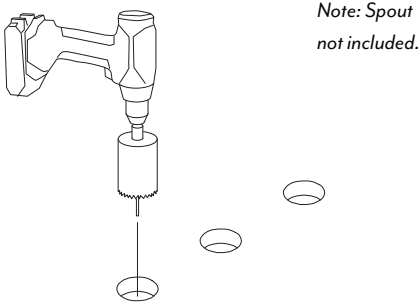

  - 2 1. Screw spindle into breech.
2. Screw brass nut and plastic washer onto breech.

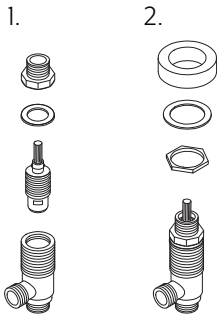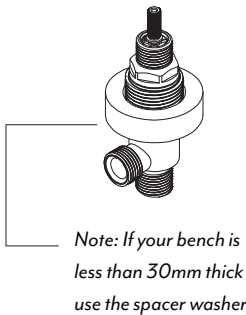


 - 3 Screw the base plates to the in-bench bodies and tighten the nuts underneath. Screw the compression tee fitting to the spout.

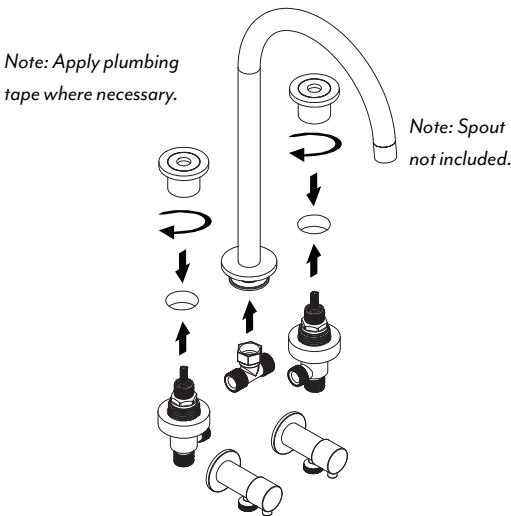

- 4 Fit the handles. Use flexi hoses to connect the bodies to the water source (**flexi hoses not included**).

 Tip: If your handles are slightly off parallel you can return to step 2.1 and adjust the spindle's rotation fractionally.

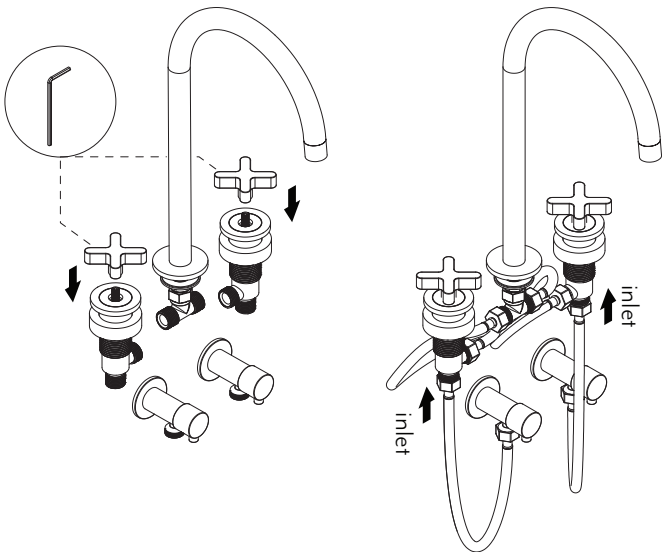

IN THE BOX - (In-bench)		IN THE BOX - (Handle kit)		IN THE BOX - (Spindle kit)	
	2 x in-bench breech		2 x handle		2 x spindle (1x R-hand turn, 1x L-hand turn)
	2 x washer		2 x base plate		2 x O-ring
	2 x large nut		2 x plastic spacer		2 x locking nut
	1 x compression tee fitting				
	2 x small nut				
	2 x olive				



 
Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.

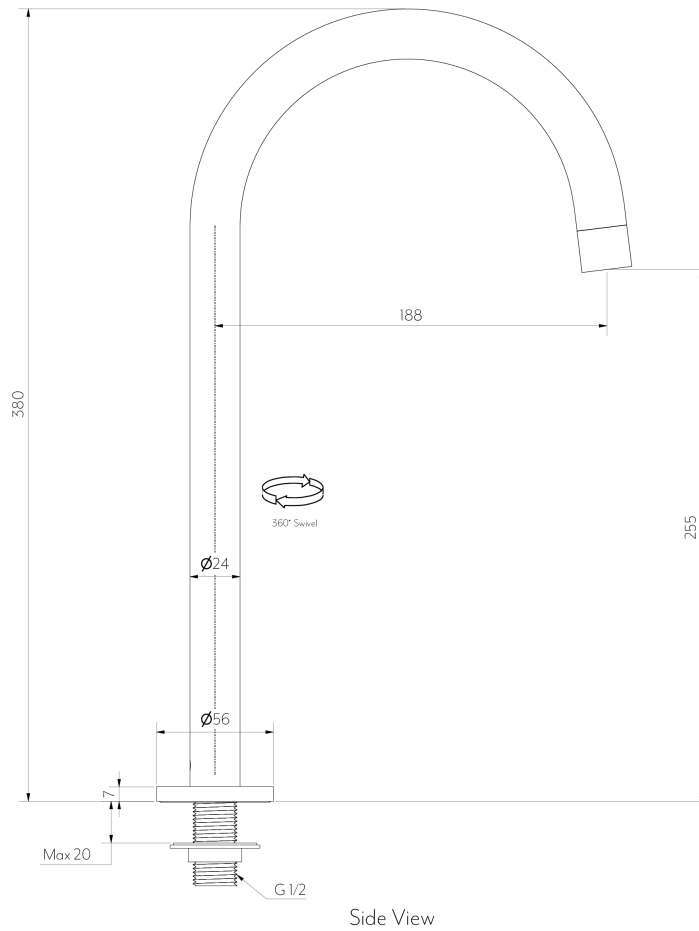

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

Domestic

MATERIAL

Solid Brass

TEMPERATURE RATING

Maximum continuous working temperature 75°C
If the water temperature exceeds 75°C, an approved tempering valve must be fitted

PRESSURE RATING

Recommended minimum working pressure 0.2Bar
Recommended maximum working pressure 5 Bar
Hot and cold water inlet pressure should be equal

STANDARDS

Flow Rate(6.0 L/min)

INSTALLATION GUIDE

 
Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.



- 1 Mark out desired location of spout.


Cut hole using a 25mm hole saw.

Note: If cutting a stone benchtop it will need to be cut in a controlled environment by a licensed tradesperson as per OH&S regulations.

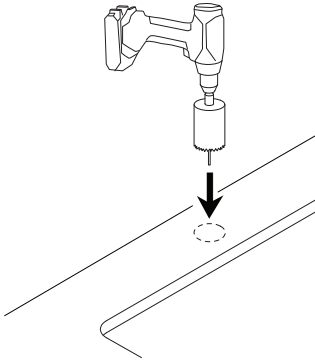


- 2 Remove the spout by pushing in the plastic clip with an allen key or screwdriver.



 
Caution: Be careful not to scratch the spout!

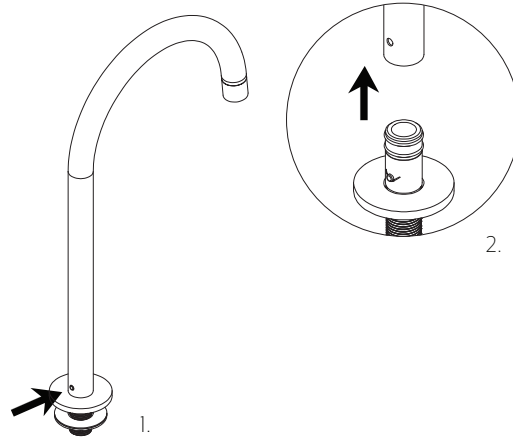

 - 3 Fix base connection to benchtop with brass nut ensuring the rubber washer and spacer is fitted to the underside of the benchtop. Use pliers to hold the base connection while nut is tightened.

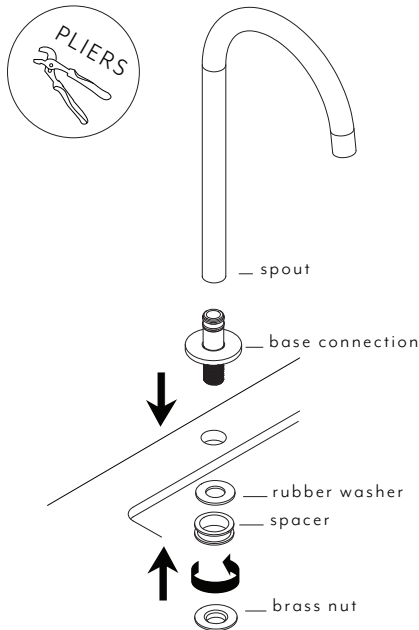

- 4 Connect pipework to inlet of spout.

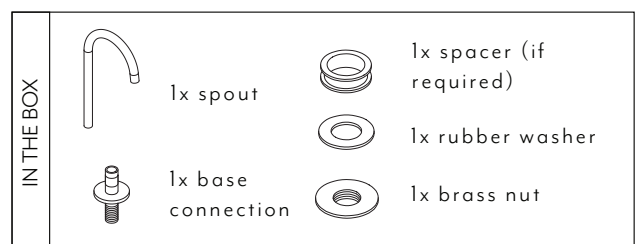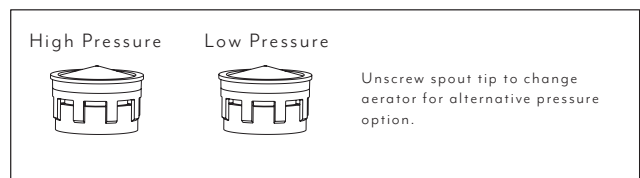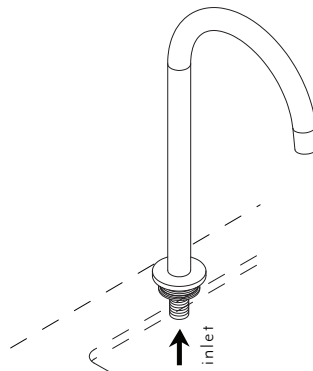   

Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.