 


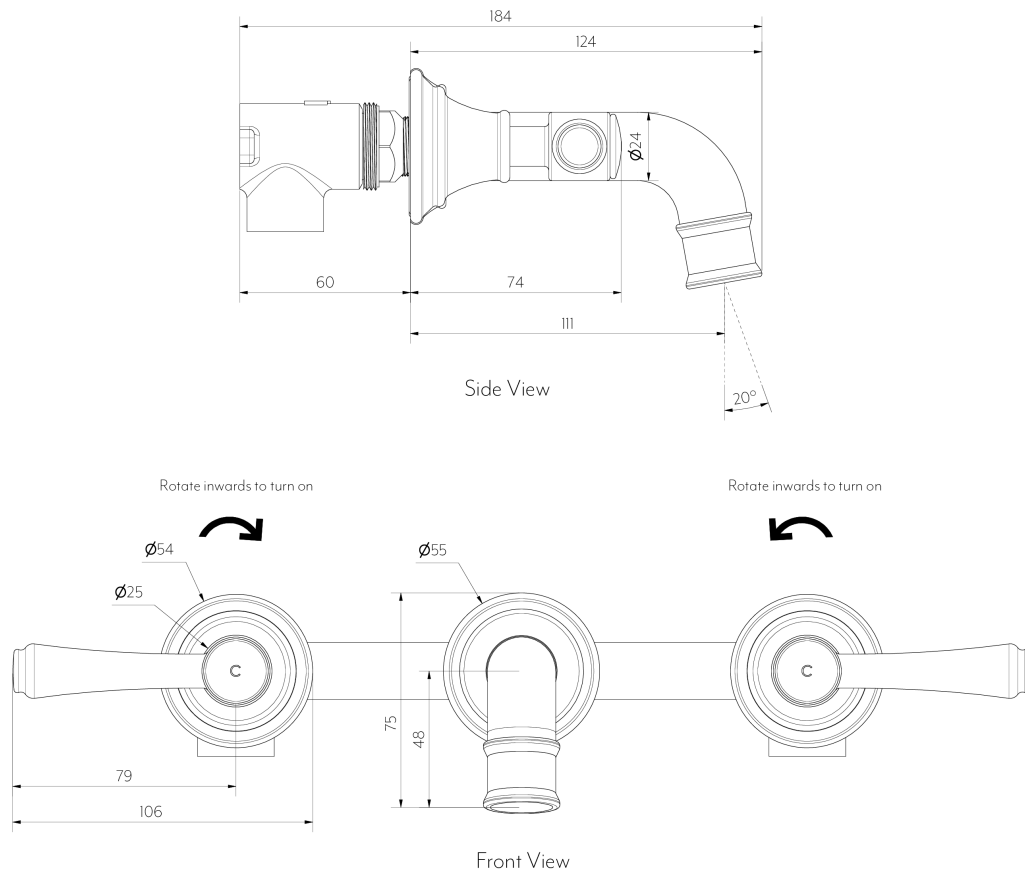

**Note:** Dimensions are nominal measurements only

## SPECIFICATIONS

### MATERIAL

Solid Brass

### TEMPERATURE RATING

 
Maximum continuous working temperature 75°C  
If the water temperature exceeds 75°C, an approved tempering valve must be fitted

### PRESSURE RATING

Recommended minimum working pressure 0.5 Bar  
Recommended maximum working pressure 5 Bar  
Hot and cold water inlet pressure should be equal

### PACKAGING

Box 1 of 4 In-Wall Basin/Bath Breech (Rough-In)  
Box 2 of 4 In-Wall Assembly Taps - Spindle Standard Set (H&C)  
Box 3 of 4 Kingsley Assembly Handle Kit (Fit-Off)  
Box 4 of 4 Kingsley Mini Wall-Mounted Spout (Fit-Off)

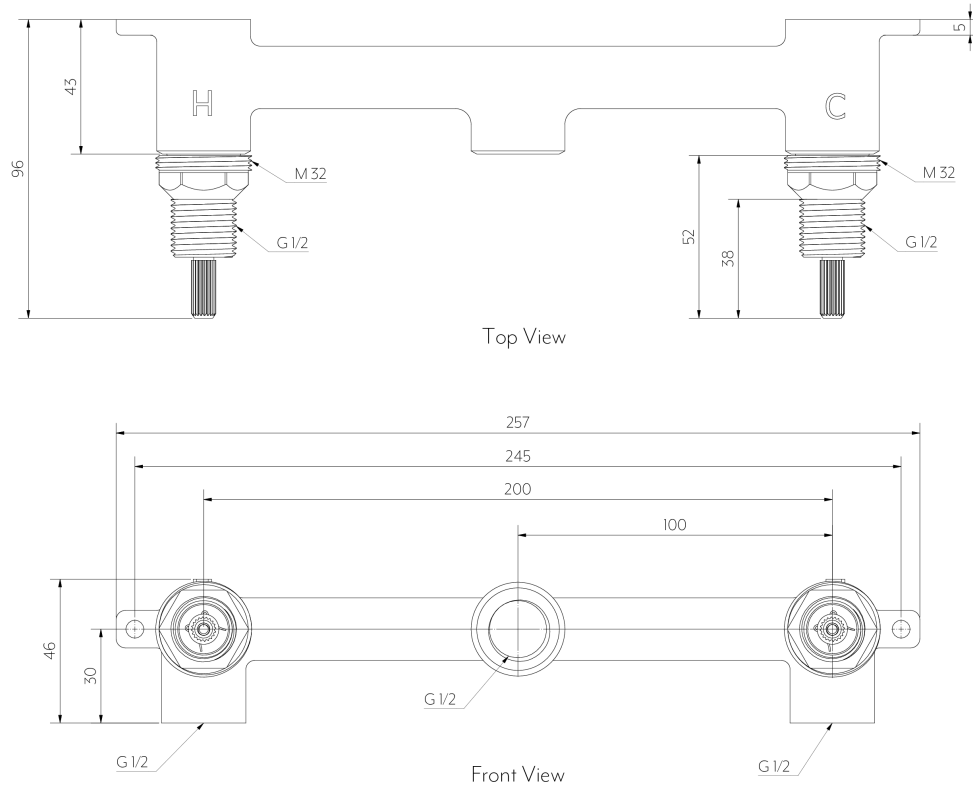

**Note:** Dimensions are nominal measurements only

## SPECIFICATIONS

### RECOMMENDED USE

Domestic

### MATERIAL

Solid Brass

### TEMPERATURE RATING

Maximum continuous working temperature 75°C  
If the water temperature exceeds 75°C, an approved tempering valve must be fitted

### PRESSURE RATING

 
Recommended minimum working pressure 0.5 Bar  
Recommended maximum working pressure 5 Bar  
Hot and cold water inlet pressure should be equal

# INSTALLATION GUIDE



**Note:** This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

ABI  
INTERIORS

- 1 Screw breech into wall structure.  
Ensuring that the breech is level.

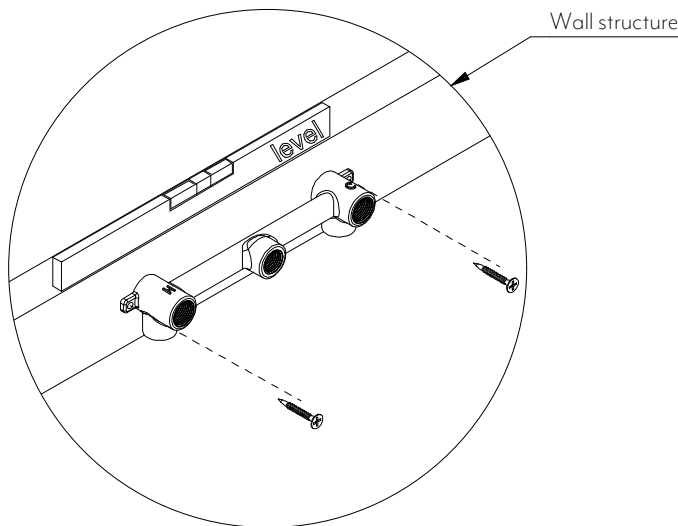

  
- 2 Connect Inlet and outlet pipework.  
TEST AND COMMISSION.  
ENSURE THERE ARE NO LEAKS.

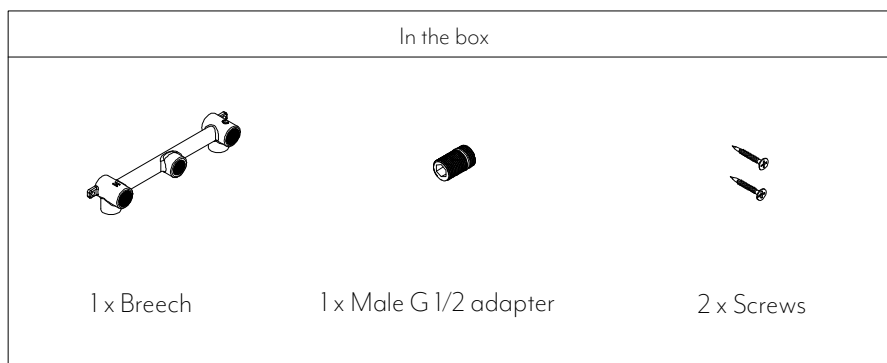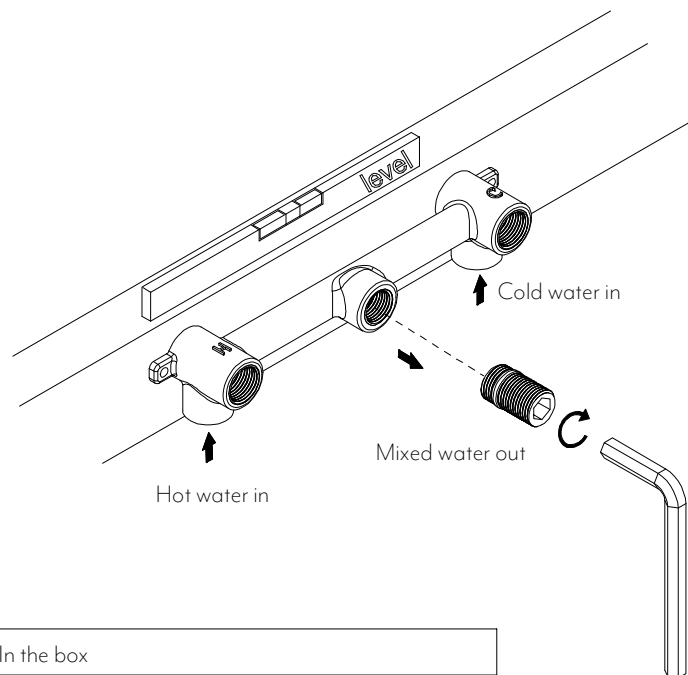


Regularly clean with mild liquid detergent or soap and water



 DO NOT use cream cleaners or bleach. These substances are abrasive

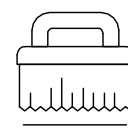

 DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

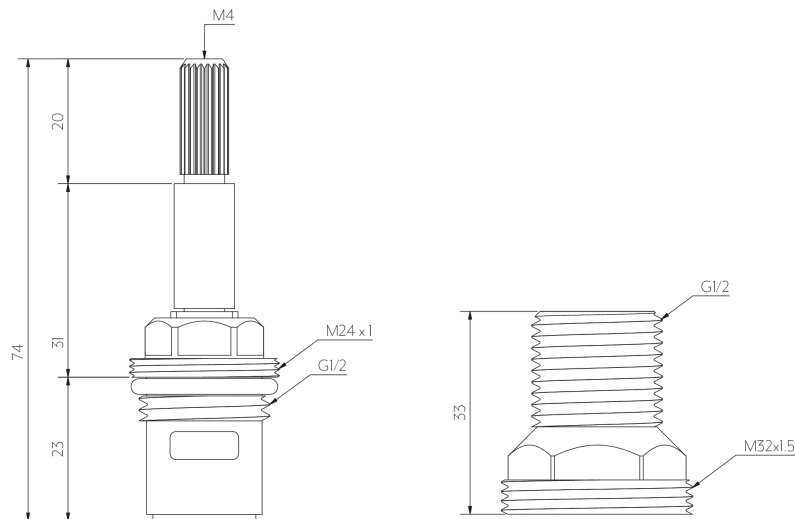

**Note:** Dimensions are nominal measurements only

SPECIFICATIONS

|                    |                                                                                                                                                 |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| RECOMMENDED USE    | Domestic                                                                                                                                        |
| MATERIAL           | Solid Brass                                                                                                                                     |
| TEMPERATURE RATING | Maximum continuous working temperature 75°C<br>If the water temperature exceeds 75°C,an approved tempering valve must be fitted                 |
| PRESSURE RATING    | Recommended minimum working pressure 0.5 Bar<br>Recommended maximum working pressure 5 Bar<br>Hot and cold water inlet pressure should be equal |
| FUNCTION           | 1/4 Turn (clockwise & anti-clockwise spindle in set)                                                                                            |

# INSTALLATION GUIDE

This product must be installed by a licensed plumber.

This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with the standards in your respective country and must be adhered to by your licensed tradesperson.



 
 
- 1 **New Build**  
Install breach in desired position

## Retrofitting Existing

Remove existing tapware & reseal body seats until shiny & smooth.  
Remove locking nut and screw spindle into breach, hand tighten until rear of spindle meets the body seat. **Be sure not to overtighten.**  
If necessary apply more pressure lightly with a spanner.


\*At this point it is recommended to test the orientation of your chosen handles. Micro adjustments can be made to spindle to ensure correct handle orientation before installing the locking nut.

- 2 Screw locking nut onto spindle, tightening with a spanner.  
**TEST AND COMMISSION.**  
**ENSURE THERE ARE NO LEAKS.**

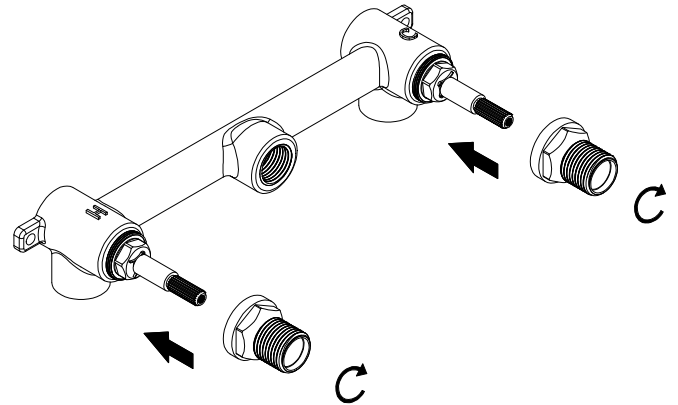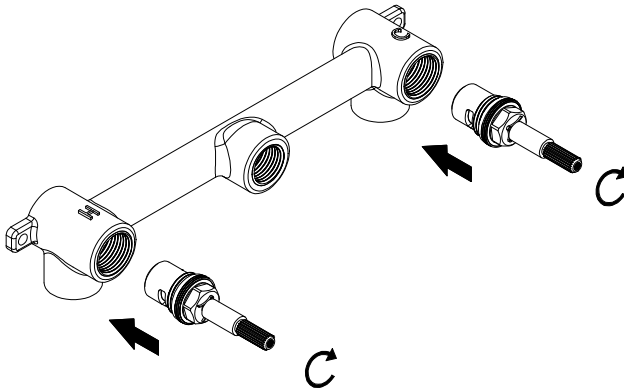

- 3 Continue with the installation of the handles.  
See installation guide specific to your chosen handle design.

## IN THE BOX

 

1x Hot spindle - Red  
(turn clockwise on)



1x Cold spindle - Blue  
(anticlockwise turn on)



 
2x Locking Nut




Regularly clean with mild liquid detergent or soap and water




DO NOT use cream cleaners or bleach. These substances are abrasive

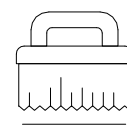

 DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

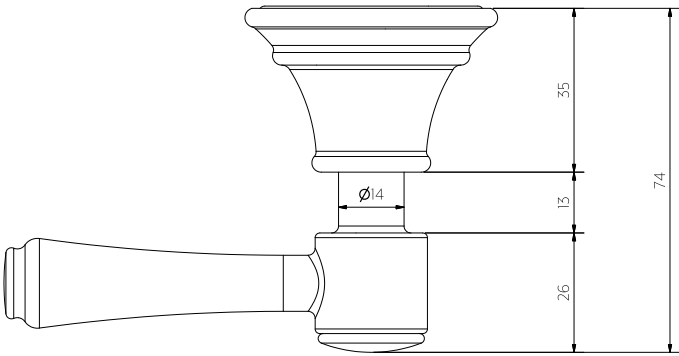

Top View

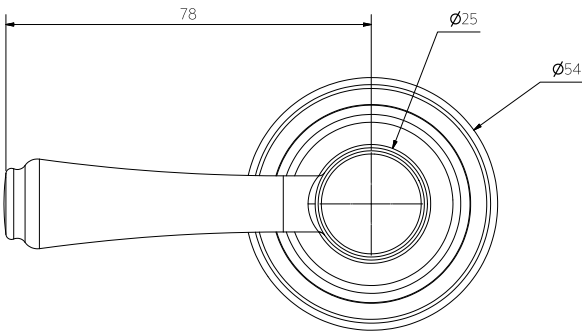 

Front View

**Note:** Dimensions are nominal measurements only

## SPECIFICATIONS

### RECOMMENDED USE

Domestic

### MATERIAL

 
Solid Brass

# INSTALLATION GUIDE

**Note:** This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.


ABI  
INTERIORS

- ① Install the back plate onto the locking nut (or bonnet extender if required) and hand tighten.

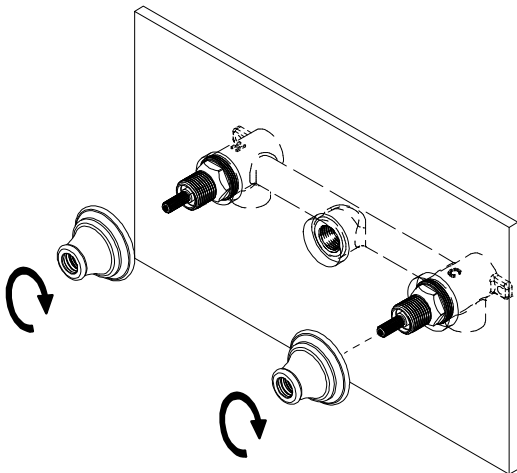


- ② Install the handle onto the spindle and fix in place with screw and washer.

 A 10mm spacer is provided to achieve optimal handle spacing from the back plate depending on breach depth. To use, place spacers into the rear of the handles before fixing.

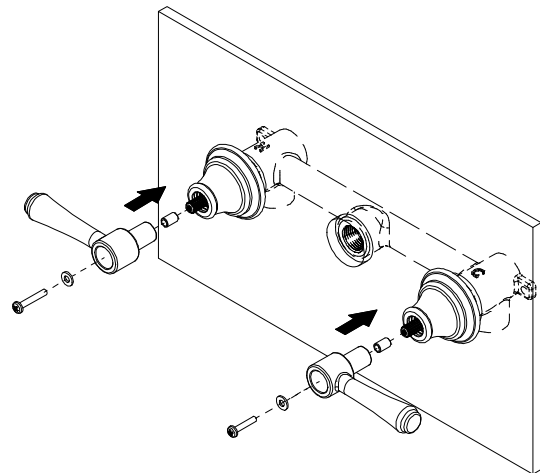


 - ③ Insert handle cap into front of handle.

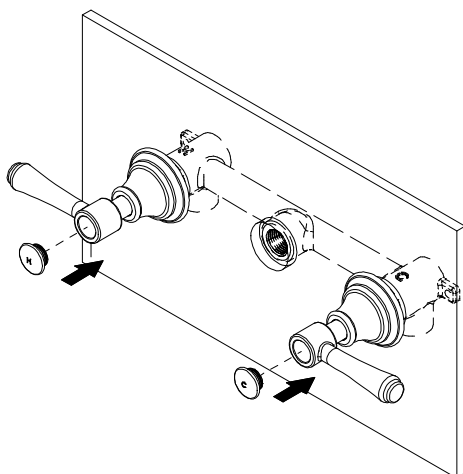

- ④ This product may require a bonnet extender (not included), used to cover additional breach depth. Please refer to the set back guide to check if is necessary.

 
Fix in place by screwing onto locking nut.

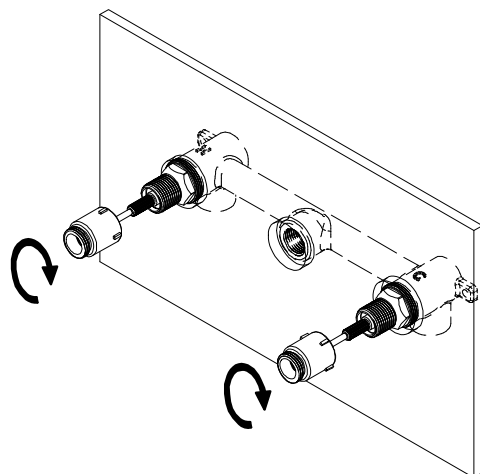


Regularly clean with mild liquid detergent or soap and water



 DO NOT use cream cleaners or bleach. These substances are abrasive

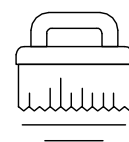

 DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

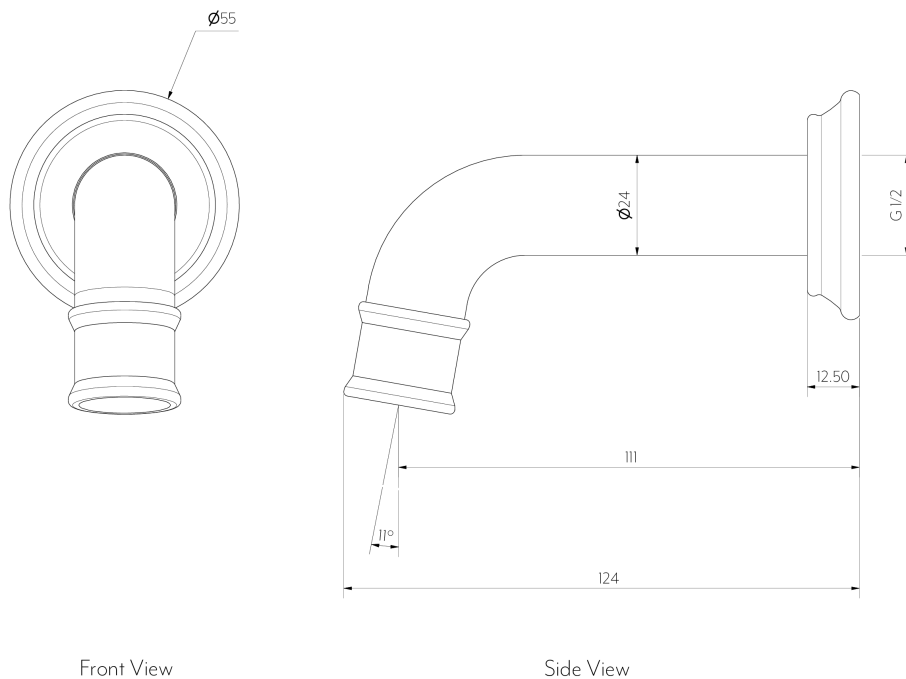

**Note:** Dimensions are nominal measurements only

## SPECIFICATIONS

 
|                    |                                                                                                                                                 |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| RECOMMENDED USE    | Domestic/ Commercial   <a href="#">Click here for warranty periods</a>                                                                          |
| MATERIAL           | Solid Brass                                                                                                                                     |
| TEMPERATURE RATING | Maximum continuous working temperature 75°C<br>If the water temperature exceeds 75°C,an approved tempering valve must be fitted                 |
| PRESSURE RATING    | Recommended minimum working pressure 0.5 Bar<br>Recommended maximum working pressure 5 Bar<br>Hot and cold water inlet pressure should be equal |

# INSTALLATION GUIDE

**Note:** This product must be installed by a licensed plumber. This is a general installation guide- there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply(Water Fittings) Regulations and Water Supply(Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.



# ABI

- 1 Slide the back plate onto the spout, make sure that the rubber is firmly in place to protect the spout and stop the back plate from moving around.

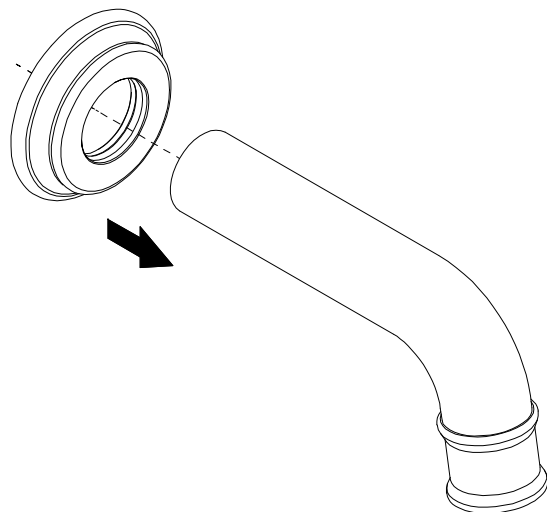

- 2 Apply teflon thread tape to the breech point, twist the spout on and hand tighten. Remove aerator from the spout and flush. Reinstall aerator. Test and commission.

  
**Note:** Please tighten aerator so that it cannot be removed by hand.

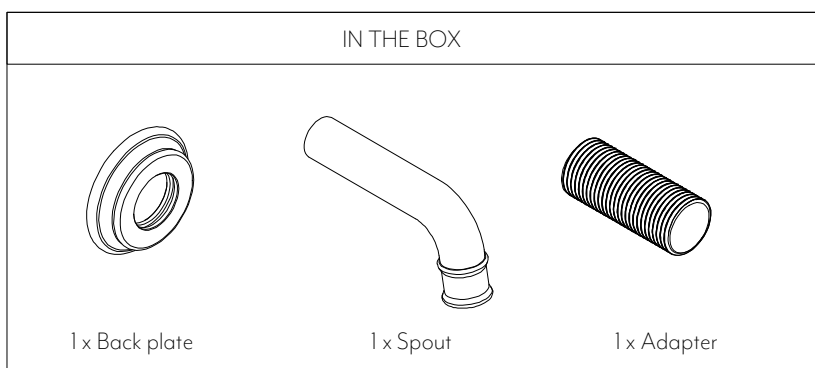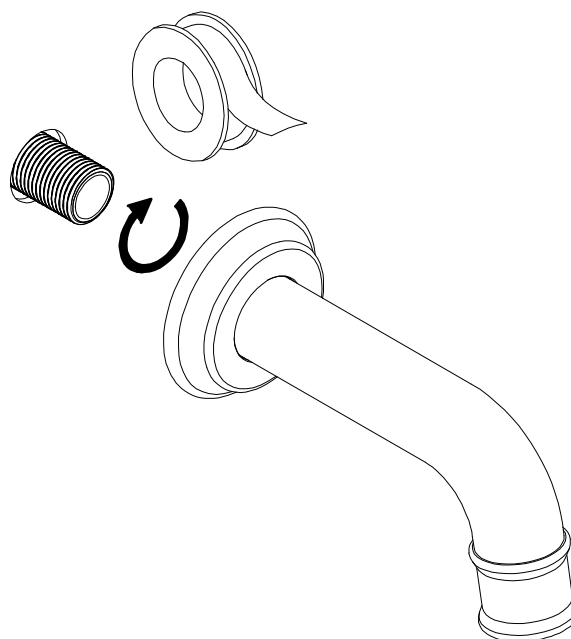

Regularly clean with mild liquid detergent or soap and water



 DO NOT use cream cleaners or bleach. These substances are abrasive

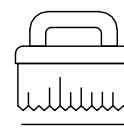


DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

# 1/2 INCH MALE ADAPTOR INSTALLATION GUIDE




 **Note:** This product must be installed by a licensed tradesperson.  
This is a general installation guide - there are many factors that are involved that can alter the installation method.


- ① Apply teflon tape to 1/2 inch male adaptor.

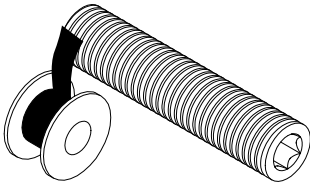

 - ② Fit 1/2 inch male adaptor to female BP and tighten with a 12 mm metric Allan key.

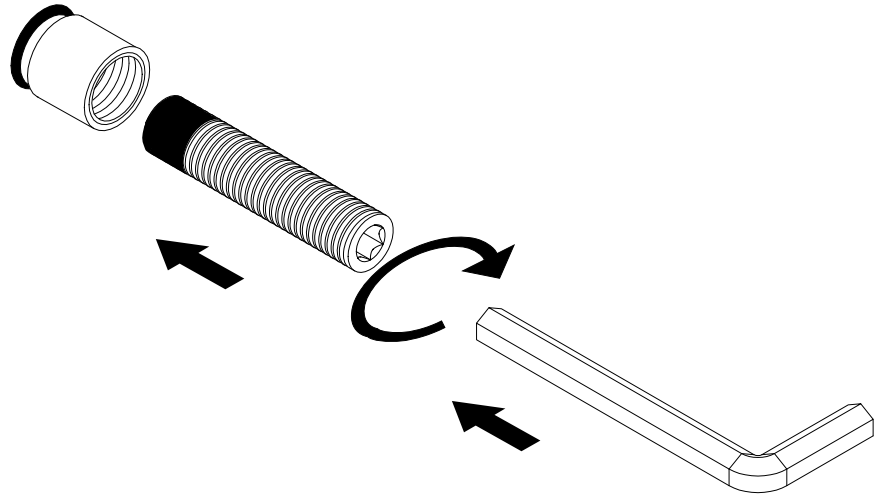


 - ③ Cut 1/2 inch male adaptor to suit wall thickness and product.

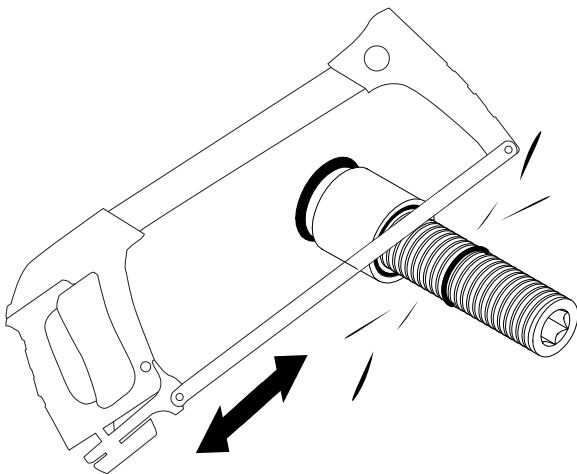


A **TMV** [Thermostatic Mixing Valve] is required in homes that do not have a TMV fitted, If the hot water coming out your tap is more than **50°C** you will need to adjust your TMV.

 1. We recommend placing your **TMV** directly after your hot water/ boiler unit. Consult with a **licensed plumber** to discuss the best position for your needs.

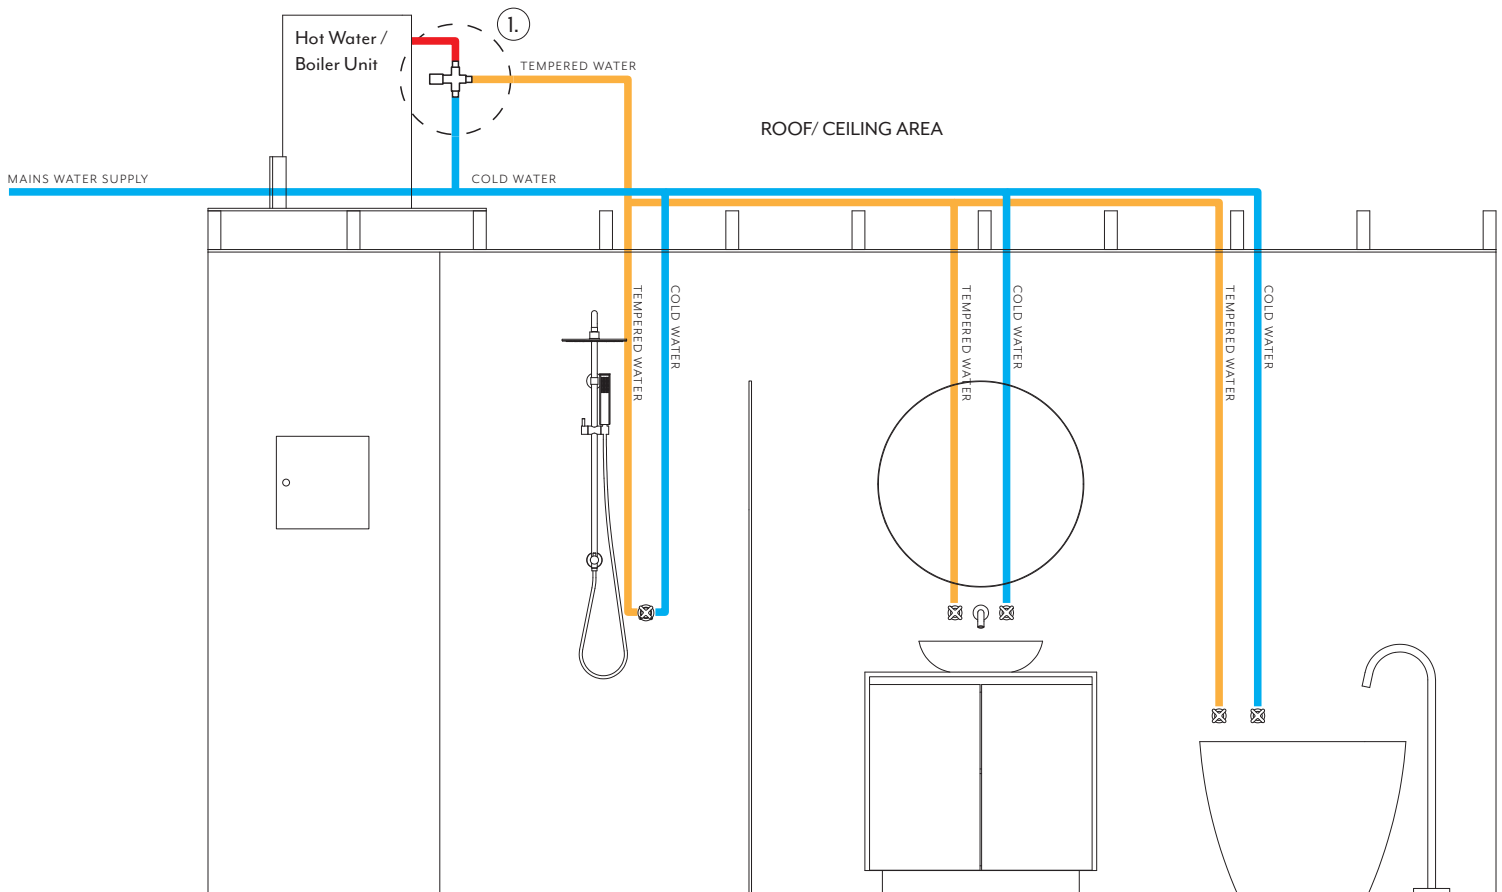

— TEMPERED WATER — COLD WATER — SCOLDING WATER

 1. Directly after your hot water unit
2. Inside a service panel
3. Inside a service panel behind removable mirror
4. Inside the bathroom vanity unit

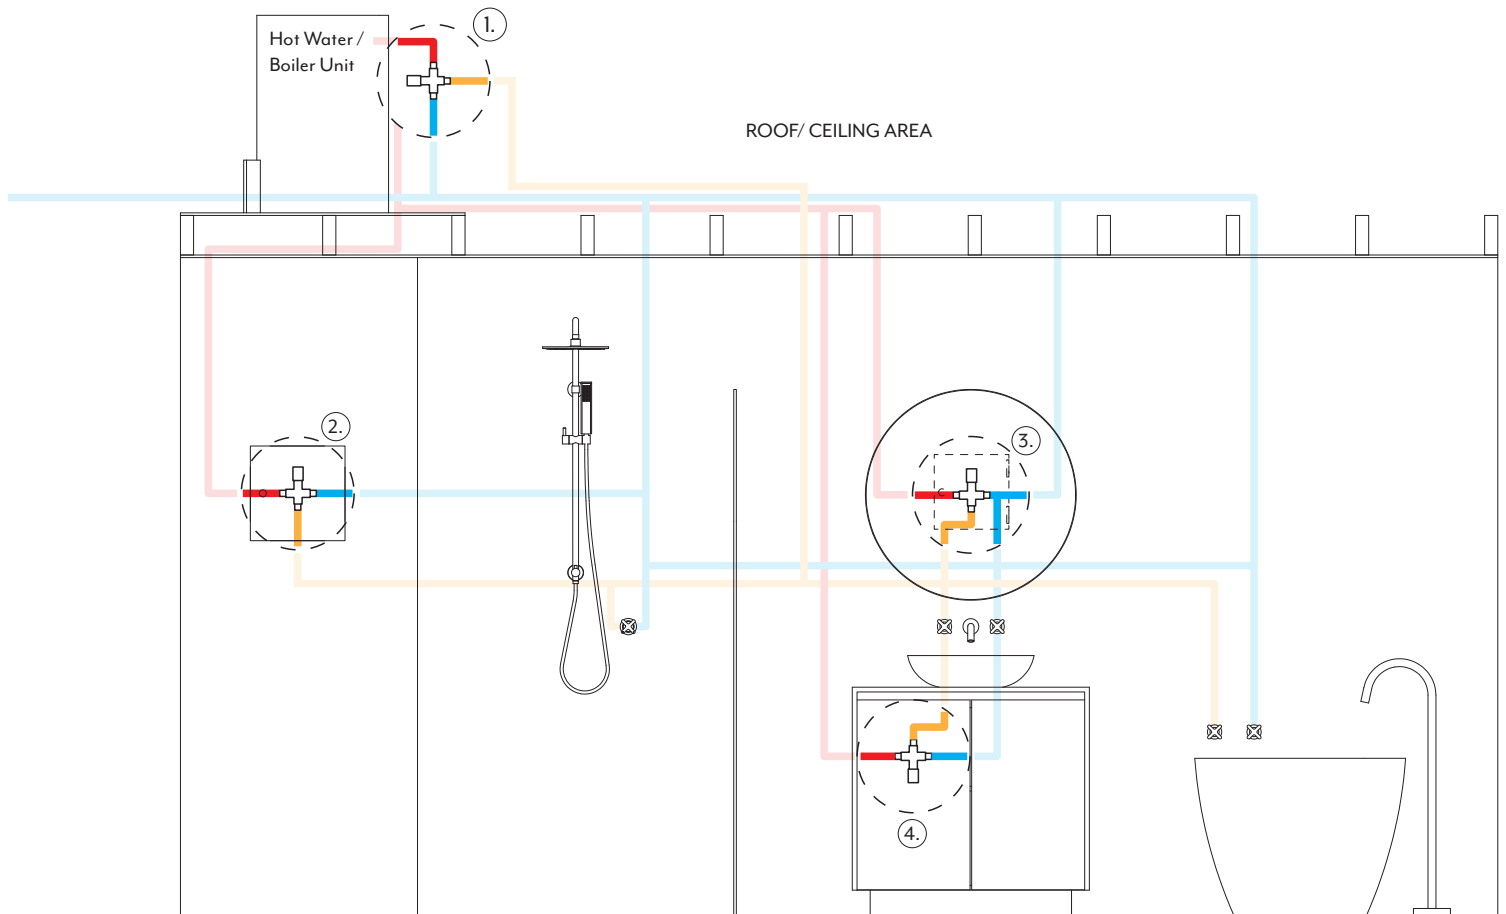

— TEMPERED WATER    
 — COLD WATER    
 — SCOLDING WATER