

ALIRO ACCESSIBLE GRAB RAIL 458MM



Top View



Front View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE


Domestic/Commercial

MATERIAL

316 Stainless Steel

MOUNTING HARDWARE INCLUDED

Yes, M10x75mm coach screws

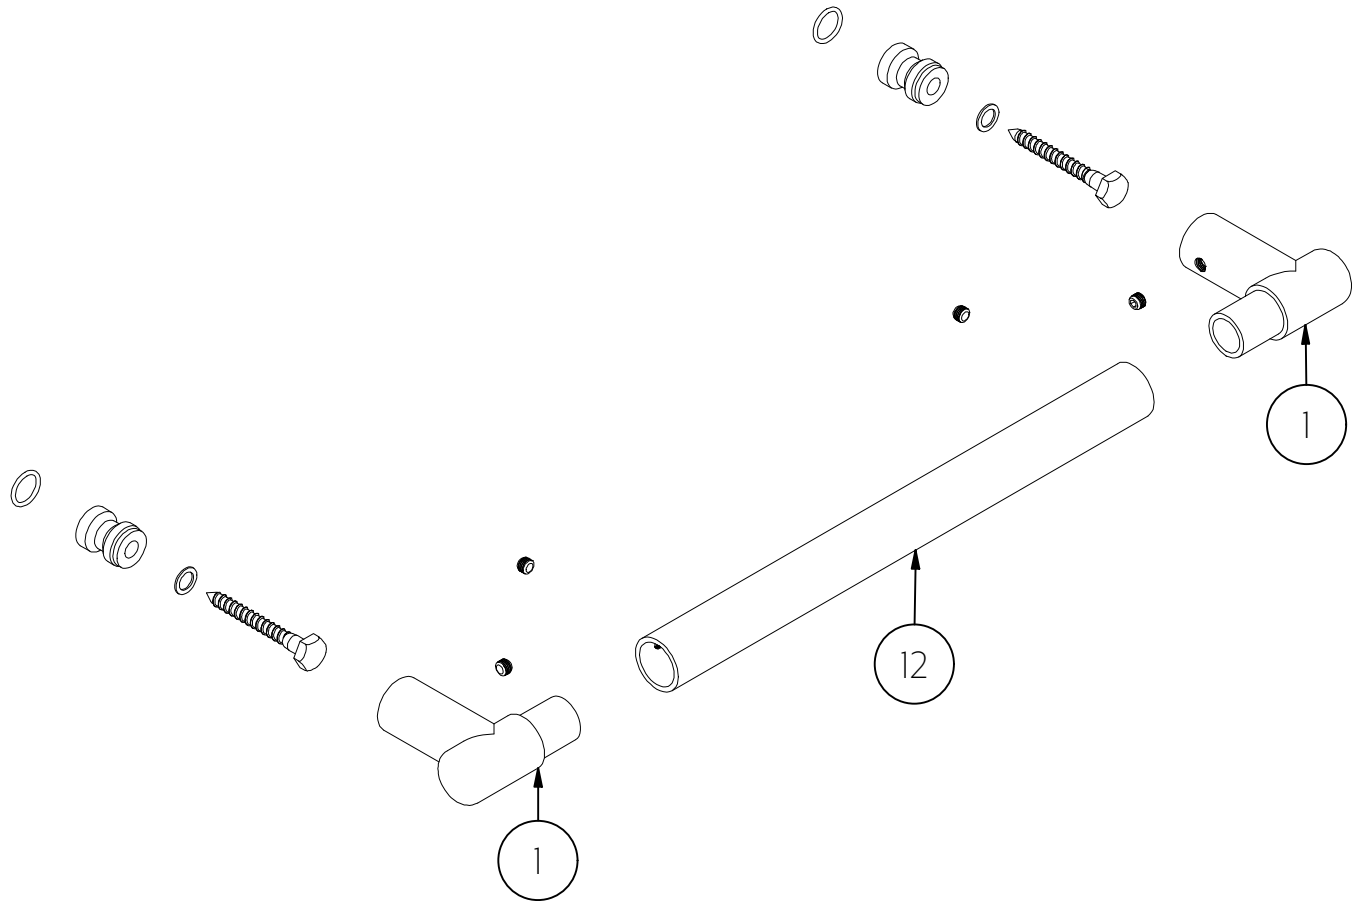

Grab Rail Kit (numbered components)

- ① End bracket x2 ⑫ 356mm Rail x1

Fixing Kit (unnumbered components)


- Fixing bracket x2 Coach screw x2 Grub screw x2
- Washer x2 O ring x2



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

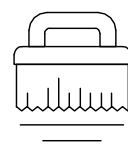


DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

ABI
INTERIORS


- ① For rough in, ensure adequate wall structure is installed. Set out grab rail in numbered configuration as illustrated below. (Numbered indication appears on previous page).

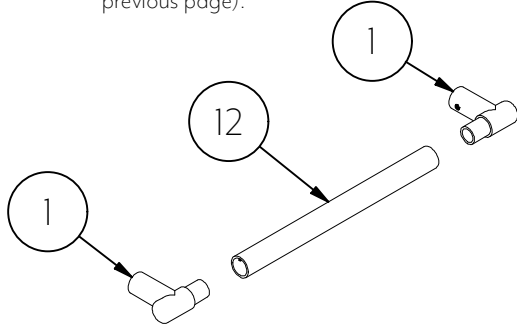


- ② Fix grab rails to brackets using the allen key provided. **Note:** do not tighten grub screws completely, this aids wall mount install process.

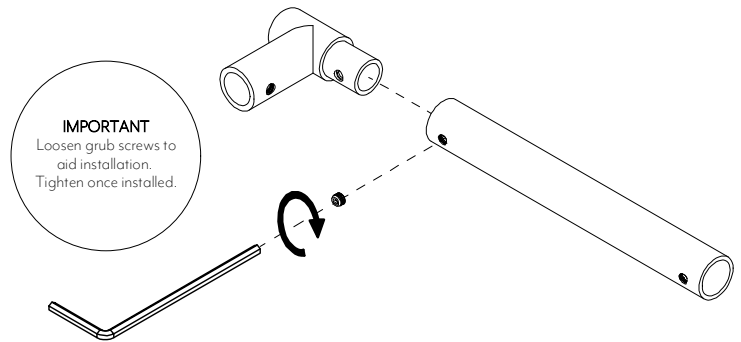


- ③ Mark out fixing points centre to centre, on a level floor, ensuring grab rail placements meets the needs of the user and aligns with wall structure.

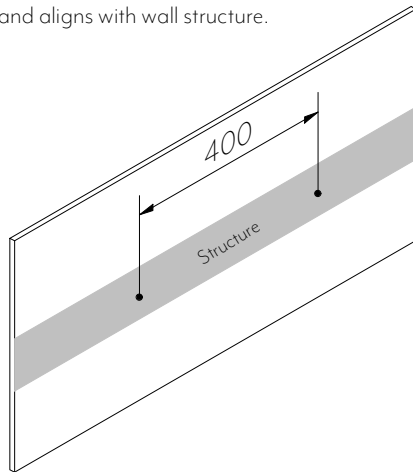


- ④ Align fixing points with rail configuration, using a level, double check fixing location. Drill pilot holes accordingly.

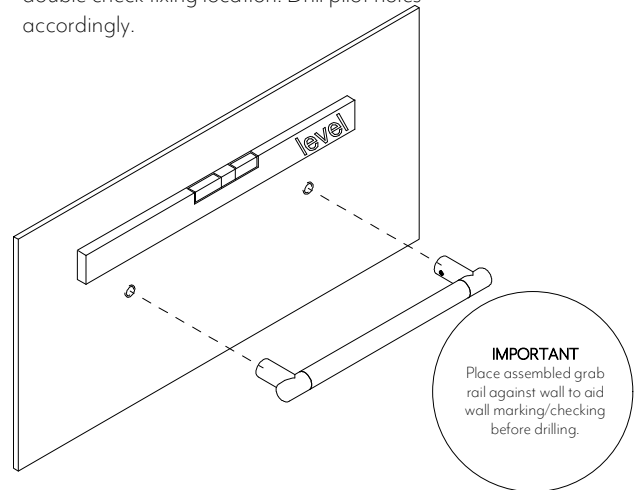

- ⑤ Secure fixing brackets at previously marked fixing location. Ensure fixing is level & fixed into appropriate structural support. **IMPORTANT:** Ensure rubber o ring is installed between the bracket and wall.

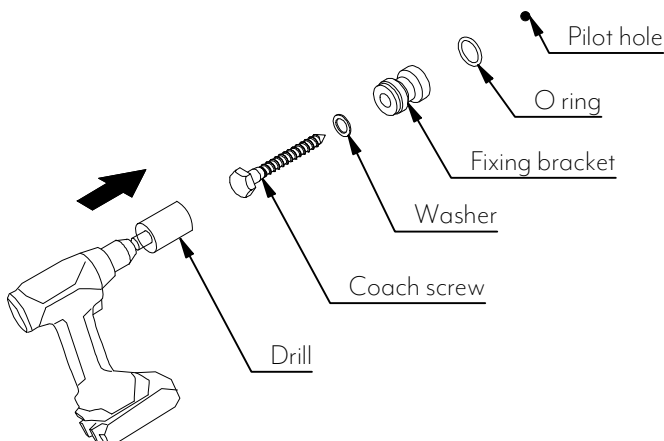


- ⑥ Slide grab rails onto brackets & fix with grub screw. Ensure all fixings are tight and secure.

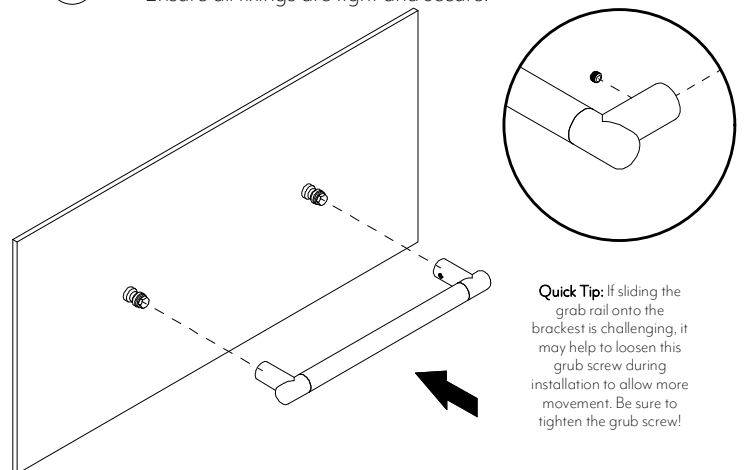

Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

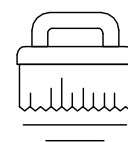

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material