


ATELIS CONCRETE HALF MOON ENTRY DOOR PULLS - PAIR

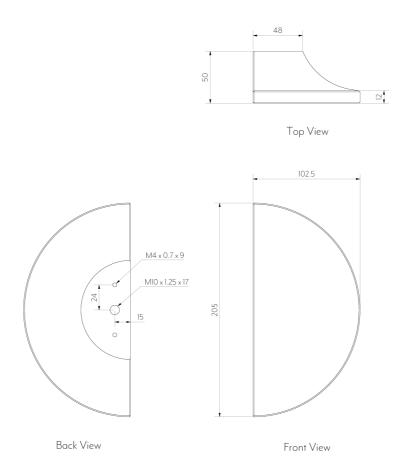

Note: Dimensions are nominal measurements only

SPECIFICATIONS	
RECOMMENDED USE	Domestic/ Commercial
MATERIAL	Concrete
INSTALLATION	Double sided

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.




DOUBLE SIDED INSTALLATION



- 1. Measure and mark out the desired position for handle on both sides of door.
- 2
- 1. Using multi grips fasten threaded bolt into handle.
- 2. Drill prescribed holes through door for handle fixings

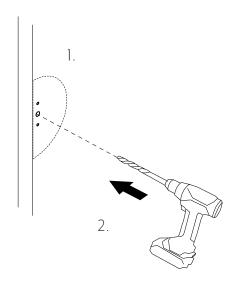

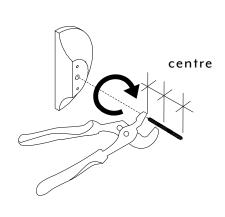


- (3)
- 1. Mount handle by inserting bolt and screws through drilled holes.




1. Apply thread lock adhesive glue to threaded rod end.

2. Screw remaining handle onto bolt until handle is flat

- $2. \ Using \ a \ Phillips \ head \ screwdriver \ to \ fix \ screws \ into \ handle.$
- and firm against door.
- 3. Trim the bolt to suit your door thickness ensure their is 15mm of thread sticking out.

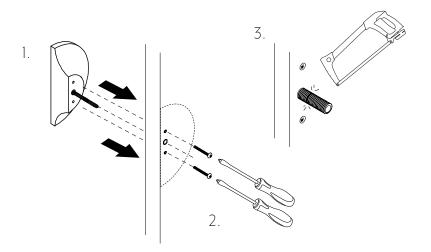

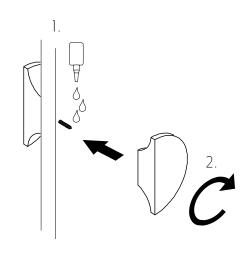



Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.

INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.



SINGLE SIDED INSTALLATION





1. Measure and mark out the desired position for handle on both sides of door.



Mount handle by inserting bolt through drilled holes.

2. Drill prescribed holes through door for handle fixings

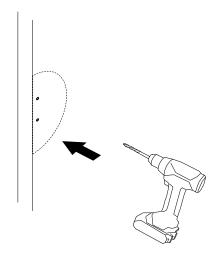

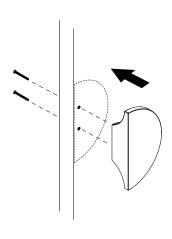




INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.



In The Box

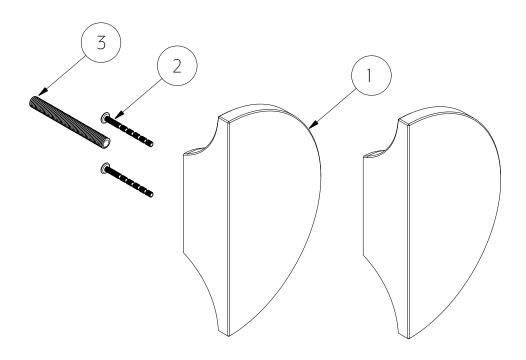

In The Box

- 1. Handle (x2)
- 2. Snap-off bolt (x4)
- 3. Fixing bolt (x1)



Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.