

Front View

Note: Dimensions are nominal measurements only

SPECIFICATIONS


RECOMMENDED USE	Domestic
MATERIAL	Brass
INSTALLATION	Suits 40mm Trap
OVERFLOW	Compatible with overflow and non-overflow basins

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.




- ① Remove plug & grate by holding top base & pulling plug upwards.

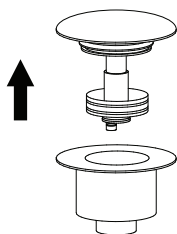


- ② Fit foam washer to top base and drop fixing bolt into base.

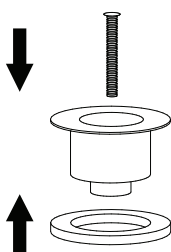


- ③ Place the lower base with silicon washer underneath the basin & tighten fixing bolt with phillips head screw driver.

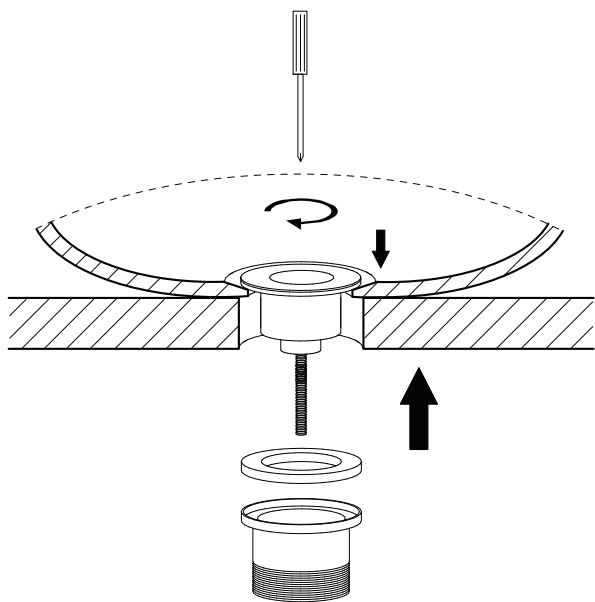

Disassembled pop-up waste components

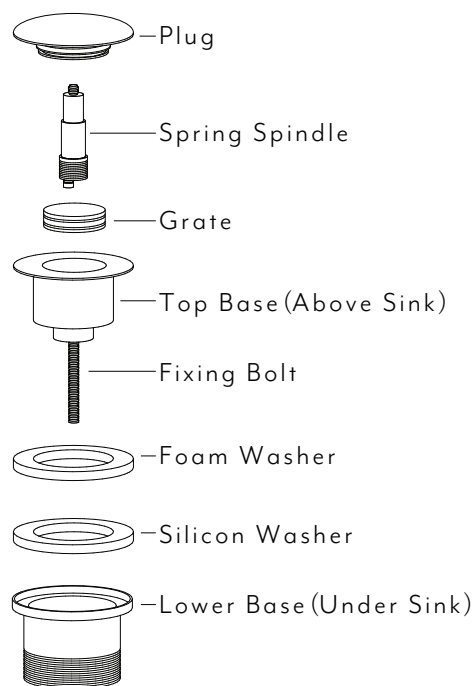

- ④ Re-fit plug & grate into top base. Connect pipe work & test plug mechanism by pressing plug down with running water.

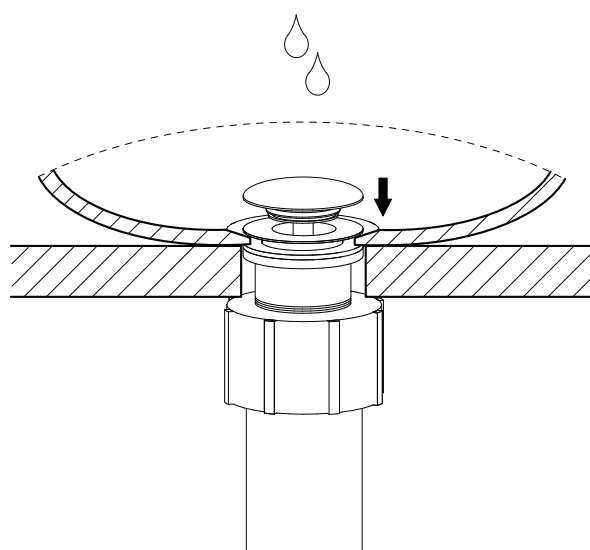

Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.