


Top View



A - A Section View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

Domestic

MATERIAL

Solid Surface

INSTALLATION

Wall Mount, Wall or Bench Mount Spout
(Holes for bench mount to be drilled on site)

OVERFLOW

No

CAPACITY

8.7L

RIM THICKNESS


14mm

INSTALLATION GUIDE


This product must be installed by a licensed plumber.
This is a general installation guide - there are many factors that are involved that can alter the installation method.
This product install must comply with AS/NZS 3500.




- 1 Check the desired height of basin from floor.

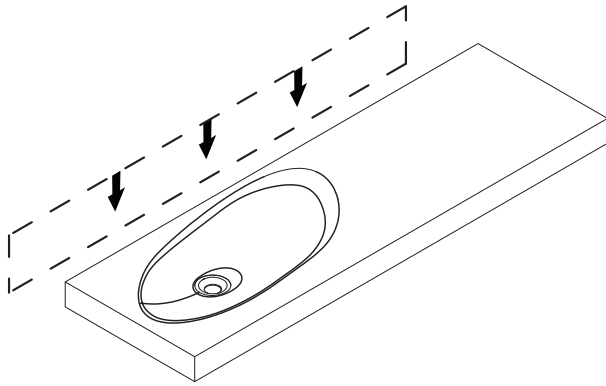


- 2 Fit pop up waste and trap to basin.

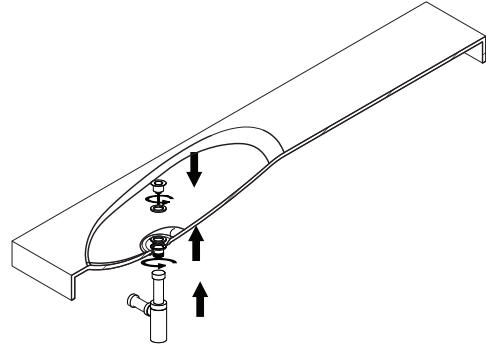


- 3 Hold basin against wall aligning outlet of trap with waste pipe. Extend telescopic trap up or down to find desired height & cut waste to suit trap.

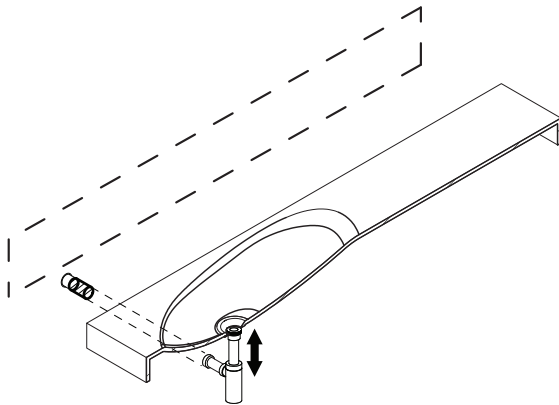

- 4 If correct height and position is suitable, level the top of the basin & mark out desired position.
Drill holes into structural support in the wall. Fix basin into structural support. **ABI takes no responsibility if vanity is not fixed into wall structure.**

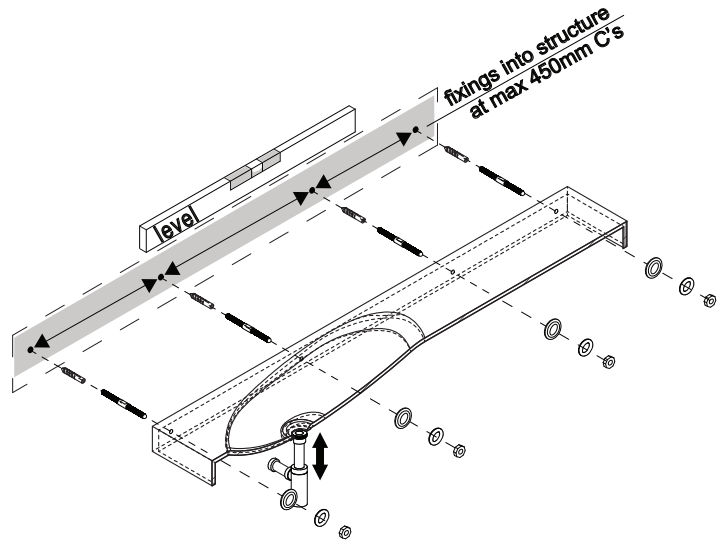


- 5 Secure plumbing to basin and wall outlet. Test by running water through the waste. Silicon top and sides of basin if necessary.

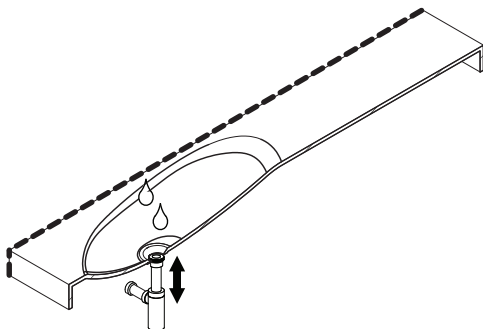

Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach. These substances are abrasive.

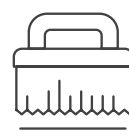

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.

IN THE BOX		4 x Wall plug		4 x Metal washer
		4 x Hanger bolt		4 x Nut
		4 x Plastic washer		1 x Basin