

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

Domestic

MATERIAL

Stainless Steel 304

BOLT THROW

15mm


INSTALLATION GUIDE

This product must be installed by a licensed tradesperson.


This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with the standards in your respective country and must be adhered to by your licensed tradesperson.

ABI
INTERIORS


- 1 Check in flush door bolt according to the cutting guide provided. Fix flush bolt onto door prior to hanging the door.
Please Note: Door must be 35mm thick or more.

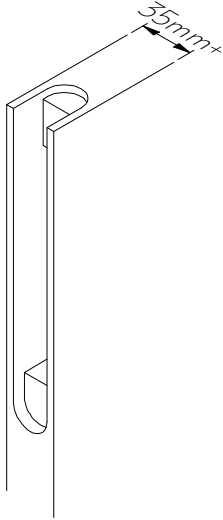


- 2 Place flush door bolt in checked in location and fasten with provided screws.
Please Note: note that the longer screws are required.

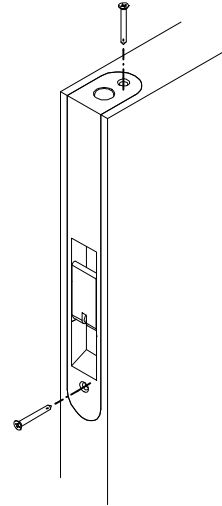


- 3 Hang the door back in the frame and mark out where the flush bolt will engage within the frame. Use this location to indicate where the strike requires installation.

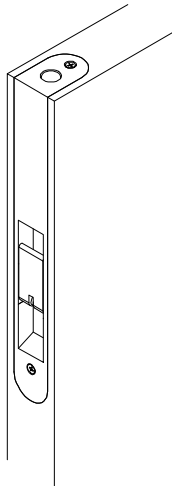


- 4 Check in the strike plate. Mark and drill a 20mm deep at the bolt engagement location.

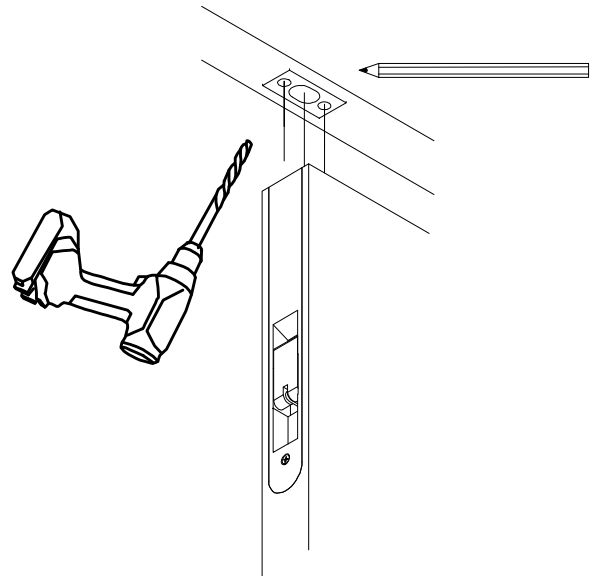

- 5 Fix the strike plate with the provided screws and test.

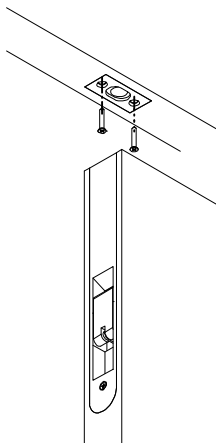

IN THE BOX



1x Flush bolt



2x Flush bolt screws



1x Strike plate




2x Strike plate screws



Regularly clean with mild liquid detergent or soap and water




DO NOT use cream cleaners or bleach. These substances are abrasive

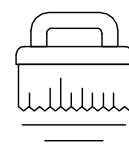


DO NOT use cleaning pads with abrasive surfaces as this may scratch the material


CUTTING GUIDE

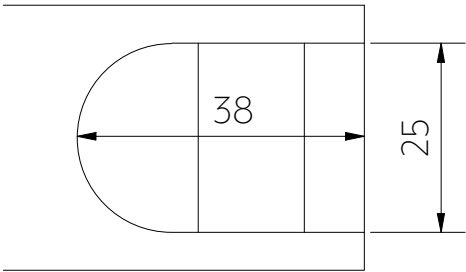

Top View

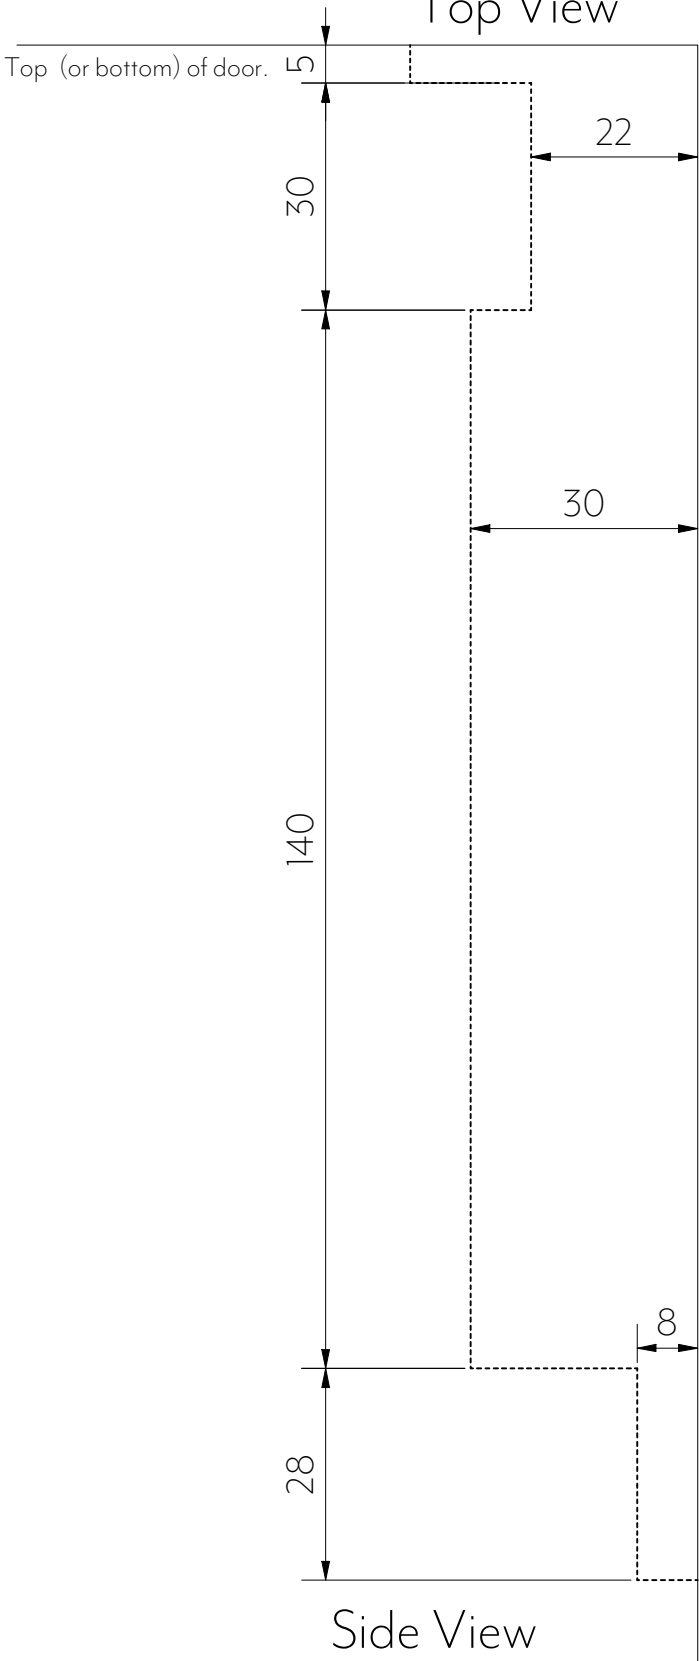

Side View

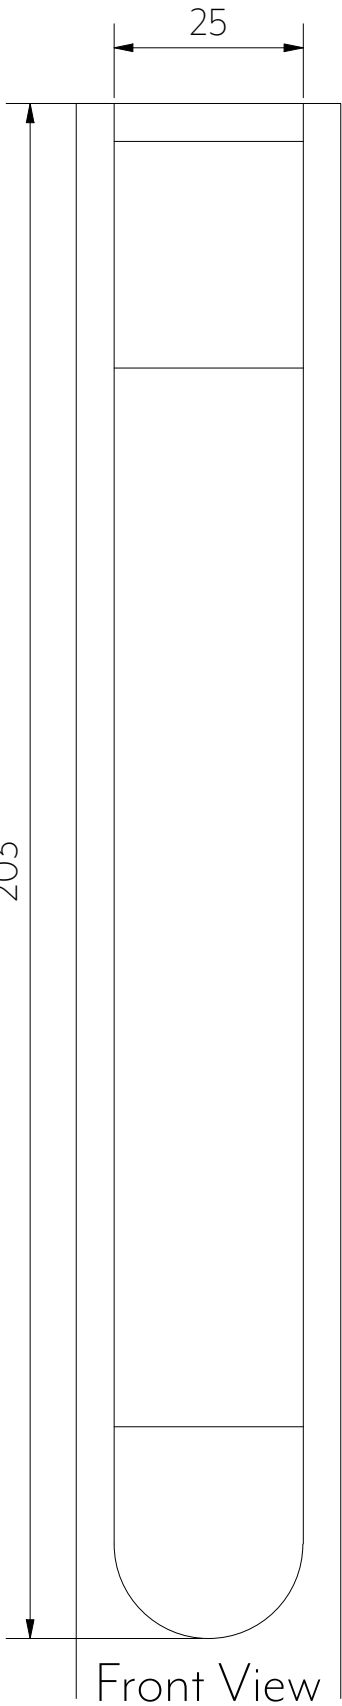


Front View



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

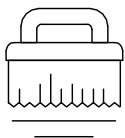

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material