


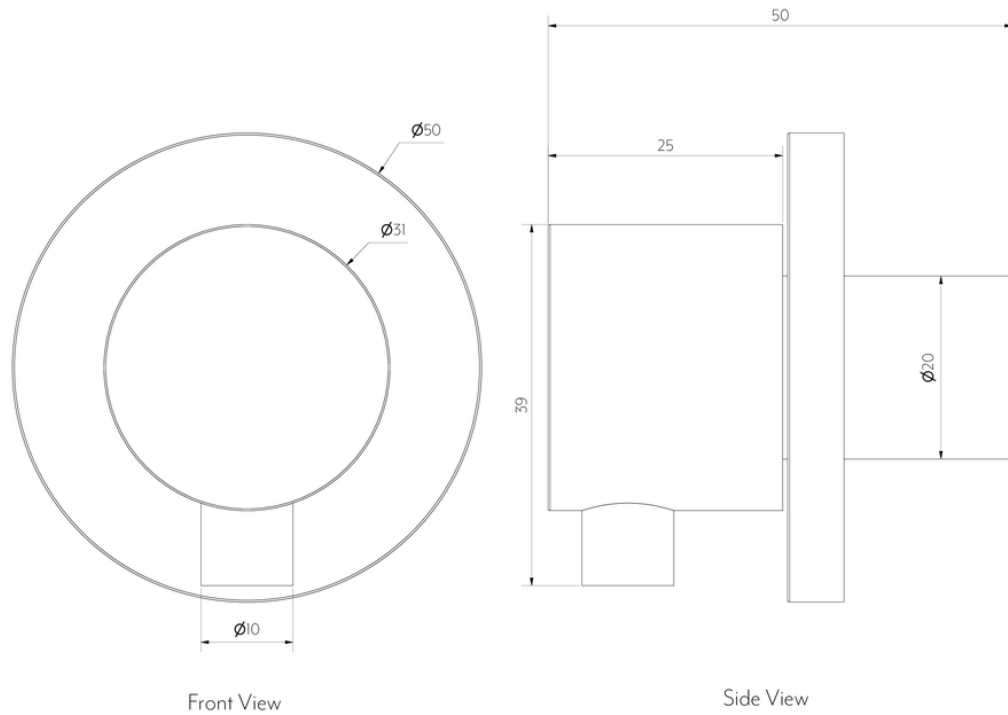

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE


Domestic

MATERIAL


Solid Brass

INSTALLATION GUIDE

This product must be installed by a licensed plumber. This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with AS/NZS 3500.

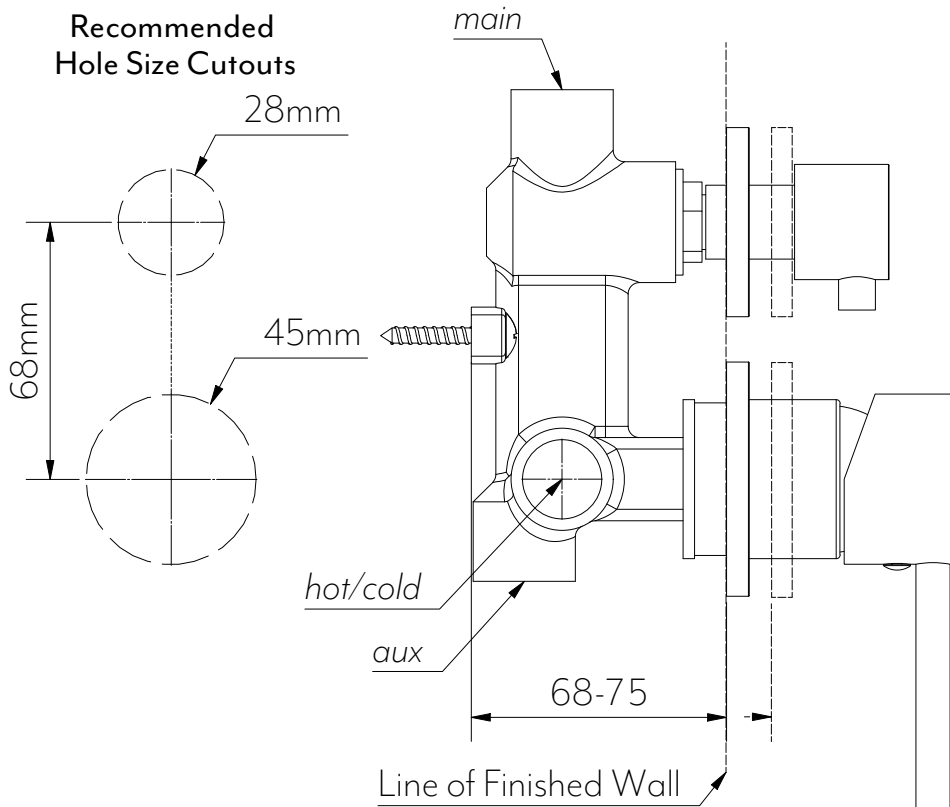

- ① Screw Diverter Body into wall structure with provided screws.
- ② Connect *hot* and *cold* to left and right outlets respectively.
- ③ Connect *main* and *aux* outlets to Rain Shower and Hand Shower. Or alternative shower outlets. Test with pressure.
- ④ Once finish wall is installed use silicone to ensure all entry points around mixer are sealed to prevent water entry.
- ⑤ Install Long or Short Mixer Sleeve depending on wall finish line.
- ⑥ Apply back plates, and install handles by tightening grub screws.

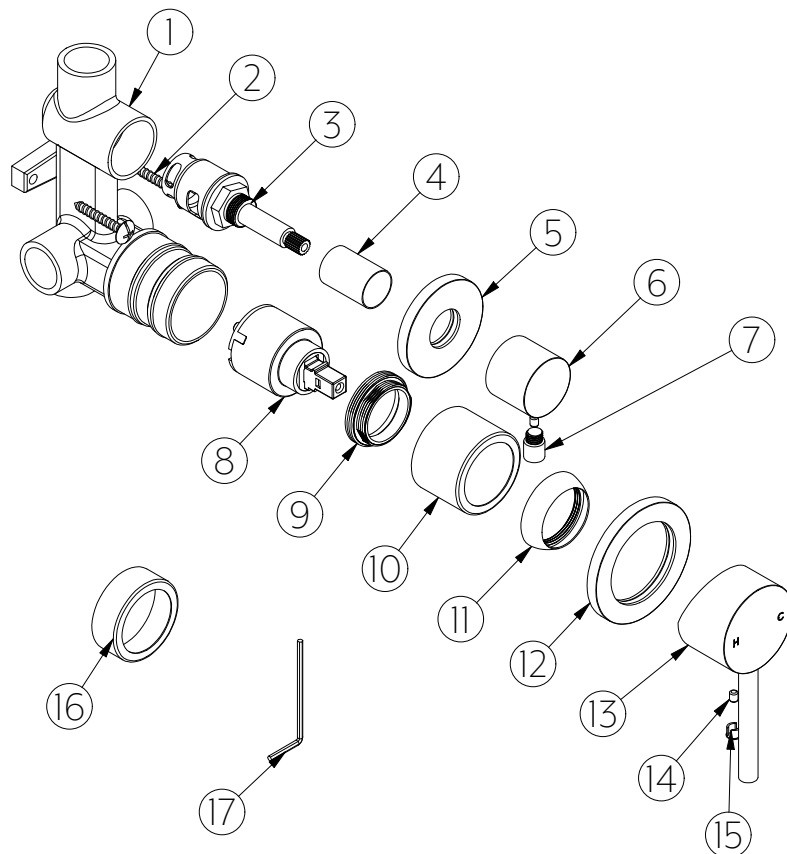

EXPLODED VIEW


1. Diverter Body
2. Screws
3. Diverter Cartridge
4. Diverter Sleeve
5. Diverter Back Plate
6. Diverter Button
7. Diverter Stick
8. Mixer Cartridge
9. Locking Nut
10. Mixer Sleeve Long
11. Dome
12. Mixer Back Plate
13. Mixer Handle
14. Grub Screw
15. Grub Screw Cap
16. Mixer Sleeve Short
17. Allen Key



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

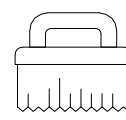

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material