

Note: Dimensions are nominal measurements only

SPECIFICATIONS	
RECOMMENDED USE	Domestic/ Commercial
MATERIAL	304 Stainless Steel
INSTALLATION	Top mount or Undermount


INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.




INSTALLATION - FONT DRAIN - TOP MOUNT


1 Assemble the waste outlet as shown below.




Apply silicone around the perimeter of the pre-cut hole.
Insert the bowl and push down gently.

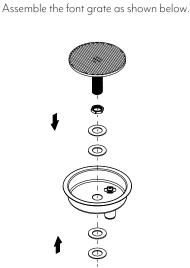

Connect the waste outlet to the nipple on you trap or another waste outlet point. Test and commission.



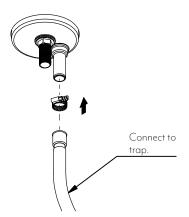



DO NOT use cream cleaners or bleach.
These substances are abrasive




INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.



INSTALLATION - FONT DRAIN - UNDERMOUNT


1 Assemble the waste outlet as shown below.






Measure the thickness of your bench top.

- 1. Attach the supplied nut, steel washer and rubber washer
- 2. Insert into the bowl as shown
- 3. Measure the offset and adjust to suit you bench thickness

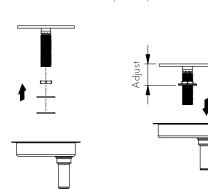




 \bigcirc Ensure the pre-cut hole is **122mm** in diameter.






- 1. Apply silicone to the top edge of the font drain and push to the underside of your bench
- 2. Secure in place whilst it sets.

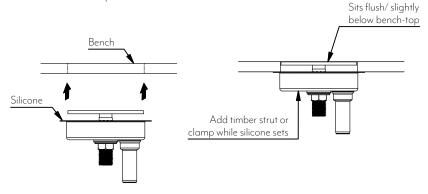

6 Connect the waste outlet to the nipple on you trap or another waste outlet point. Test and commission.

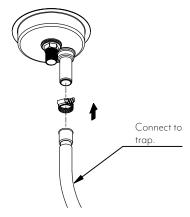



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.




In The Box

Universal drain

- 1. Bowl
- 2. Rubber washer
- 3. Metal washer
- 4. BSP 1/2 Flat nut
- 5. BSP 1/2 Nut
- 6. M4 Bolt
- 7. Spring washer
- 8. O-ring
- 9. Waste receptacle
- 10. Font grate

Font drain insert

- 11. Font grate
- 12. Font stem

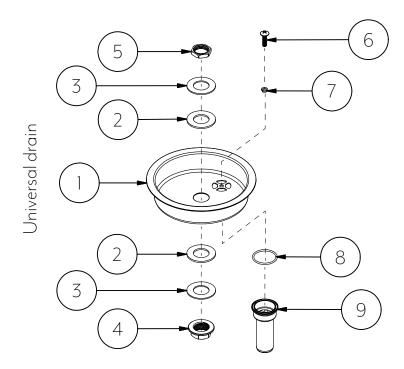

Font drain insert

