


# HARTLEY UNDERMOUNT SINGLE SINK 457MM

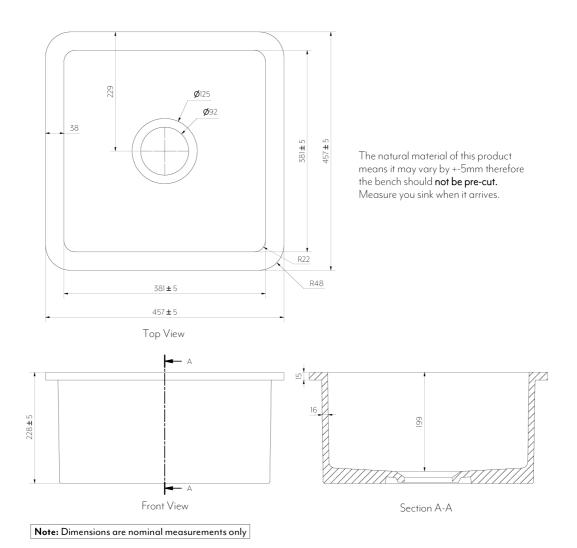


# RECOMMENDED USE | WARRANTY Domestic / Commercial MATERIAL Fireclay Under Mount, Top Mount OVERFLOW No CAPACITY 29 L

### **INSTALLATION GUIDE**


**Note:** This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.



# UNDER MOUNT INSTALLATION

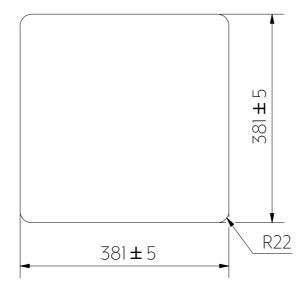

# TOP MOUNT INSTALLATION

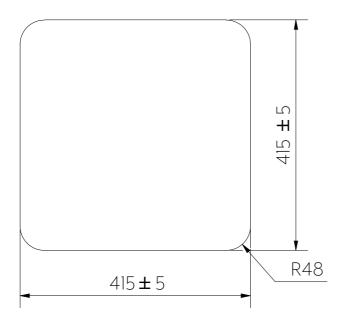

\*These measurements are indicative only, the natural material of this product means it may vary by +-5mm therefore the bench should **not be pre-cut**. Measure you sink when it arrives.





## INSTALLATION GUIDE

This product must be installed by a licensed plumber. This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with AS/NZS 3500.



### UNDERMOUNT INSTALLATION


(1)

Note: this sink can only be installed into new cabinetry & benchtops by a **licensed tradesperson**.


The sink must be available to tradespeople for taking measurements at time of manufacture. *ABI* is unable to provide templates due to variations in the material of the product (±5mm).

Allow for the cabinetry to be built so the top of the sink is sitting flush on the underside of the counter top.


Note: Box must be installed prior to the benchtop.

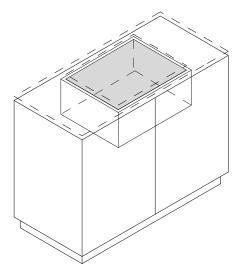


Cut the benchtop using the internal measurements of the sink perimeter in conjunction with the desired sink overhang.

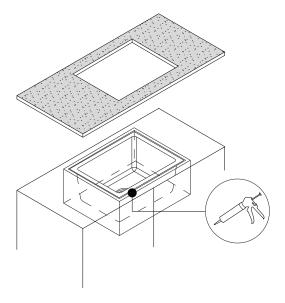

Mount the sink into the cabinet box. Ensure the top of the sink is flush with the top of cabinetry.

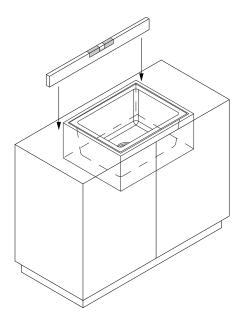

Install the benchtop & apply adhesive to sink perimeter. Wipe away any excess adhesive sealant.

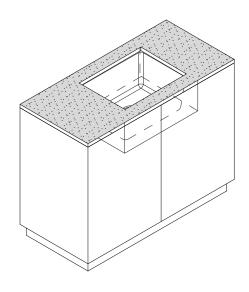



Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.

# INSTALLATION GUIDE

This product must be installed by a licensed plumber. This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with AS/NZS 3500.




### TOPMOUNT INSTALLATION





Measure your sink\*, then mark out the cutting lines in the desired location on your bench.

 $Cut \ out \ sink \ hole \ using \ preffered \ method.$ 

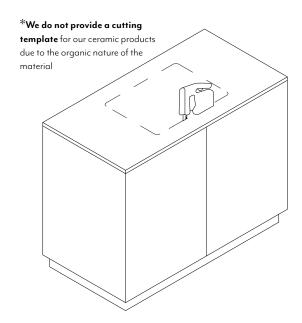



(3) Wipe away any excess adhesive around sink rim.

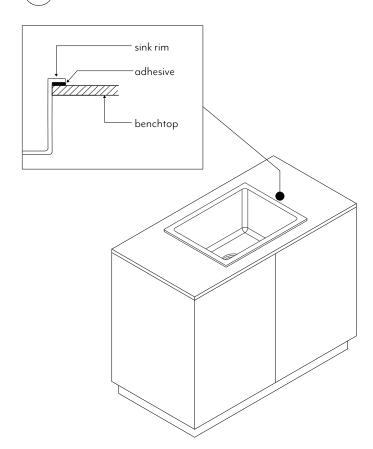



Apply adhesive to the underside perimeter of sink rim & lower into position.

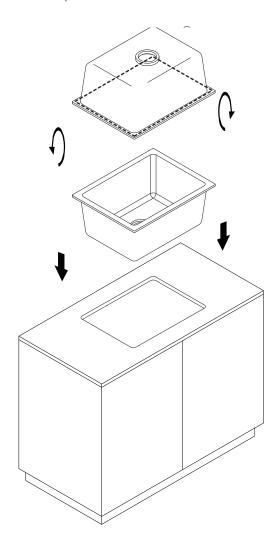

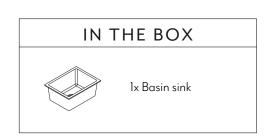



Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.