



Top View

The natural material of this product means it may vary by +5mm therefore the bench should **not be pre-cut**. Measure you sink when it arrives.

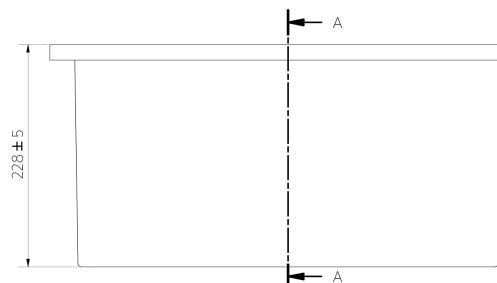

Front View

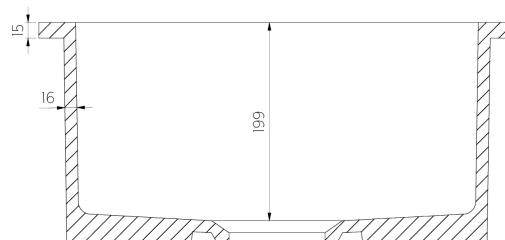

Section A-A

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE | WARRANTY

Domestic / Commercial | [Click here for warranty periods](#)

MATERIAL

Fireclay

INSTALLATION

undermount, Top Mount

OVERFLOW

No

CAPACITY


29L

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.



UNDER MOUNT INSTALLATION

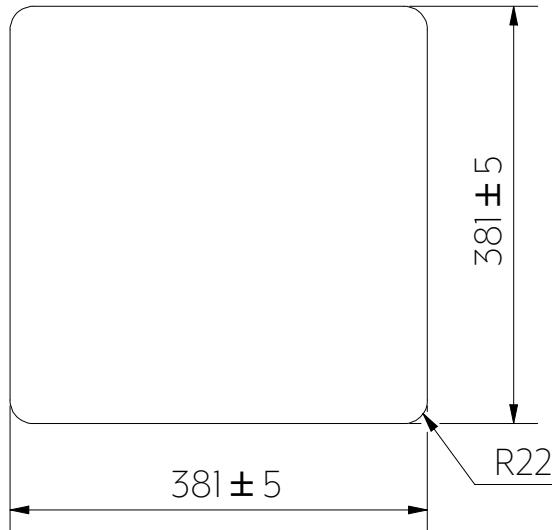

TOP MOUNT INSTALLATION

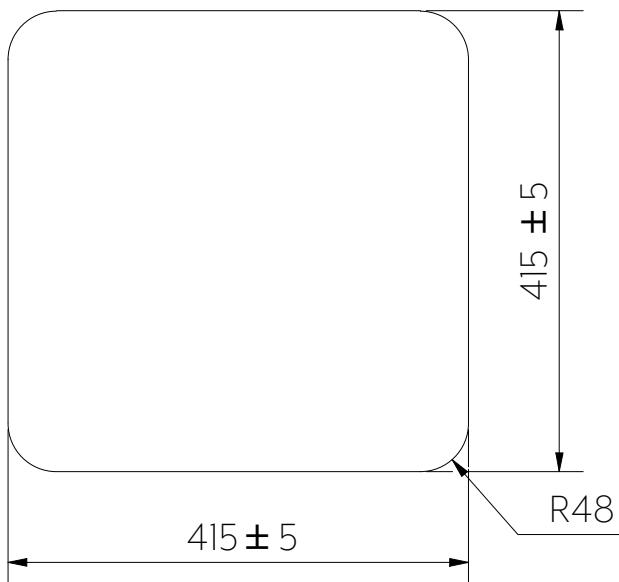


*These measurements are indicative only, the natural material of this product means it may vary by ± 5 mm therefore the bench should **not be pre-cut**. Measure you sink when it arrives.



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

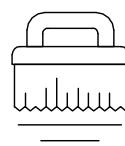

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

INSTALLATION GUIDE

This product must be installed by a licensed plumber.
This is a general installation guide - there are many factors
that are involved that can alter the installation method.
This product install must comply with AS/NZS 3500.




UNDERMOUNT INSTALLATION

1 Note: this sink can only be installed into new cabinetry & benchtops by a licensed tradesperson.


The sink must be available to tradespeople for taking measurements at time of manufacture. **ABI is unable to provide templates due to variations in the material of the product ($\pm 5\text{mm}$).**

Allow for the cabinetry to be built so the top of the sink is sitting flush on the underside of the counter top.


Note: Box must be installed prior to the benchtop.

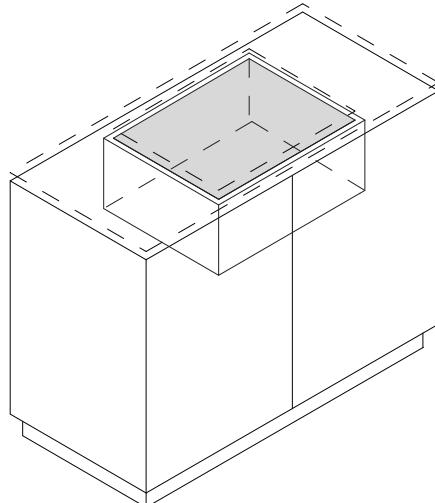


2 Mount the sink into the cabinet box. **Ensure the top of the sink is flush with the top of cabinetry.**

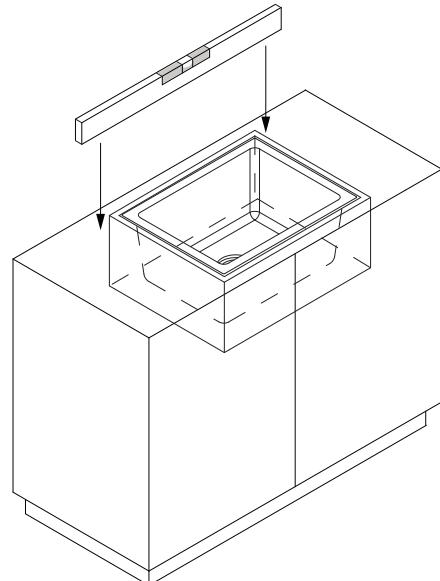

3 Cut the benchtop using the internal measurements of the sink perimeter in conjunction with the desired sink overhang.

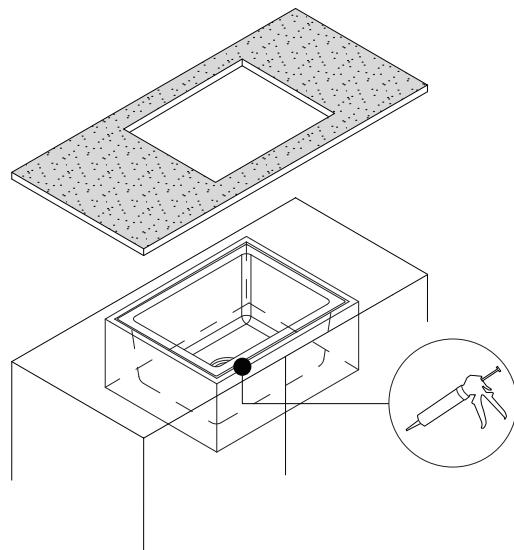

4 Install the benchtop & apply adhesive to sink perimeter. Wipe away any excess adhesive sealant.

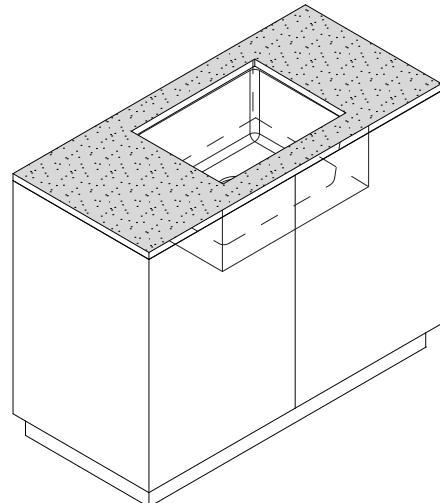

Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.

INSTALLATION GUIDE

This product must be installed by a licensed plumber.
This is a general installation guide - there are many factors
that are involved that can alter the installation method.
This product install must comply with AS/NZS 3500.




TOPMOUNT INSTALLATION

1 Measure your sink*, then mark out the cutting lines in the desired location on your bench.


Cut out sink hole using preffered method.

***We do not provide a cutting template** for our ceramic products due to the organic nature of the material


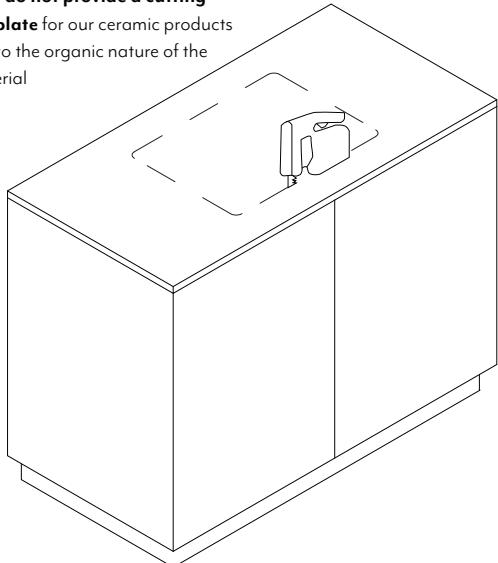


2 Clean around edge of benchtop sink hole & perimeter of sink rim.

Apply adhesive to the underside perimeter of sink rim & lower into position.

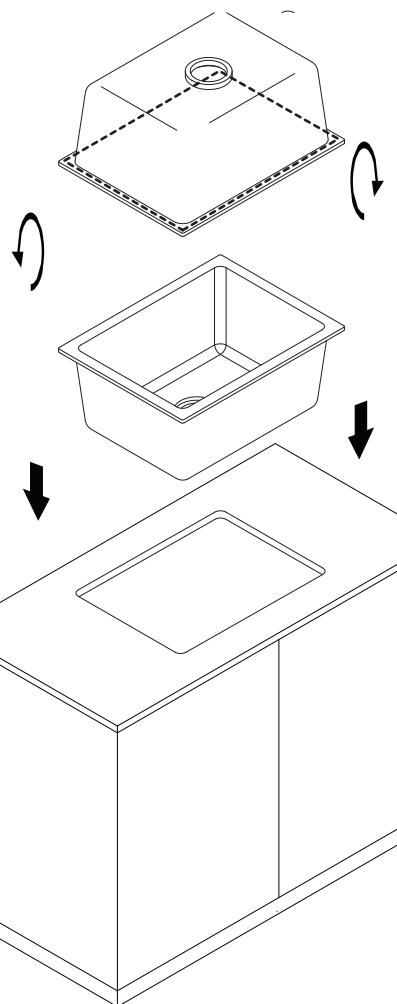

3 Wipe away any excess adhesive around sink rim.

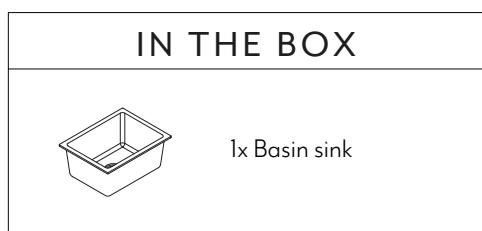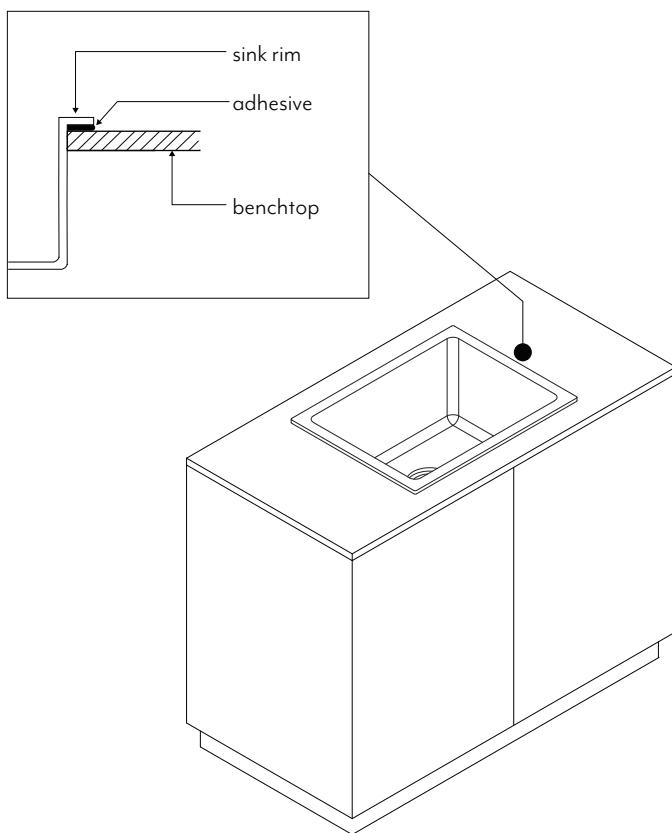

Regularly clean with
mild liquid detergent
or soap and water.



DO NOT use cream
cleaners or bleach.
These substances are
abrasive.



DO NOT use cleaning
pads with abrasive
surfaces as this may
scratch the material.