




KENZIE GLASS-TO-WALL SHOWER HINGE

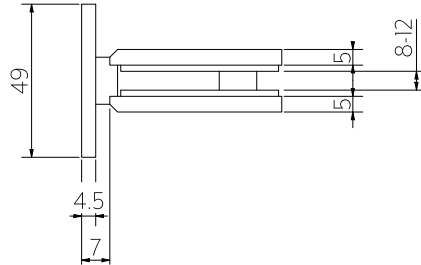


Top View

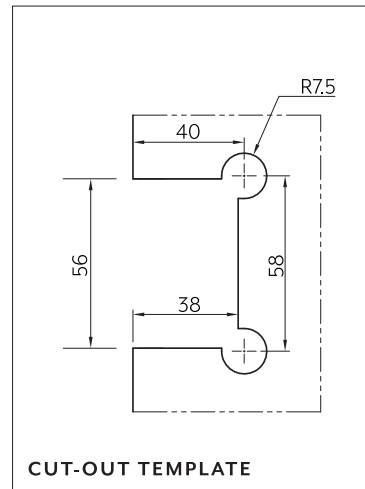

CUT-OUT TEMPLATE

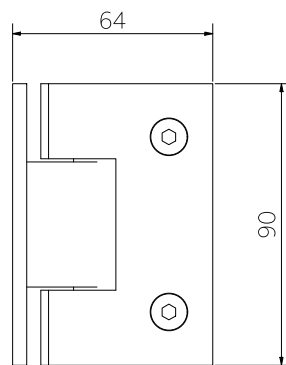

Front View

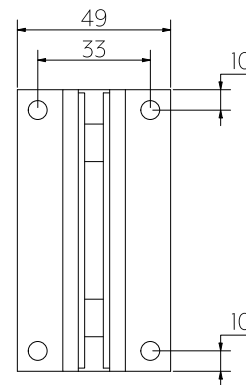

Side View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

Domestic

MATERIAL

304 Stainless Steel

INSTALLATION

Glass to Wall

GLASS THICKNESS

10-12mm

WEIGHT CAPACITY

30kg per hinge
Max door width for 10mm glass is 700mm

FUNCTION

Dual Function - Swivel inwards and outwards


INSTALLATION GUIDE

This product must be installed by a licensed tradesperson.


This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with the standards in your respective country and must be adhered to by your licensed tradesperson.




- ① Fit plastic shield & packers to hinge.

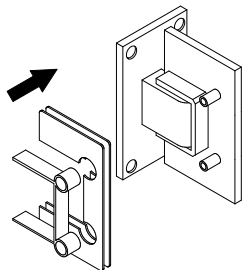

- ② Install glass. Can be used on glass up to 12mm thick, an additional plastic packer has been provided for panels less than 12mm.

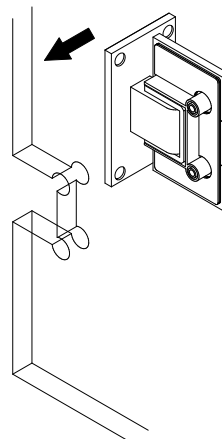


- ③ Fit hinge plate and spacers with fixings provided.
Tighten up grub screws using an allen key.
This will clamp the glass to hold it in place.

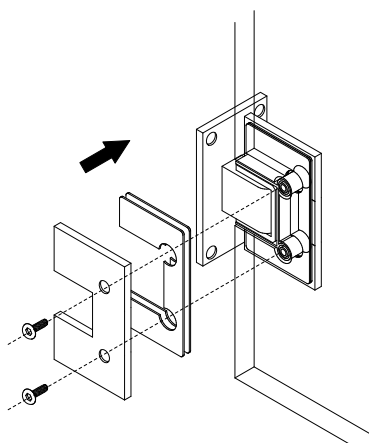


- ④ Mark out desired position for hinge in relation to shower screen location.


Allow clearance under door for shower door drip rail. Clearance height as per shower door drip rail supplier spec.

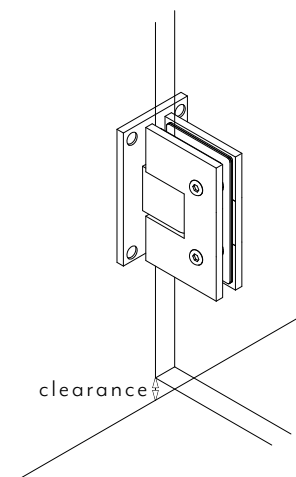

- ⑤ Drill holes in desired position and insert wall plugs

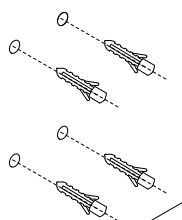


- ⑥ Fix hinge & glass to wall using fixings provided.

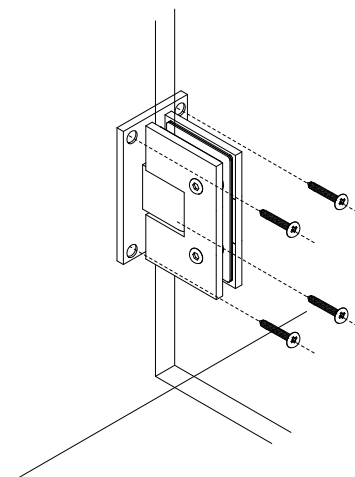

Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach. These substances are abrasive.

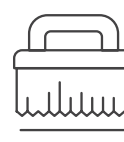

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.