


Top View

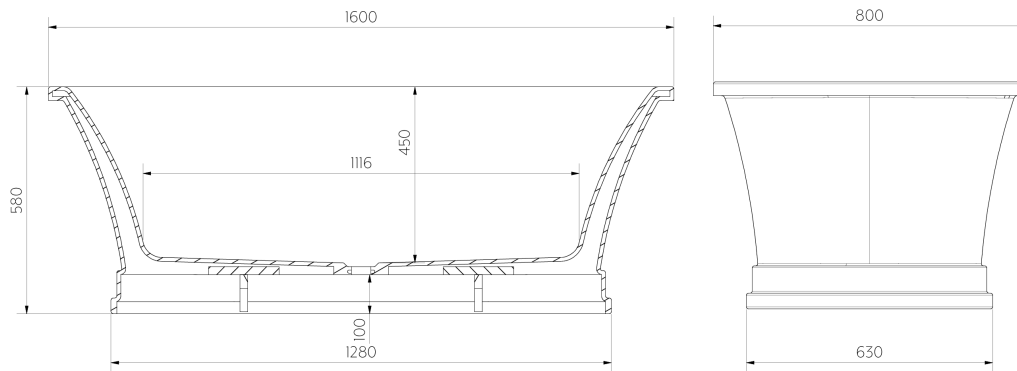

Section C-C

Side View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

Domestic

MATERIAL

Acrylic

WEIGHT

75kg

OVERFLOW

Yes, 12L/min

CAPACITY


213L

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

ABI
INTERIORS


- ① Allow for 100mm clearance from the underside of bath to floor (+/- 10mm).

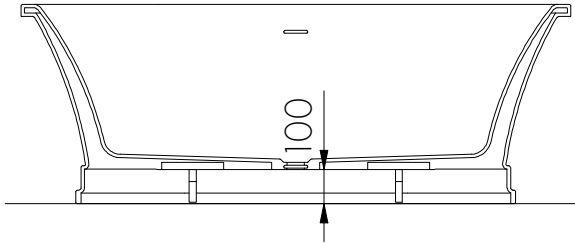


- ② Mark position of bath to determine length of drainage from floor waste to bath outlet.

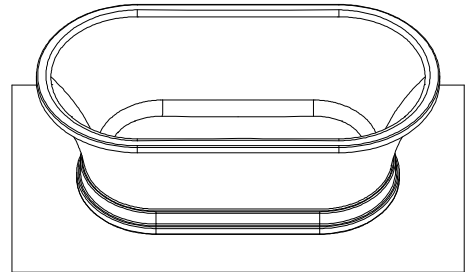


- ③ Plan out drainage connection to floor waste & alter if necessary.

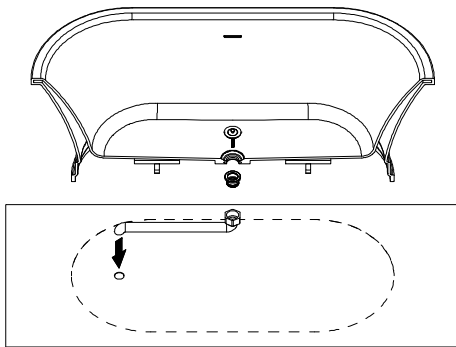



- ④ Fit plug waste into bath outlet, seal & tighten as required.
Please note: bath plug not included.

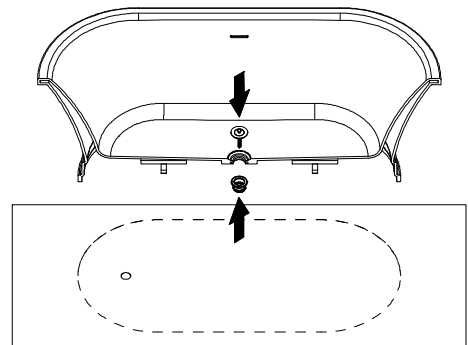

- ⑤ Fit out drainage connection to underside of bath. Position bath & connect drainage to floor waste.

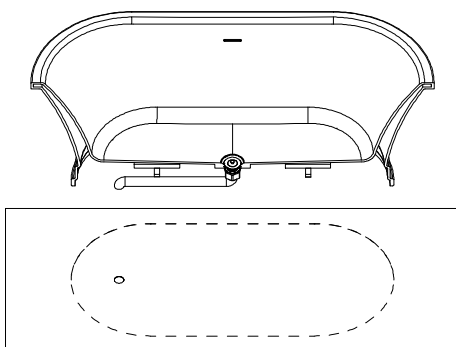


- ⑥ Silicone around base of bath.
Test and commission.

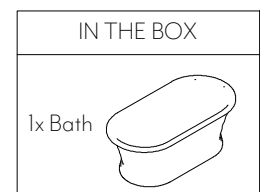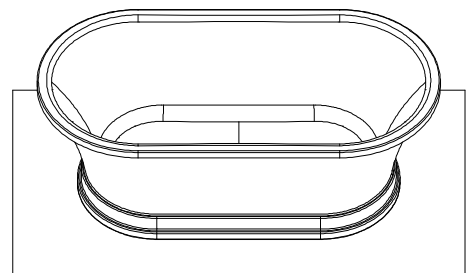

Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

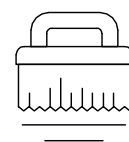

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material