




MYRA 3-DOOR MIRROR CABINET - 1278MM

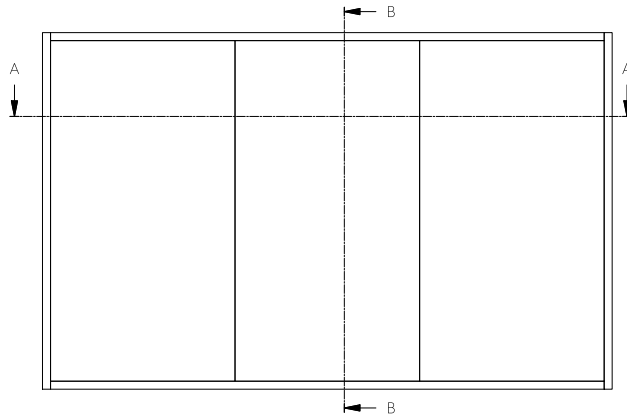

Front View

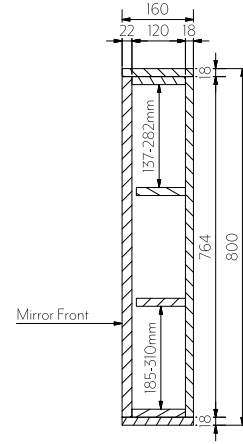

Section B-B

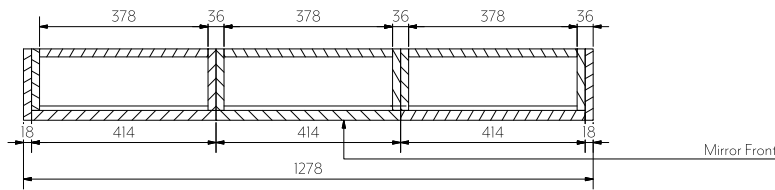

Section A-A

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

Domestic

CONSTRUCTION

High Density Moisture Proof Particle Board

MOUNTING

Wall Mounted

INSTALLATION GUIDE


Note: This product must be installed by a licensed tradesperson.

This is a general installation guide - there are many factors that are involved that can alter the installation method.

This product install must comply with the standards in your respective country and must be adhered to by your licensed tradesperson.

ABI


- 1 Check the desired height of mirror cabinet from floor.

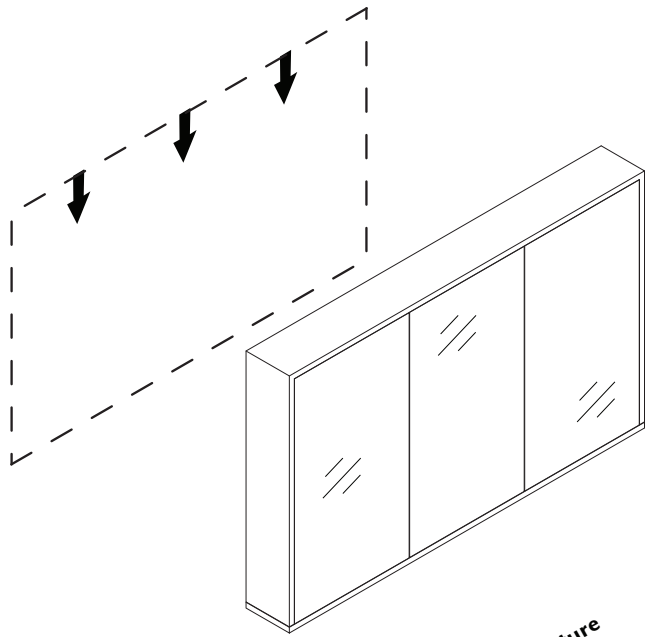


- 2 If correct height and position is suitable, level the top of the mirror cabinet & mark out desired position. Drill holes through the back of mirror cabinet into structure within wall using a wood drill bit.

Note: Ensure adequate fixings are fixed at maximum 450 centres into structure within wall.

ABI accepts no liability if vanity is not correctly secured into wall structure or is installed incorrectly.

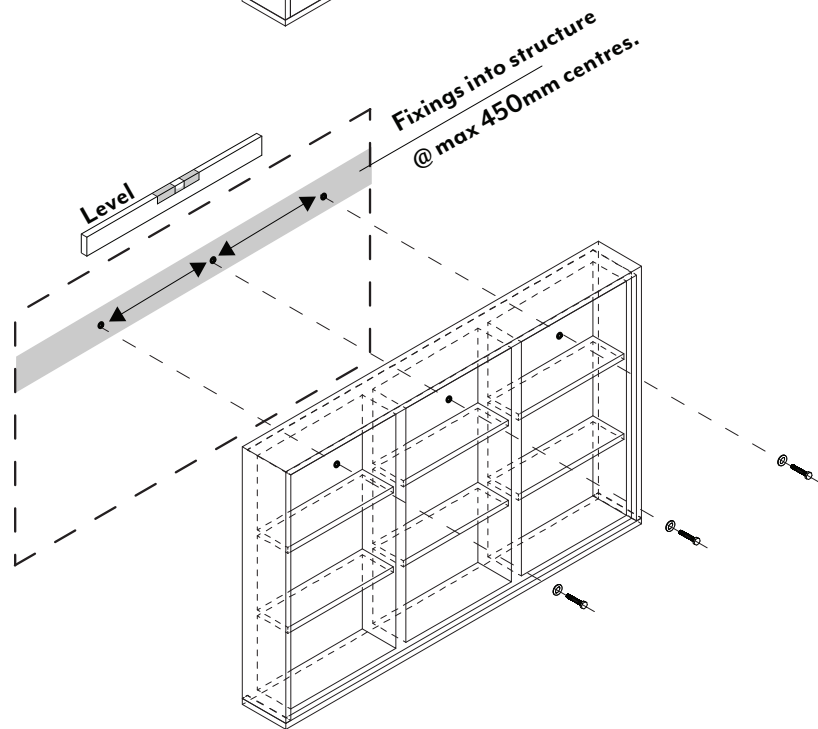

- 3 Silicon top and sides of mirror cabinet if necessary.

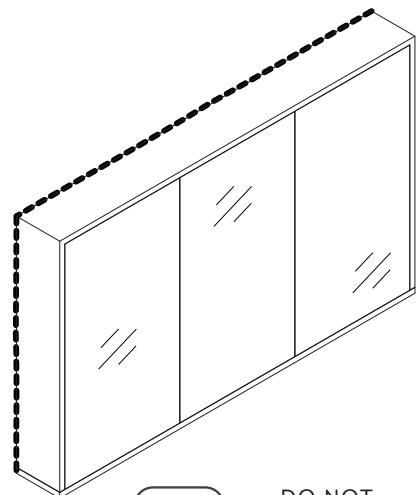

Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.