



Top View

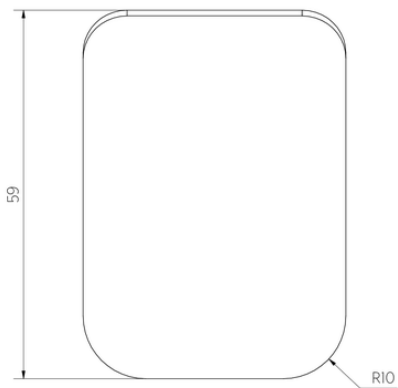

Front View

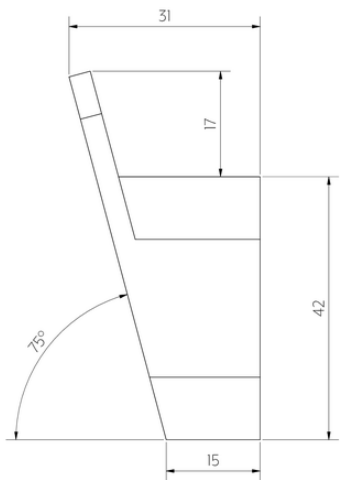

Side View

**Note:** Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

Domestic / Commercial

MATERIAL

Stainless Steel 304

MOUNTING HARDWARE INCLUDED

Wall plug x 2  
Fixing screw x 2


# INSTALLATION GUIDE

This product must be installed by a licensed tradesperson.


This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with the standards in your respective country and must be adhered to by your licensed tradesperson.

ABI  
INTERIORS


- 1 Use provided Allen key to loosen grub screw and remove bracket.

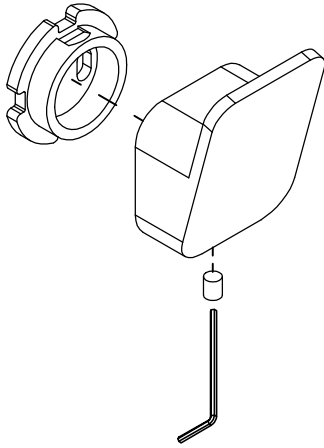


- 2 1. Use the fixing bracket to mark out desired fixing location, ensuring marks are level.  
2. Drill pilot holes accordingly.

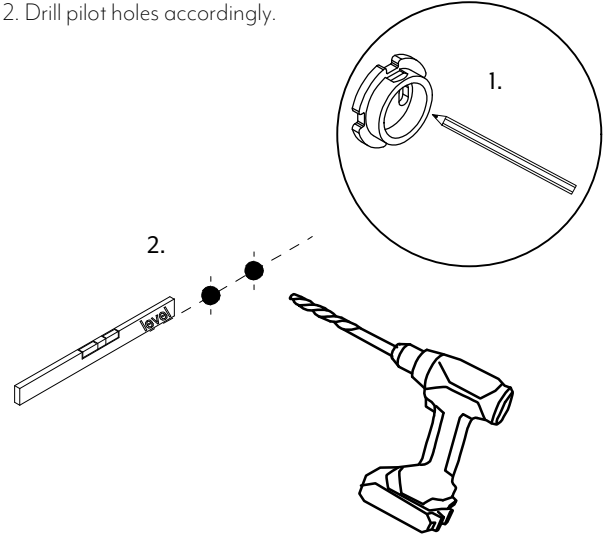




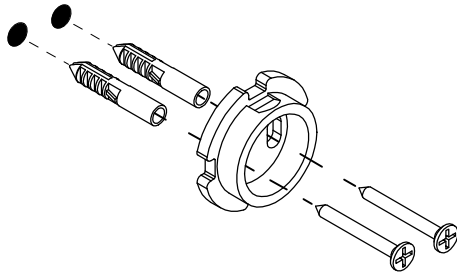


- 3 Depending on wall construction, insert wall plugs and screw bracket to wall with provided screws.

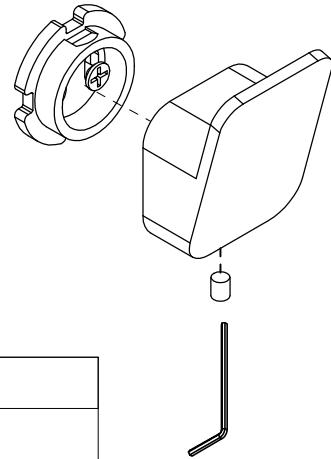

- 4 Install robe hook onto bracket and tighten grub screw.




WHAT'S IN THE BOX					
1 x Robe hook		2 x Fixing screw		1 x Grub screw	
1 x Robe hook bracket		2 x Wall plug		1 x Allen key	



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

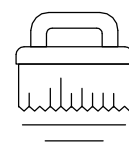

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material