

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

Domestic / Commercial

MATERIAL

Stainless Steel 304

MOUNTING HARDWARE INCLUDED


Yes

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

ABI
INTERIORS


- 1 Measure out location of fixing bracket holes. 665-675mm
Remove grub screws and brackets from rail.

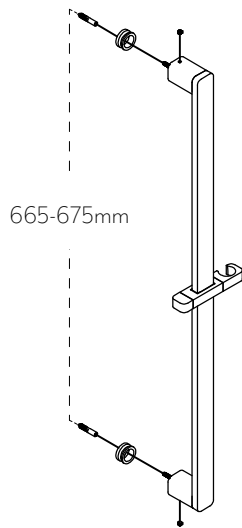


- 2 Drill holes with appropriate drill bit and install plugs into wall.

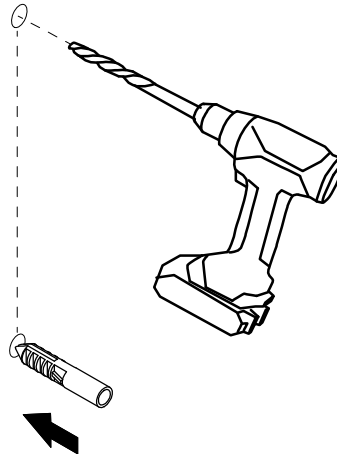

- 3 Screw brackets to the wall using provided screws.

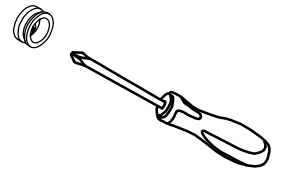


- 4 Install shower rail onto brackets and tighten grub screws with provided Allen Key.



IN THE BOX

1 x Shower Rail



2 x Wall plug



2 x M4 Screw




2 x Bracket



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

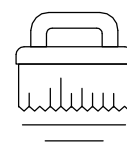

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material