




Top View

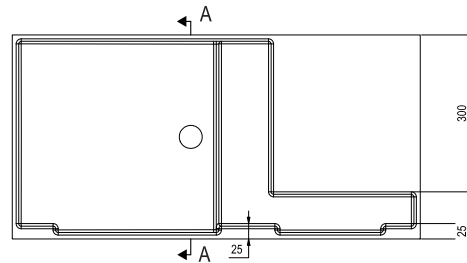

Bottom View

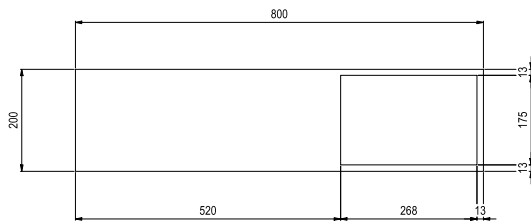

Front View

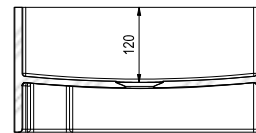

Section A:A

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

Domestic

MATERIAL

Solid Surface

INSTALLATION

Wall Mount, recommended with Wall Mount Spout/Mixer

OVERFLOW

No

CAPACITY

16L

RIM THICKNESS


13mm

INSTALLATION GUIDE


This product must be installed by a licensed plumber.
This is a general installation guide - there are many factors that are involved that can alter the installation method.
This product install must comply with AS/NZS 3500.




- 1 Check the desired height of basin from floor.

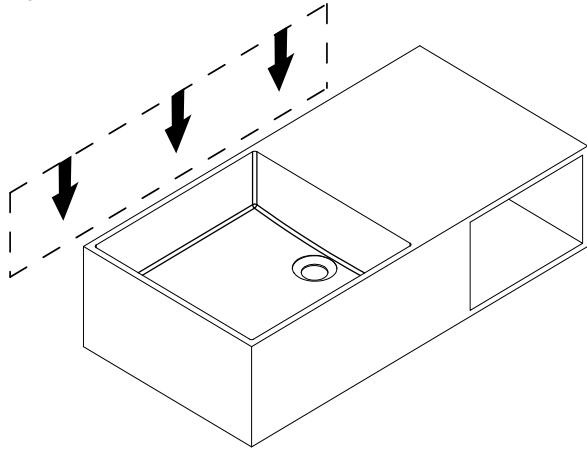

- 2 Fit waste and trap to basin.

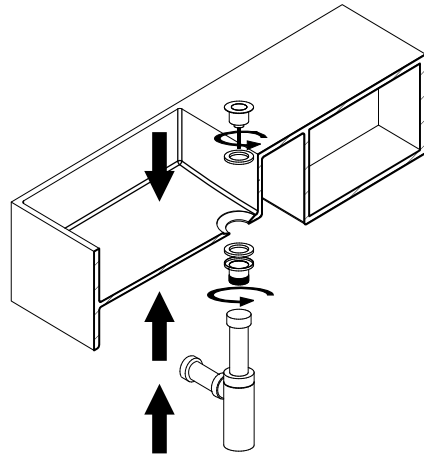


- 3 Hold basin against wall aligning outlet of trap with waste pipe. Extend telescopic trap up or down to find desired height & cut waste to suit trap.

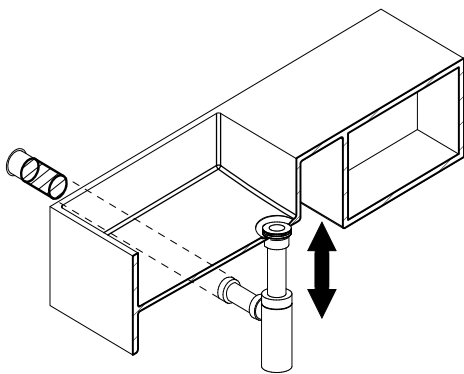


- 4 If correct height and position is suitable, level the top of the basin & mark out desired position.

Drill holes through the back of basin into structure within wall with a wood drill bit at maximum 450mm centres.
Fix basin into structural support in wall.

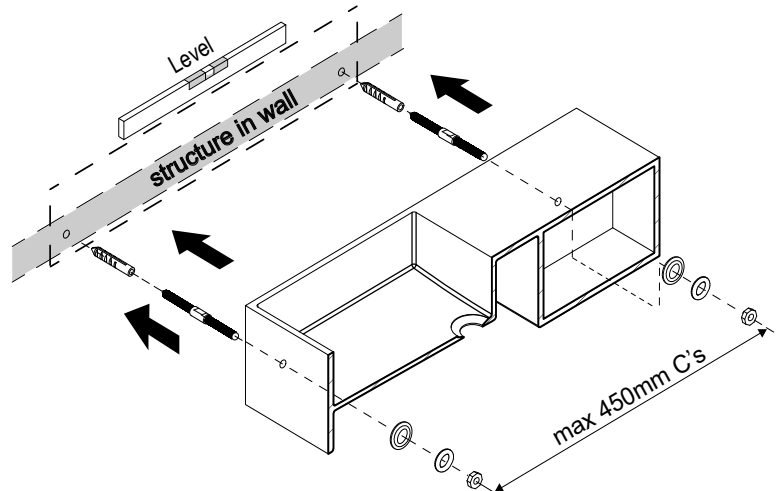

- 5 Secure plumbing to basin and wall outlet. Test by running water through the waste. Place the cover plate over drain. Silicon top and sides of basin if necessary.

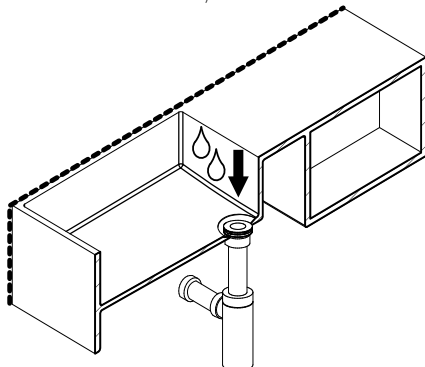

IN THE BOX		2 x Wall Plug		2 x Metal washer
		2 x Hanger bolt		2 x Nut
		2 x Plastic washer		1 x Basin



Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.