

**Note:** Dimensions are nominal measurements only

## SPECIFICATIONS

RECOMMENDED USE Domestic

MATERIAL Acrylic

WEIGHT 55kg

OVERFLOW Yes


CAPACITY 280L

# INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber.  
This is a general installation guide - there are many factors that are involved that can alter the installation method.  
This product install must comply with AS/NZS 3500.




- 1 Allow for 90mm clearance from the underside of bath to floor.

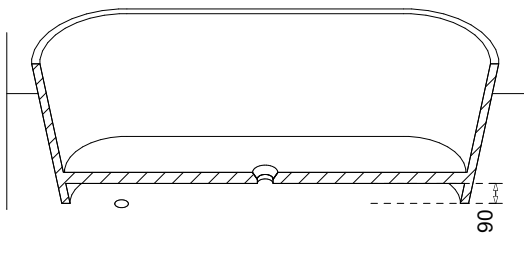


- 2 Mark position of bath to determine length of drainage from floor waste to bath outlet.

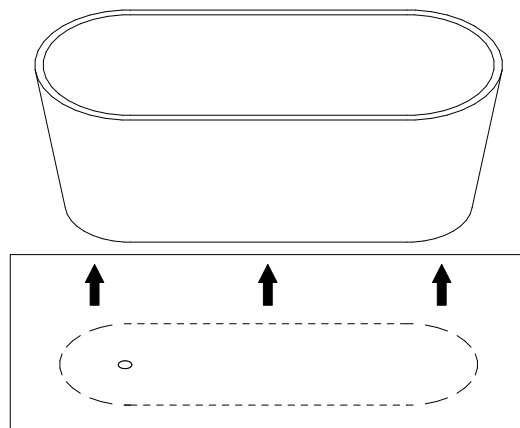


- 3 Plan out drainage connection to floor waste & alter if necessary.

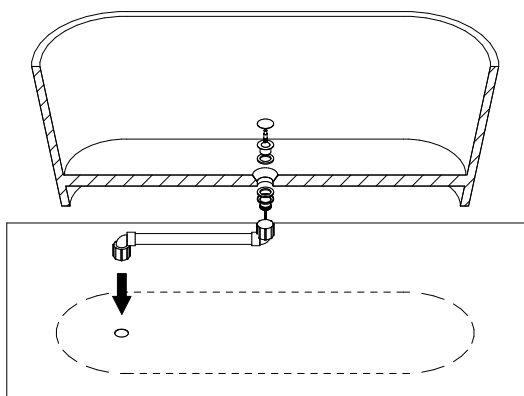


- 4 Fit plug waste into bath outlet, seal & tighten as required.

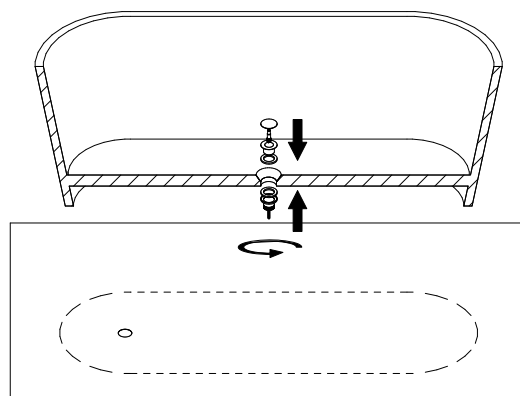

- 5 Fit out drainage connection to underside of bath. Position bath & connect drainage to floor waste.

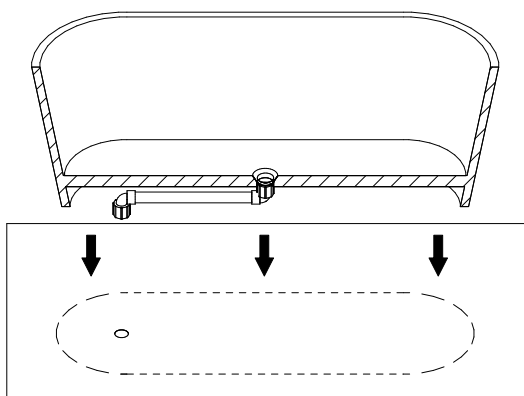

- 6 Silicone around base of bath if necessary.

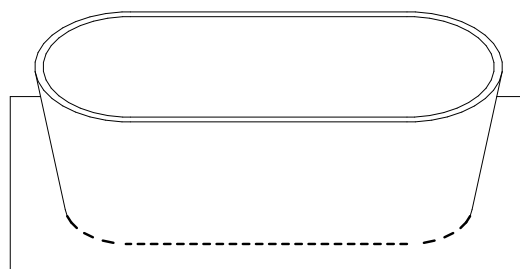

Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.