



/ | D | SOLA DIVERTER BACKPLATE, SLEEVE & KNOB JOP - SPECIFICATION

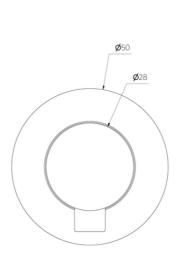

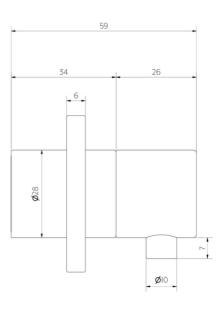

Side View

Front View

Note: Dimensions are nominal measurements only

SPECIFICATIONS	
RECOMMENDED USE	Domestic / Commercial
MATERIAL	316 Stainless Steel

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.



Please refer to IN-WALL MINIMAL DIVERTER MIXER BODY - 304 SS install guide & SOLA - MINIMAL HANDLE KIT install guide for initial steps.




Screw sleeve onto diverter nut.

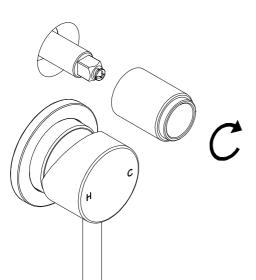



Insert plastic spacer into sleeve, slide diverter back plate over sleeve, then push handle onto the end of the diverter.

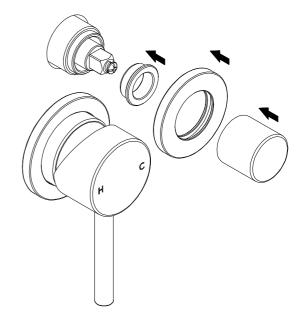



(3)


Screw grub screw into handle with provided Allen Key.



Screw diverter stick onto handle. Test and commission

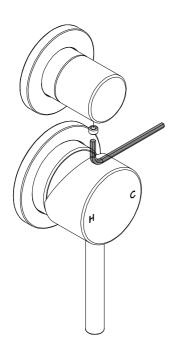




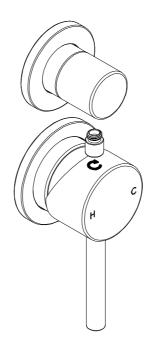



DO NOT use cream cleaners or bleach. These substances are abrasive

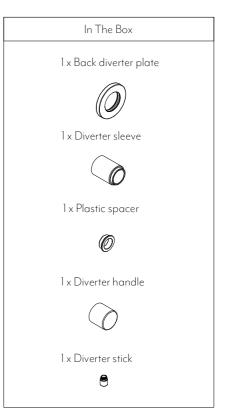



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material