

Note: Dimensions are nominal measurements only


SPECIFICATIONS

1/2 INCH MALE ADAPTOR INSTALLATION GUIDE




Note: This product must be installed by a licensed tradesperson.
This is a general installation guide - there are many factors that are involved that can alter the installation method.

① Apply teflon tape to 1/2 inch male adaptor.

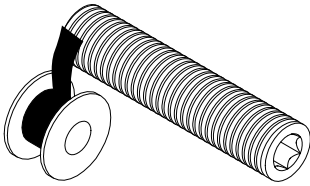

② Fit 1/2 inch male adaptor to female BP and tighten with a 12 mm metric Allan key.

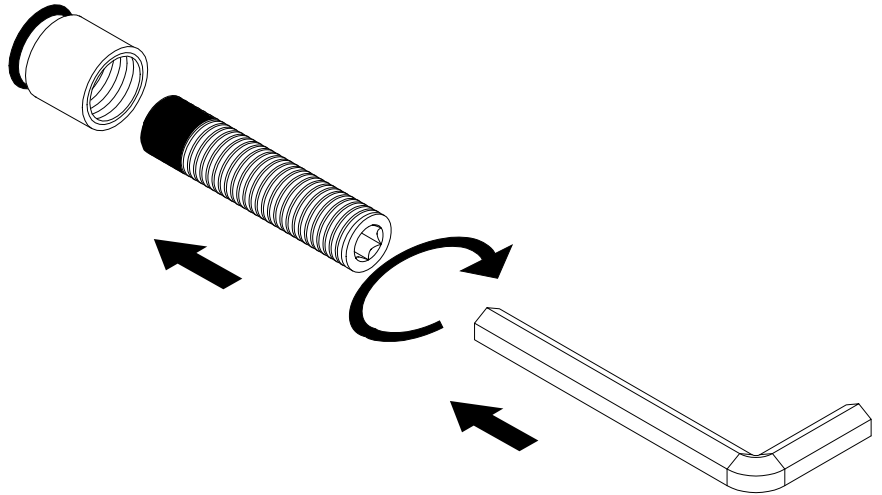

③ Cut 1/2 inch male adaptor to suit wall thickness and product.

