

ELYSIAN THERMOSTATIC CEILING SHOWER RAIL SET WITH BATH SPOUT

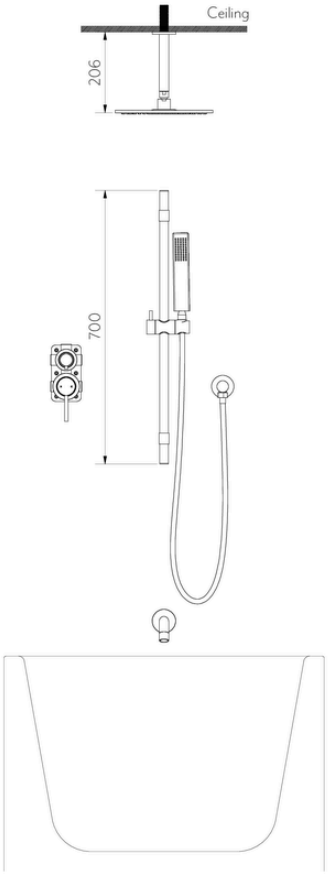

Front View

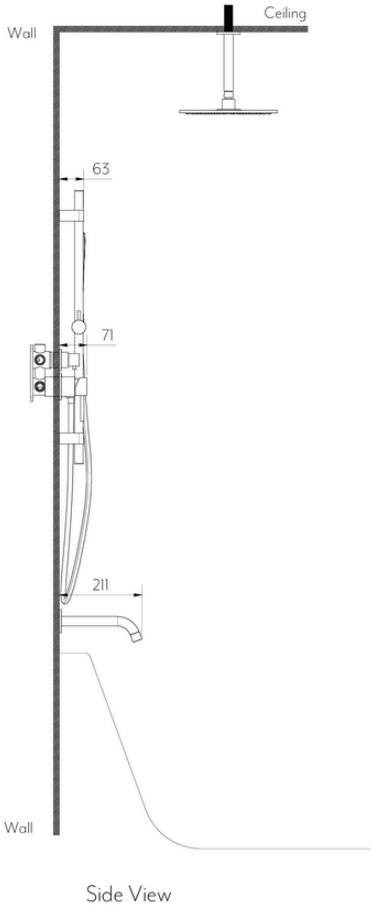

Side View


Note: Dimensions are nominal measurements only

SPECIFICATIONS


RECOMMENDED USE	Domestic/Commercial
BOX	Box 1: Shower Dropper 150mm Box 2: Shower Head Round 250mm Box 3: Rounded Rectangle Hand Shower Box 4: Shower Hose Box 5: Round Shower BP Box 6: Elysian Adjustable Shower Rail Box 7: Wall Mounted Spout Box 8: Thermostatic Minimal 3-Outlet In-Wall Box 9: Elysian Thermostatic Handle Kit Box 10: Elysian Thermostatic Diverter Handle Kit Box 11: 1/2 Male Thread Adapter
MATERIAL	See individual products

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd

SHOWER DROPPER 150MM

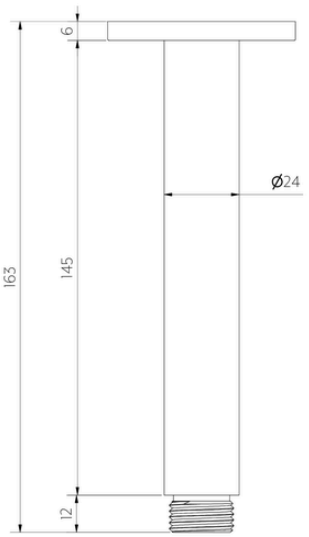

Front View

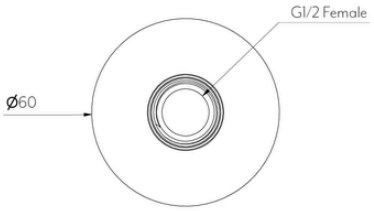

Bottom View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE	Domestic/Commercial
MATERIAL	Solid Brass
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C,an approved tempering valve must be fitted


Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd

INSTALLATION GUIDE


This product must be installed by a licensed tradesperson.

This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with the standards in your respective country and must be adhered to by your licensed tradesperson.

1. Slide back plate onto spout. Ensure o-ring is firmly gripping the spout and creating a tight seal.

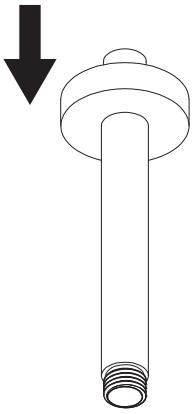

2. Apply the teflon tape to the brass nipple. Twist the spout on and hand tighten. Push back plate to the wall surface.

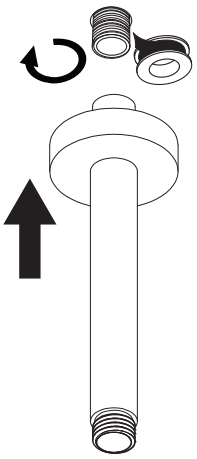



Regularly clean with mild liquid detergent or soap and water.




DO NOT use cream cleaners or bleach. These substances are abrasive.




DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.

SHOWER HEAD ROUND 250MM

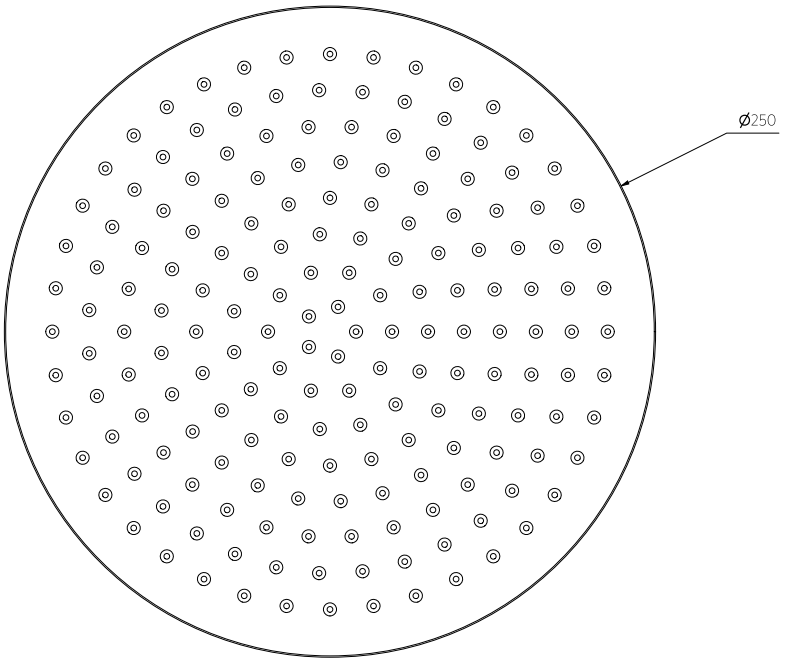

Bottom View

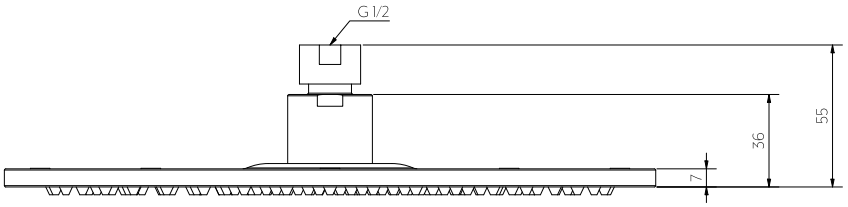

Front View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE	Domestic
MATERIAL	Solid Brass
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C,an approved tempering valve must be fitted

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

1 Ensure o-ring is fitted inside the ball joint connector.

2 Fasten ball joint and shower head to arm with spanner using a cloth to ensure not to damage finish.

*Shower arm and back plate not included.

Note: Please take care not to damage the flow controller whilst connecting.

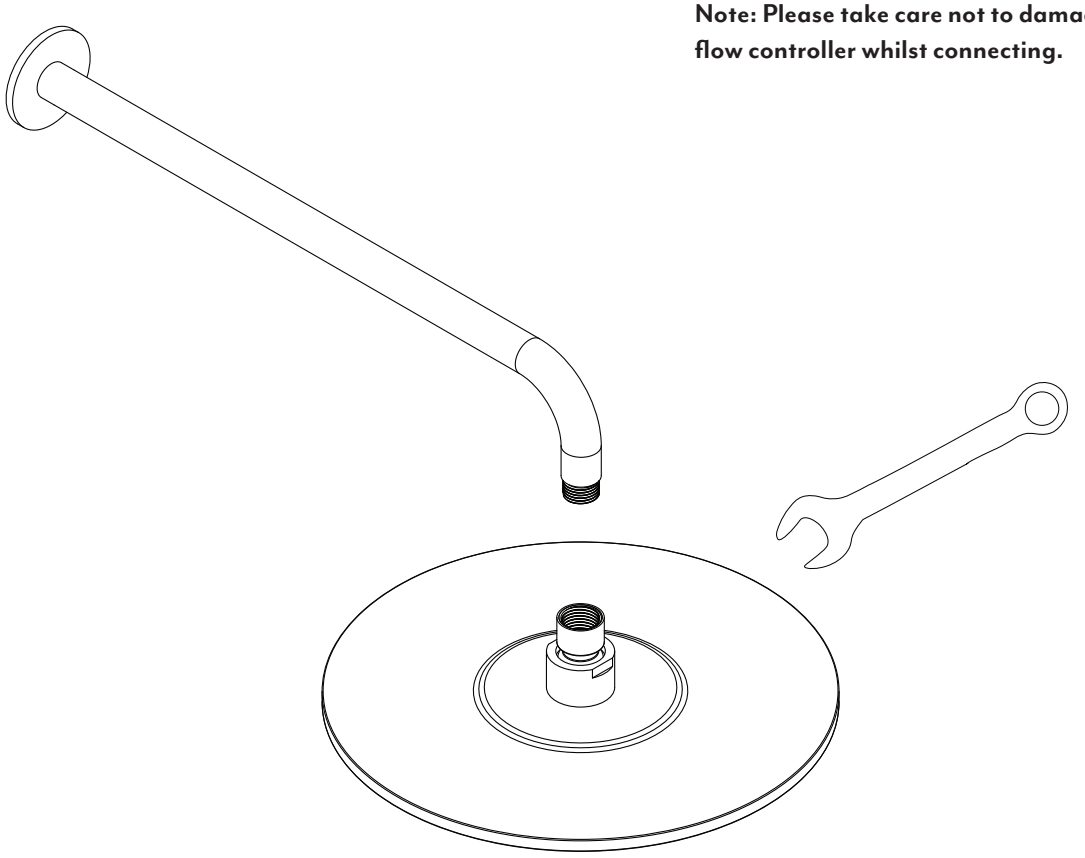

IN THE BOX


- 1x O Ring
- 1x Shower Head

Regularly clean with mild liquid detergent or soap and water

DO NOT use cream cleaners or bleach These substances are abrasive

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

ROUNDED RECTANGLE HAND SHOWER

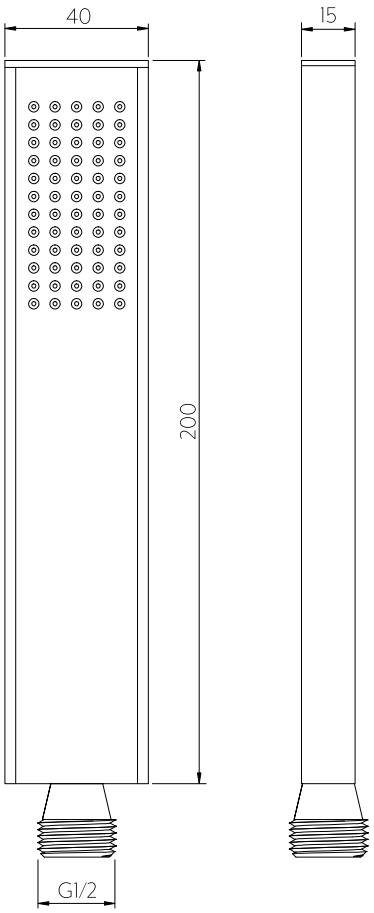

Front View Side View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE	Domestic
MATERIAL	Solid Brass
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C,an approved tempering valve must be fitted

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd


INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

STEP ONE: Ensure flat washer is fitted inside the hose end.

STEP TWO: Connect the swivelling cone end of hose in a clockwise direction onto the Vino Hand Shower and hand tighten

Note: Please take care not to damage the flow controller whilst connecting.

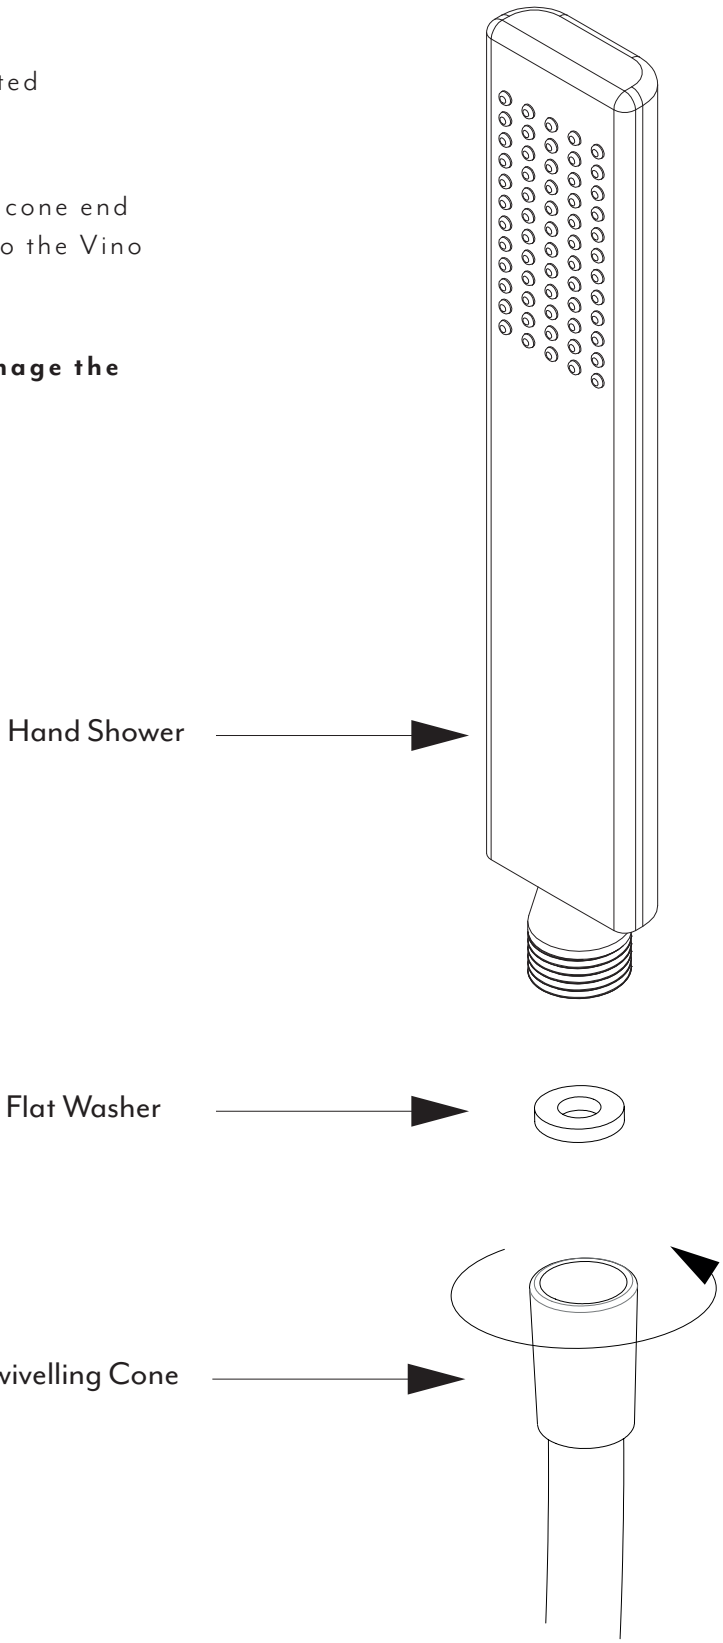



Regularly clean with mild liquid detergent or soap and water.




DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.

SHOWER HOSE

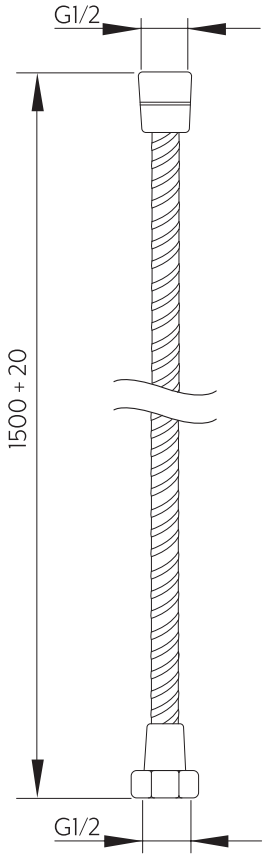


Note: Dimensions are nominal measurements only

SPECIFICATIONS


RECOMMENDED USE	Domestic
MATERIAL	Stainless Steel
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C,an approved tempering valve must be fitted

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd


ROUND SHOWER BP

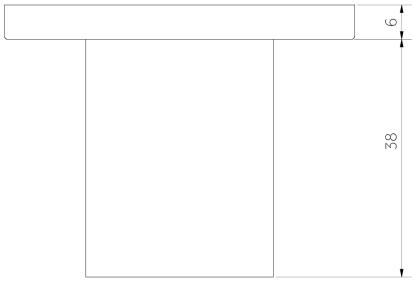

Top View

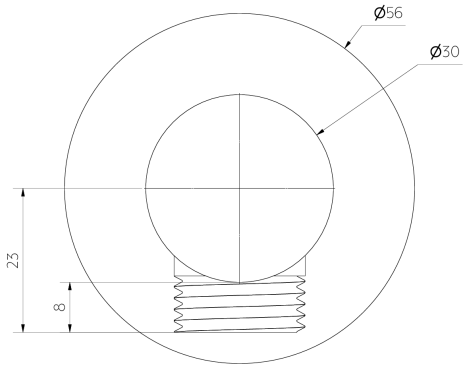

Front View

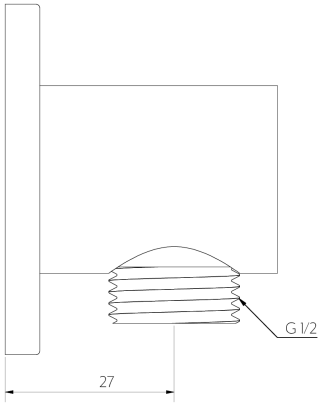

Side View

Note: Dimensions are nominal measurements only

SPECIFICATIONS


RECOMMENDED USE	Domestic
MATERIAL	Solid Brass
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C,an approved tempering valve must be fitted

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd


INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

1 Slide backplate onto water outlet.

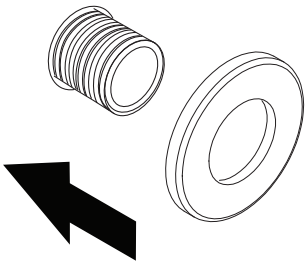

2 Apply the teflon tape to the brass outlet pipe. Twist the BP on and hand tighten.

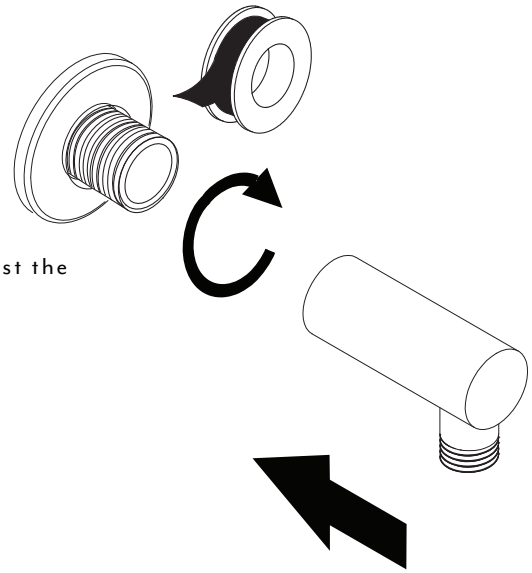

WHAT'S IN THE BOX	
	
1x Backplate	1x BP Body



Regularly clean with mild liquid detergent or soap and water.




DO NOT use cream cleaners or bleach. These substances are abrasive.




DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.

ELYSIAN ADJUSTABLE SHOWER RAIL

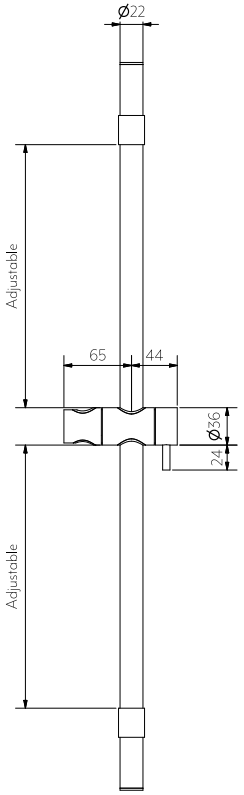

Front View

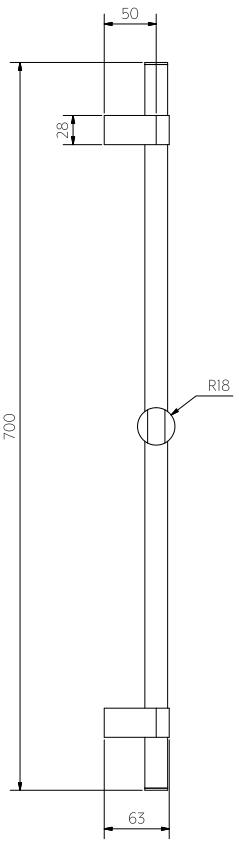

Side View

Note: Dimensions are nominal measurements only


SPECIFICATIONS

RECOMMENDED USE	Domestic
MATERIAL	Solid Brass
MOUNTING HARDWARE INCLUDED	Yes, 2x masonry screw, 2 x wall plug

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd


INSTALLATION GUIDE

This product must be installed by a licensed tradesperson.
This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with the standards in your respective country and must be adhered to by your licensed tradesperson.

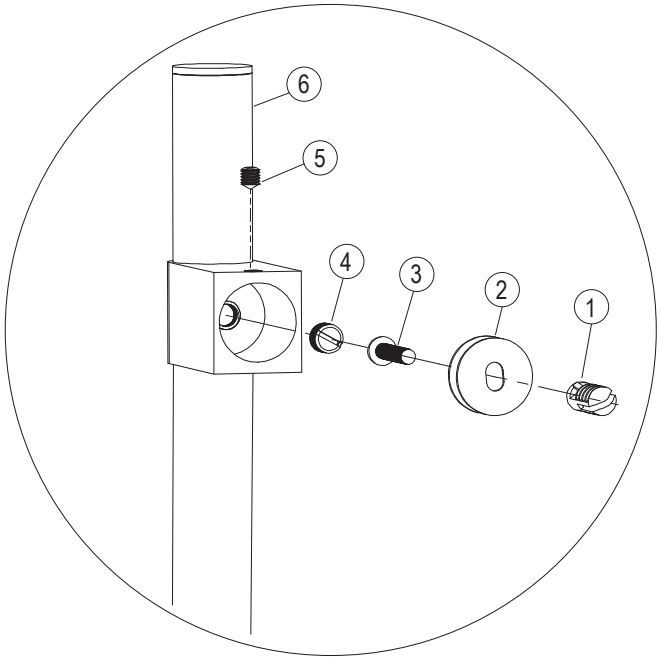

Whats in the box

1. 2 x Wall Plug
2. 2 x Brass fixing bracket
3. 2 x Screw
4. 2 x Large Grub Screw
5. 2 x Sml Grub Screw
6. 1 x Shower Rail

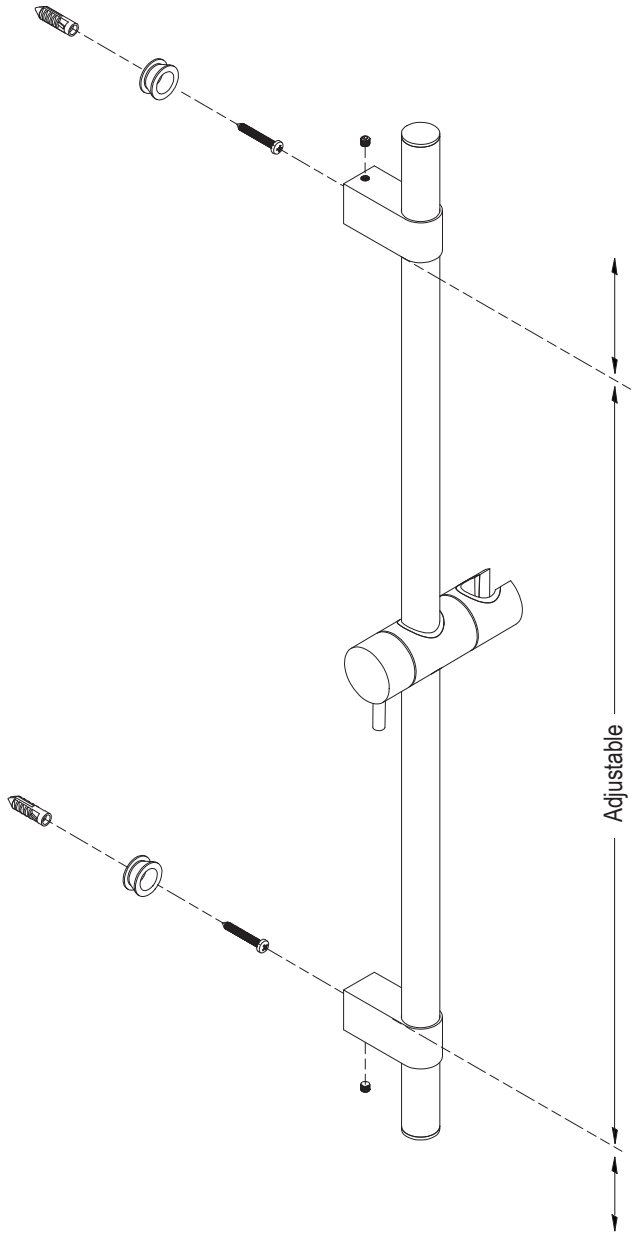

1. Unfasten small grub screw and remove brass fixing bracket
2. Loosen large grub screw with a screw driver and slide horizontal members into desired arrangement, retighten grub screw.
3. Measure new distance between large grub screws. Mark wall with new distance.
4. Drill holes with masonry drill bit (not on hammer) & fit wall plugs using a rubber mallet.
5. Screw the brass fixing bracket into the plugs.
6. Fit shower rail onto the brass fixing brackets and retighten small grub screw using the allen key.



Regularly clean with mild liquid detergent or soap and water.




DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.

WALL MOUNTED SPOUT

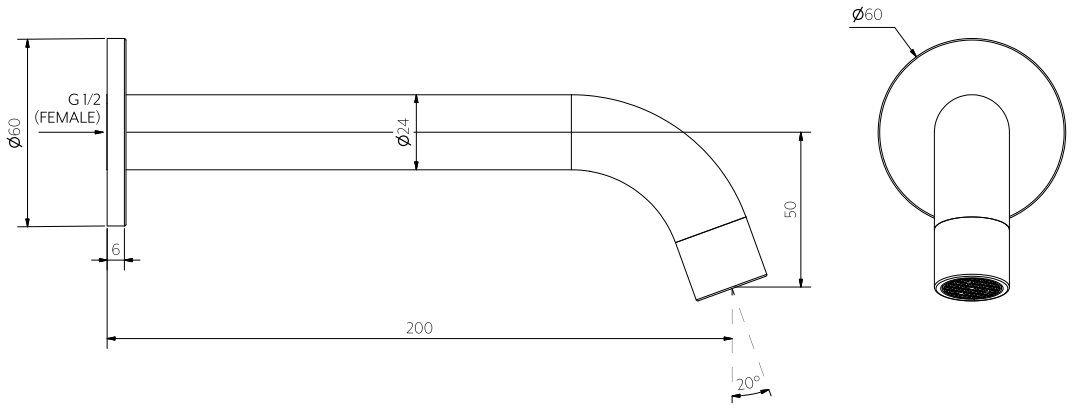

Side View

Front View

Note: Dimensions are nominal measurements only

SPECIFICATIONS


RECOMMENDED USE	Domestic
MATERIAL	Solid Brass
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C,an approved tempering valve must be fitted

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd


INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

1. Slide the back plate onto the spout, make sure that the rubber is firmly in place to protect the spout and stop the back plate from moving around.

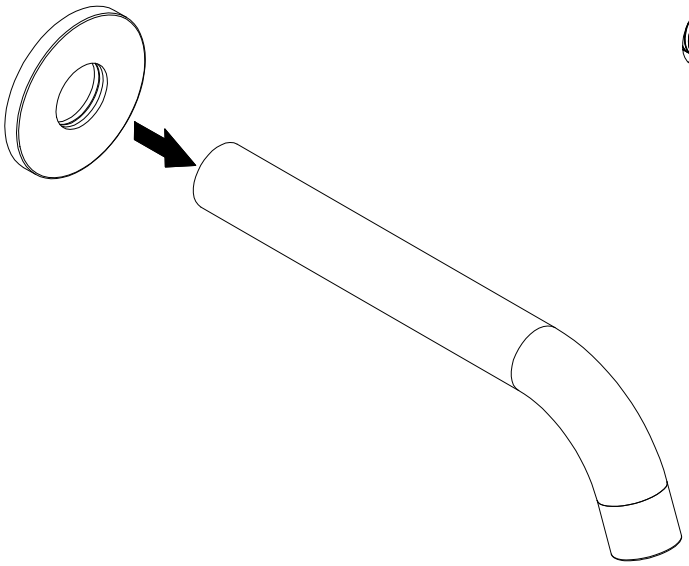


2. Apply teflon thread tape to the breech point, twist the spout on and hand tighten.

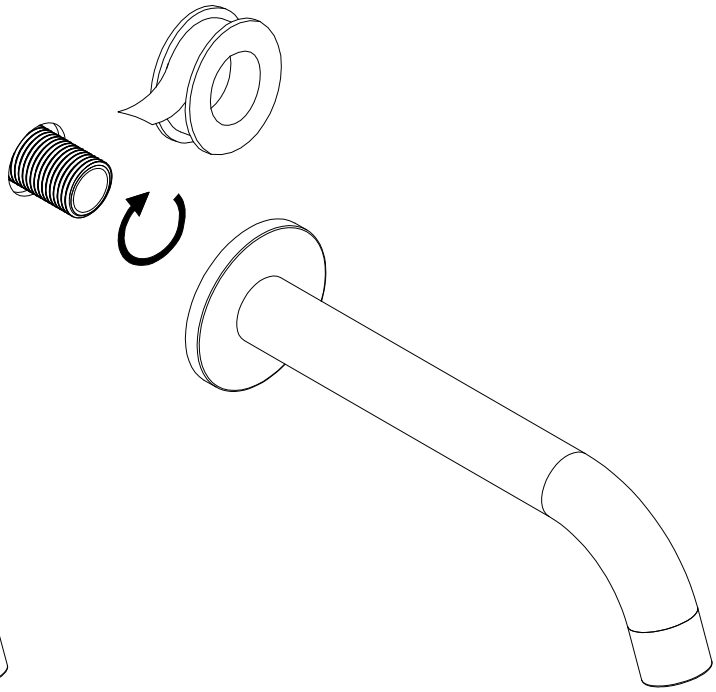


IN THE BOX



1 x Back Plate

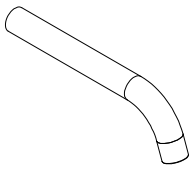


1 x Spout




1 x Adaptor



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

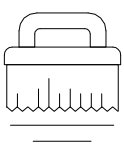


DO NOT use cleaning pads with abrasive surfaces as this may scratch the material


1/2 INCH MALE ADAPTOR INSTALLATION GUIDE

Note: This product must be installed by a licensed tradesperson.
This is a general installation guide - there are many factors that are involved that can alter the installation method.


1 Apply teflon tape to 1/2 inch male adaptor.

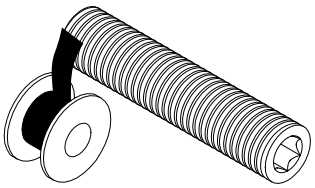


2 Fit 1/2 inch male adaptor to female BP and tighten with a 12 mm metric Allan key.

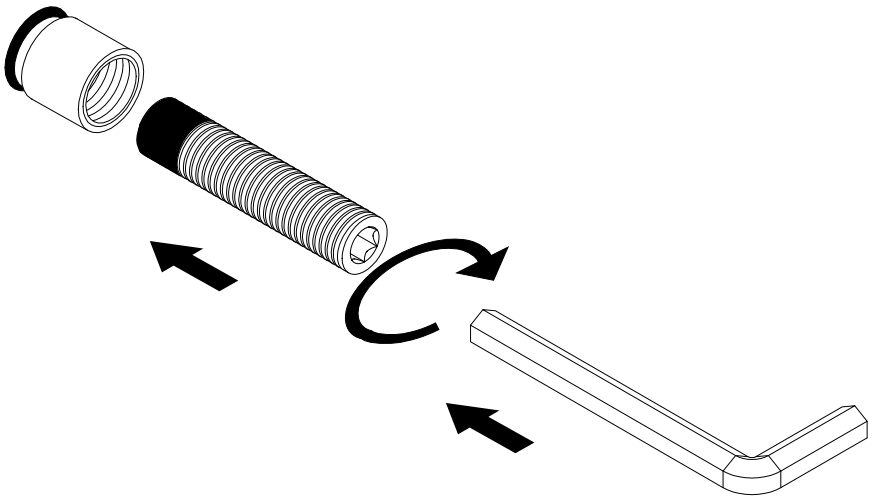


3 Cut 1/2 inch male adaptor to suit wall thickness and product.

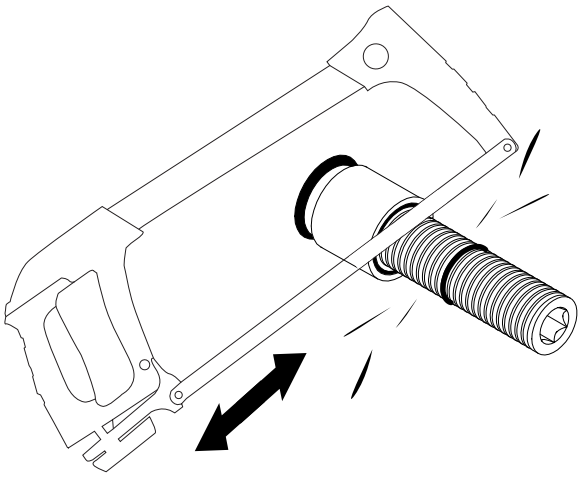


THERMOSTATIC MINIMAL 3-OUTLET IN-WALL

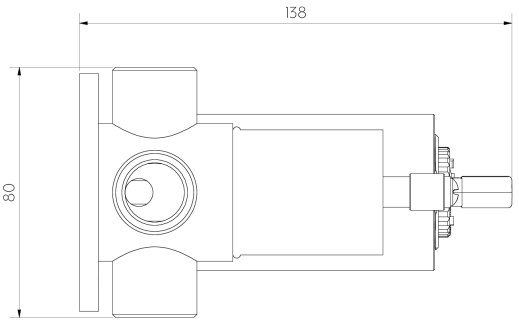

Top View

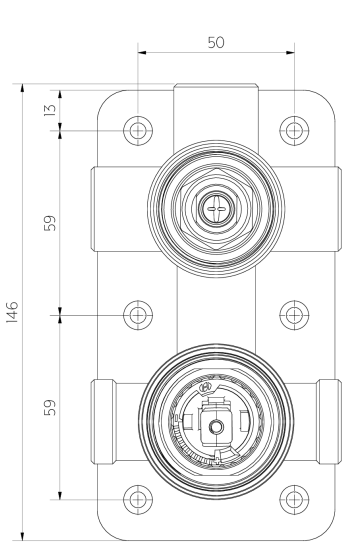

Front View

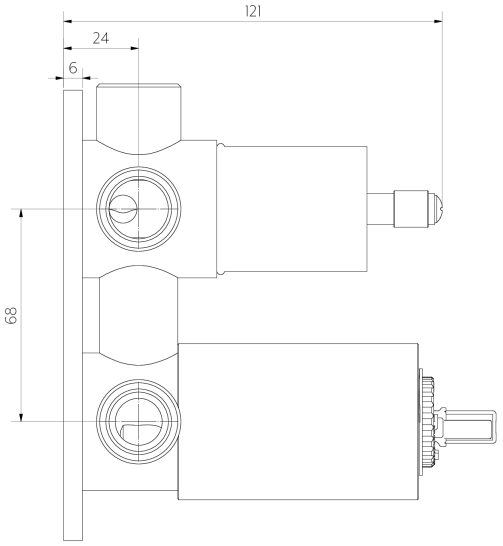

Left View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE	Domestic / Commercial
MATERIAL	Stainless Steel 304
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C,an approved tempering valve must be fitted

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

ABI INTERIORS


INSTALLATION - 3-OUTLET DIVERTER - IN-WALL COMPONENT

1 Determine the position for your diverter and mixer handles. Adjust the depth to ensure optimal set-out considering the wall finish material.
Ensure the body is level in all directions.

Fix to the wall structure using the appropriate screws.

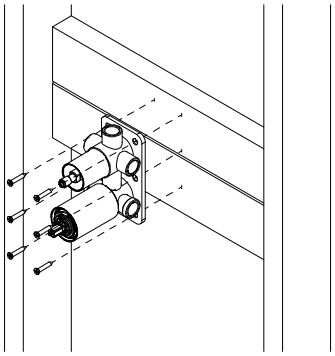



2 Connect the water pipes. Flush pipes to ensure no debris is in the lines. Use appropriate thread sealant.
Check and ensure no leaks before proceeding.

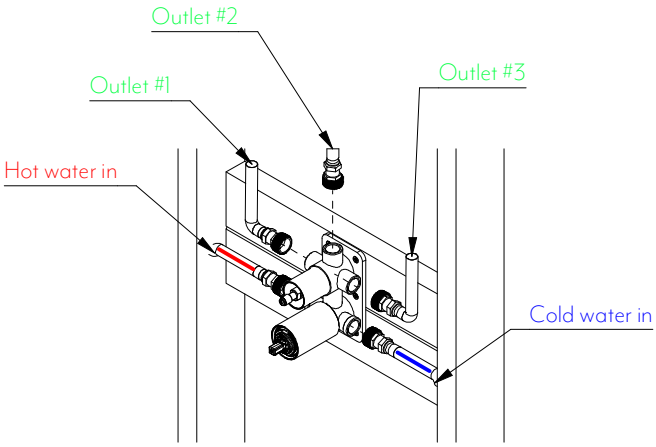


3 Apply the wall and wall finish. Trim sleeve with a knife so that the edge is flush with the wall finish.*
Silicone between waterproof sleeve and wall.

*Mark and remove sleeves for easier cutting if neccessary.

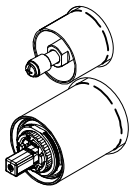


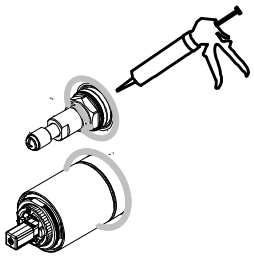


4 Recommended set-back range 60-90mm from the wall finish surface.

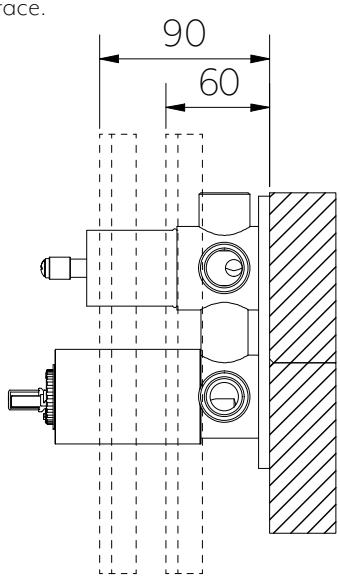

In-wall Sub Components

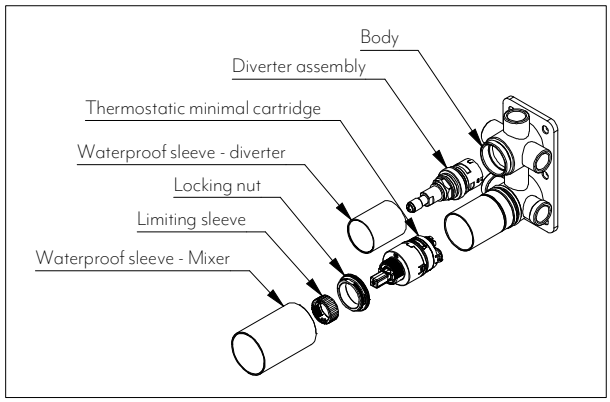

In The Box



1 x 3-Outlet Diverter In-wall Body



6 x Wall plugs




6 x Fixing screws



Regularly clean with mild liquid detergent or soap and water




DO NOT use cream cleaners or bleach. These substances are abrasive

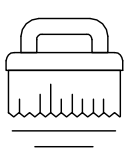


DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

ELYSIAN THERMOSTATIC HANDLE KIT - STAINLESS STEEL

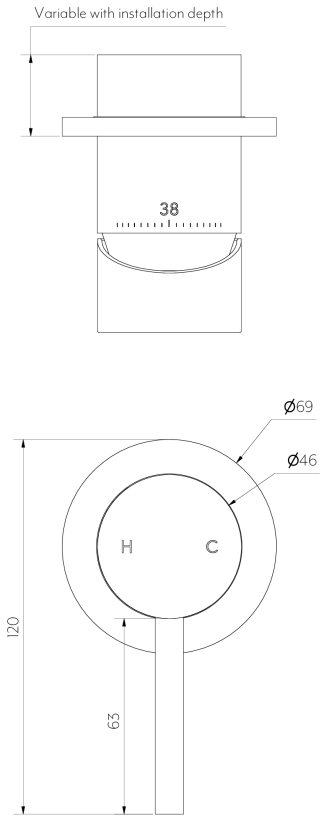

Front View

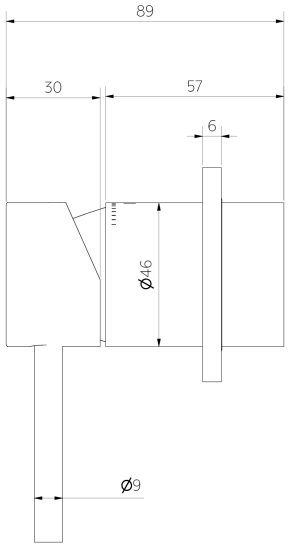

Side View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE	Domestic/ Commercial
MATERIAL	304 Stainless Steel
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C,an approved tempering valve must be fitted

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd


INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.


ABI INTERIORS


INSTALLATION - HANDLE KIT

1. Push on the sleeve and backplate. Screw the dome on.

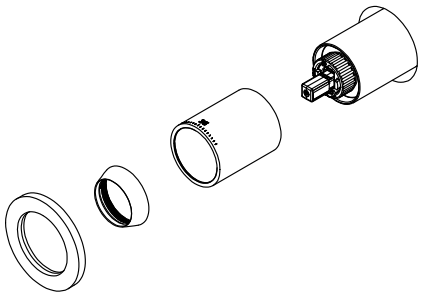

2. 1. Push the handle onto the cartridge.
   2. Fasten the grub screw underneath.
   3. Screw on the handle stick.

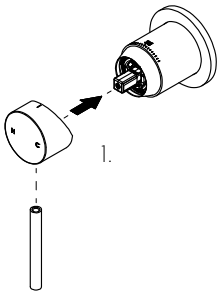


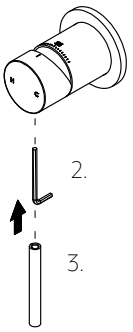


ADJUSTING THE LIMITING COLLAR

The limiting collar must be set so that the maximum temperature coming out of your shower head is no more than **43 degrees Celcius**. Please use a temperature gauge.

1. Unscrew the dome and remove the limiting sleeve with needle nose pliers.
2. Put the handle on and run the water, use the temperature gauge to check the water temperature at the shower head. Once it's at 43 degrees Celcius, leave it in position and remove the handle again.
2. Re-install the sleeve and position the limiting sleeve so that rotation is limited to the current position of the cartridge (43 degrees Celsius).

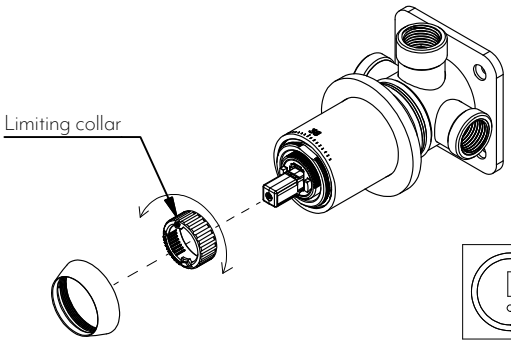


Be careful of
HOT WATER

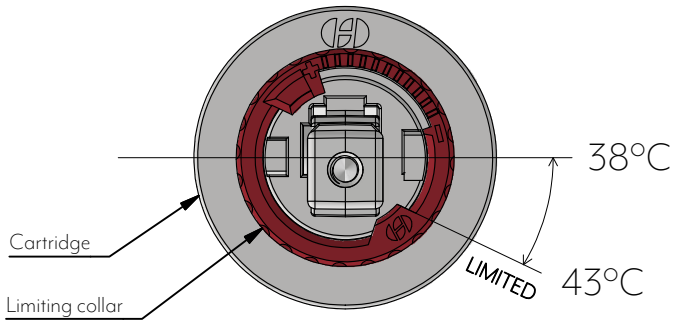


SET 38 DEGREES CELSIUS

Depending on your inlet water temperatures, you may need to rotate the sleeve so the display temperature of 38 degrees Celsius is aligned to the handle mark.

Do this while the handle is rotated to the correct angle that the outlet water from the shower head is 38 degrees celcius.

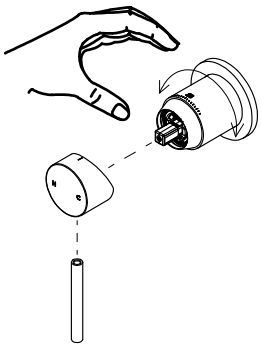


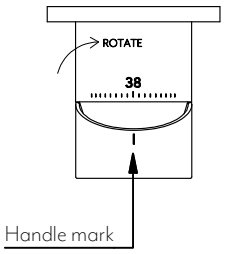


In The Box
on next page



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

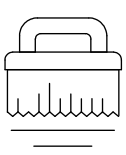

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

ABI INTERIORS

In The Box


1 x Handle body


1 x Dome



1 x Sleeve



1 x Handle stick


1 x Grub screw



1 x Allen key 3mm


Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

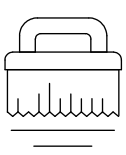
DO NOT use cleaning pads with abrasive surfaces as this may scratch the material


ELYSIAN THERMOSTATIC DIVERTER HANDLE KIT - SS

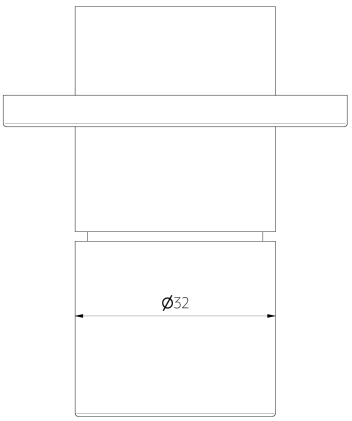

Top View

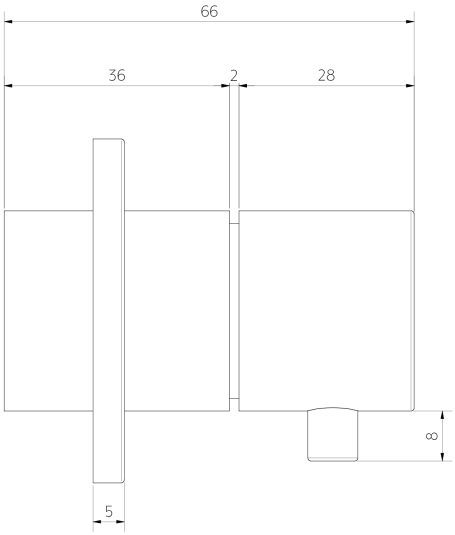

Side View

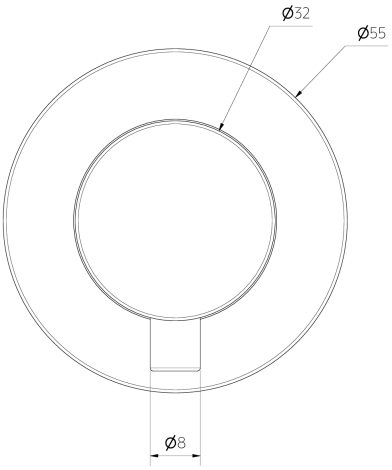

Front View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE	Domestic
MATERIAL	304 Stainless Steel

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd


INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.


ABI INTERIORS

INSTALLATION - DIVERTER HANDLE KIT

1. Screw on diverter sleeve.
   Slide diverter backplate onto the sleeve ensuring not to scratch.

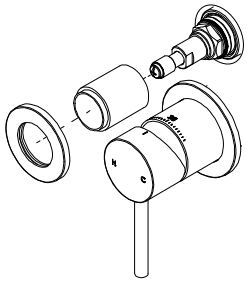


2. Install handle by tightening grub screw with provided Allen key.
   Screw on handle stem, using o-ring to tighten.

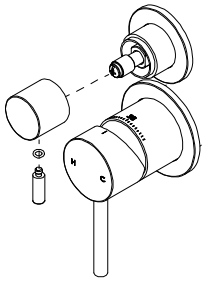


OPERATION

2 - Outlet variant

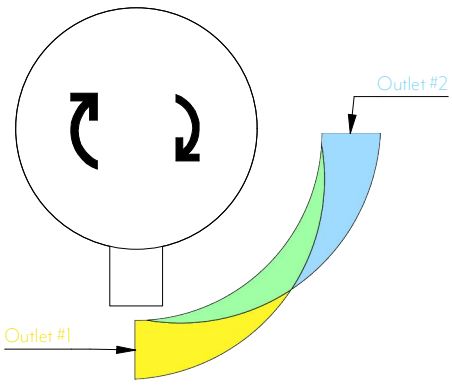

3 - Outlet variant

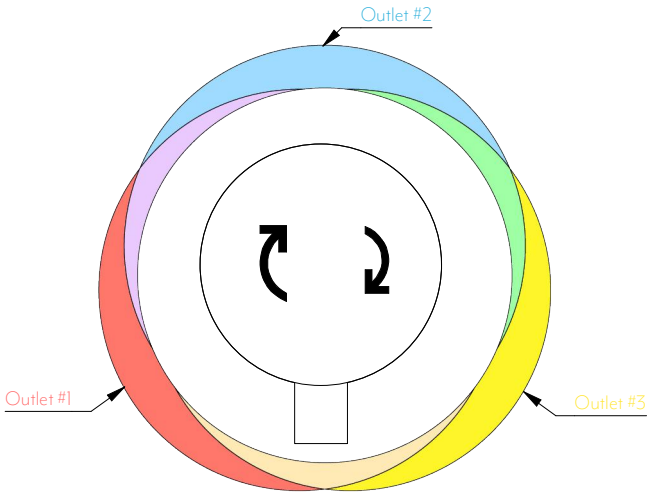

In the box

1 x Grub screw

1 x O-ring


1 x Handle stem



1 x Handle



1 x Allen key


1 x Diverter sleeve



1 x Backplate


Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

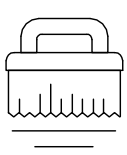
DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

1/2 MALE THREAD ADAPTER

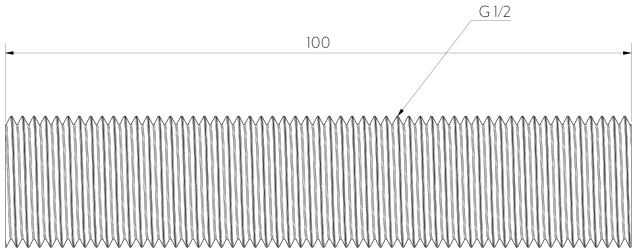

Side View

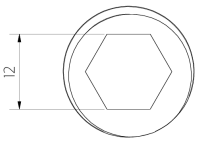

Front View

Note: Dimensions are nominal measurements only

SPECIFICATIONS


MATERIAL	Solid Brass

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd


1/2 INCH MALE ADAPTOR INSTALLATION GUIDE

Note: This product must be installed by a licensed tradesperson.
This is a general installation guide - there are many factors that are involved that can alter the installation method.

1 Apply teflon tape to 1/2 inch male adaptor.

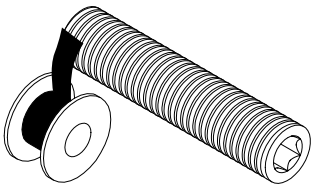

2 Fit 1/2 inch male adaptor to female BP and tighten with a 12 mm metric Allan key.

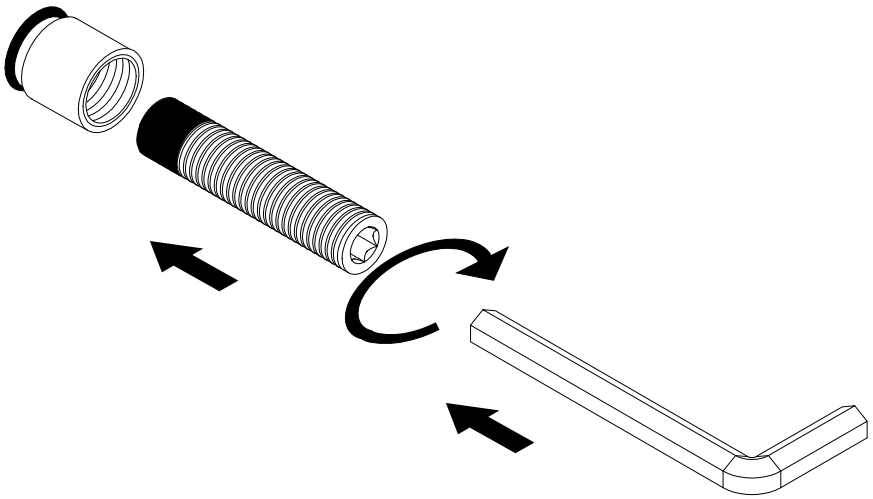

3 Cut 1/2 inch male adaptor to suit wall thickness and product.

