

KINGSLEY THERMOSTATIC CEILING SHOWER RAIL SET WITH BATH FILLER

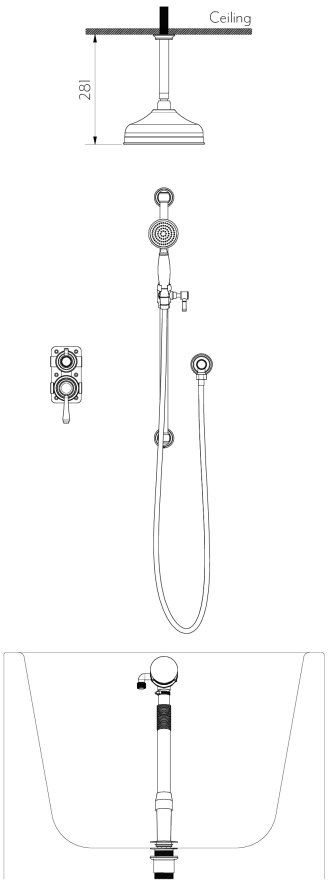

Front View

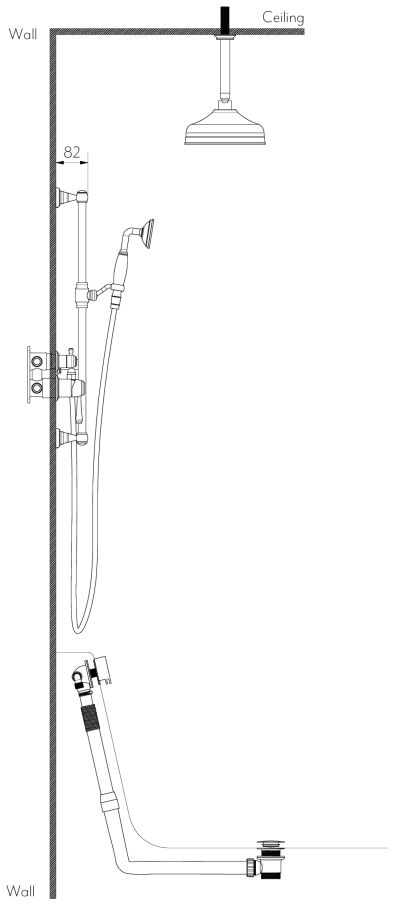

Side View


Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE | WARRANTY	Domestic/Commercial
BOX	Box 1: Kingsley Shower Dropper 150mm Box 2: Kingsley Shower Head Round Box 3: Kingsley Hand Shower Box 4: Shower Hose Box 5: Kingsley Round Shower BP Box 6: Kingsley Shower Rail Box 7: Bath Filler with Integrated Waste and Overflow Box 8: Thermostatic Minimal 3-Outlet In-Wall Box 9: Kingsley Thermostatic Handle Kit Box 10: Kingsley Thermostatic Diverter Handle Kit Box 11: 1/2 Male Thread Adapter
MATERIAL	See individual products

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd

KINGSLEY SHOWER DROPPER 150MM

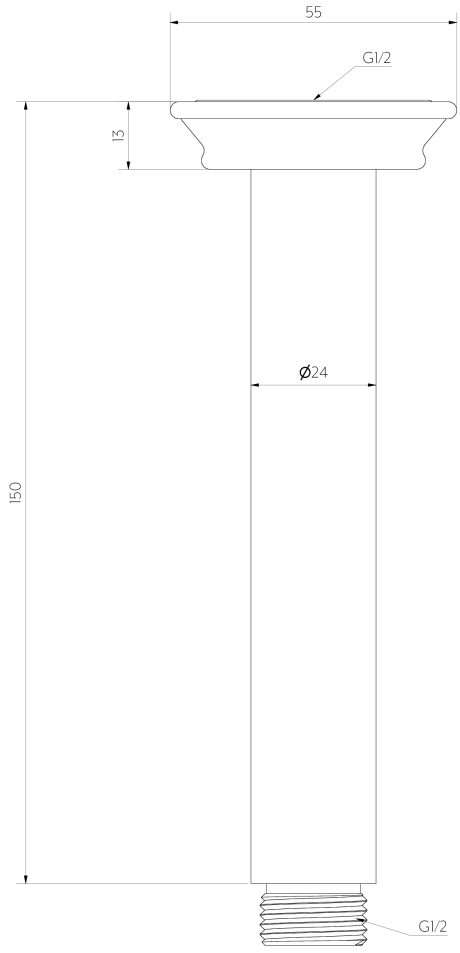

Front View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE	Domestic/Commercial
MATERIAL	Solid Brass
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C, an approved tempering valve must be fitted
PRESSURE RATING	Recommended minimum working pressure 0.2 Bar Recommended maximum working pressure 5 Bar Hot and cold water inlet pressure should be equal
SUITABLE HOT WATER UNITS	Storage tank: Yes Continuous flow: Yes Gravity fed: Suitable


Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

ABI INTERIORS

1. Slide back plate onto dropper. Ensure o-ring is firmly gripping the spout and creating a tight seal

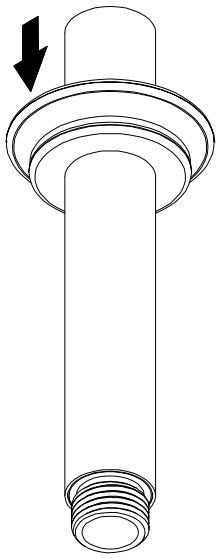

2. Apply the plumbing tape to the brass nipple. Twist the dropper on and hand tighten. Push back plate to the wall surface.

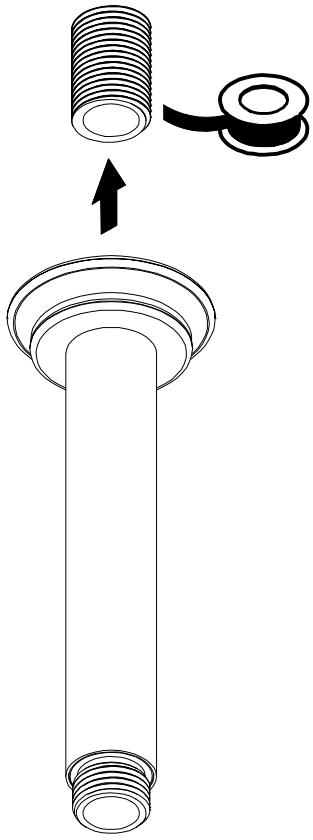

IN THE BOX

1x Backplate



1x Dropper






Regularly clean with mild liquid detergent or soap and water




DO NOT use cream cleaners or bleach. These substances are abrasive

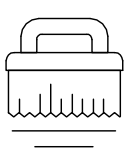


DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

KINGSLEY SHOWER HEAD ROUND

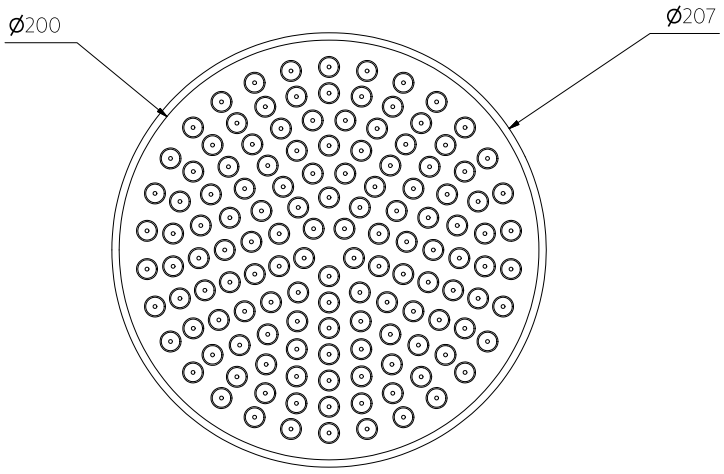

Bottom View

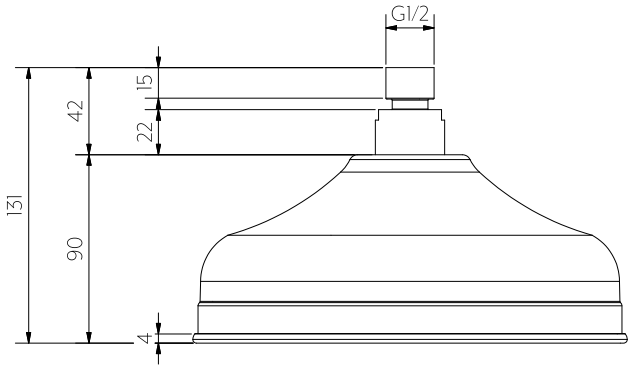

Front View

Note: Dimensions are nominal measurements only

SPECIFICATIONS


RECOMMENDED USE	Domestic
MATERIAL	Solid Brass
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C,an approved tempering valve must be fitted
PRESSURE RATING	Recommended minimum working pressure 0.2 Bar Recommended maximum working pressure 5 Bar Hot and cold water inlet pressure should be equal
SUITABLE HOT WATER UNITS	Storage tank: Yes Continuous Flow: Yes Gravity Feed: Suitable
WATER EFFICIENCY	Flow Rate 9L/min

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2022 Pty Ltd

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

1 Ensure the o-ring and restrictor are inside the threaded connecter piece.

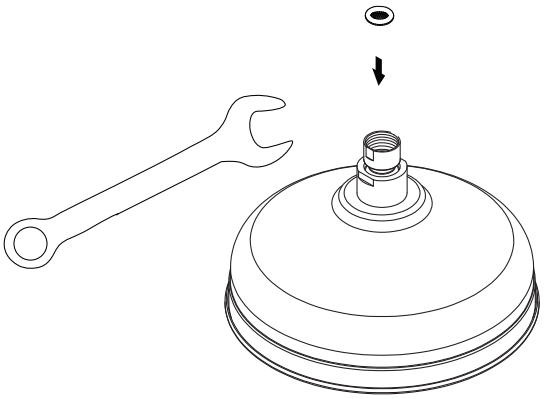

2 Fasten the shower head to arm with spanner using a cloth to ensure not to damage finish.

Note: Shower arm and back plate not included.

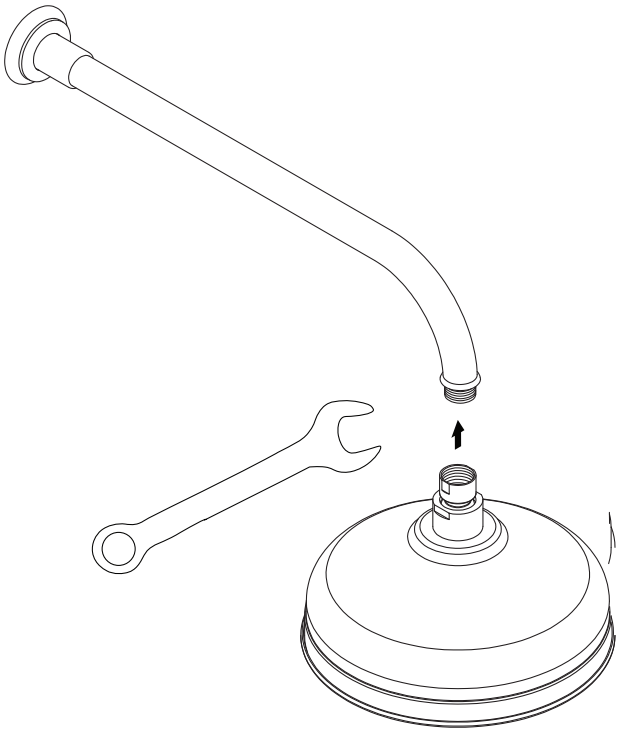

IN THE BOX

- 1x O Ring
- 1x Restricter
- 1x Shower Head



Regularly clean with mild liquid detergent or soap and water




DO NOT use cream cleaners or bleach These substances are abrasive




DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

KINGSLEY HAND SHOWER

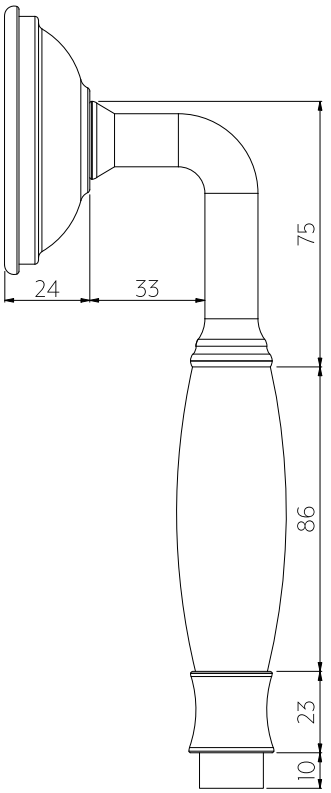

Side View

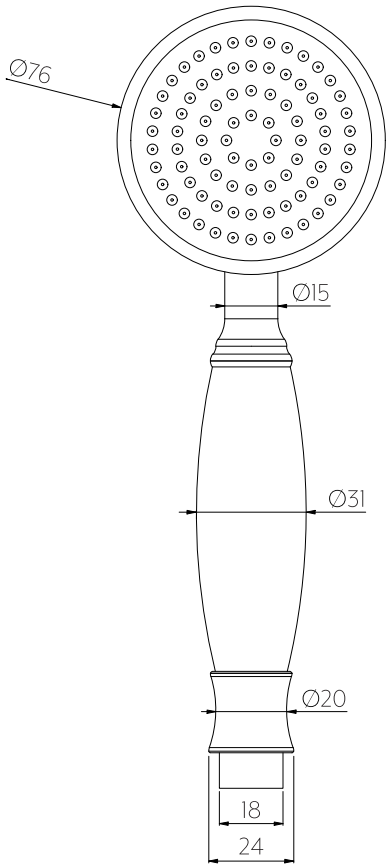

Front View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE	Domestic
MATERIAL	Solid Brass
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C,an approved tempering valve must be fitted
PRESSURE RATING	Recommended minimum working pressure 0.2 Bar Recommended maximum working pressure 5 Bar Hot and cold water inlet pressure should be equal
SUITABLE HOT WATER UNITS	Storage tank: Yes Continuous Flow: Yes Gravity Feed: Suitable
WATER EFFICIENCY	Flow Rate 8L/min

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd


INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

STEP ONE: Ensure flat washer is fitted inside the hose end.

STEP TWO: Connect the swivelling cone end of hose in a clockwise direction onto the Provincial Hand Shower and hand tighten

Note: Please take care not to damage the flow controller whilst connecting.

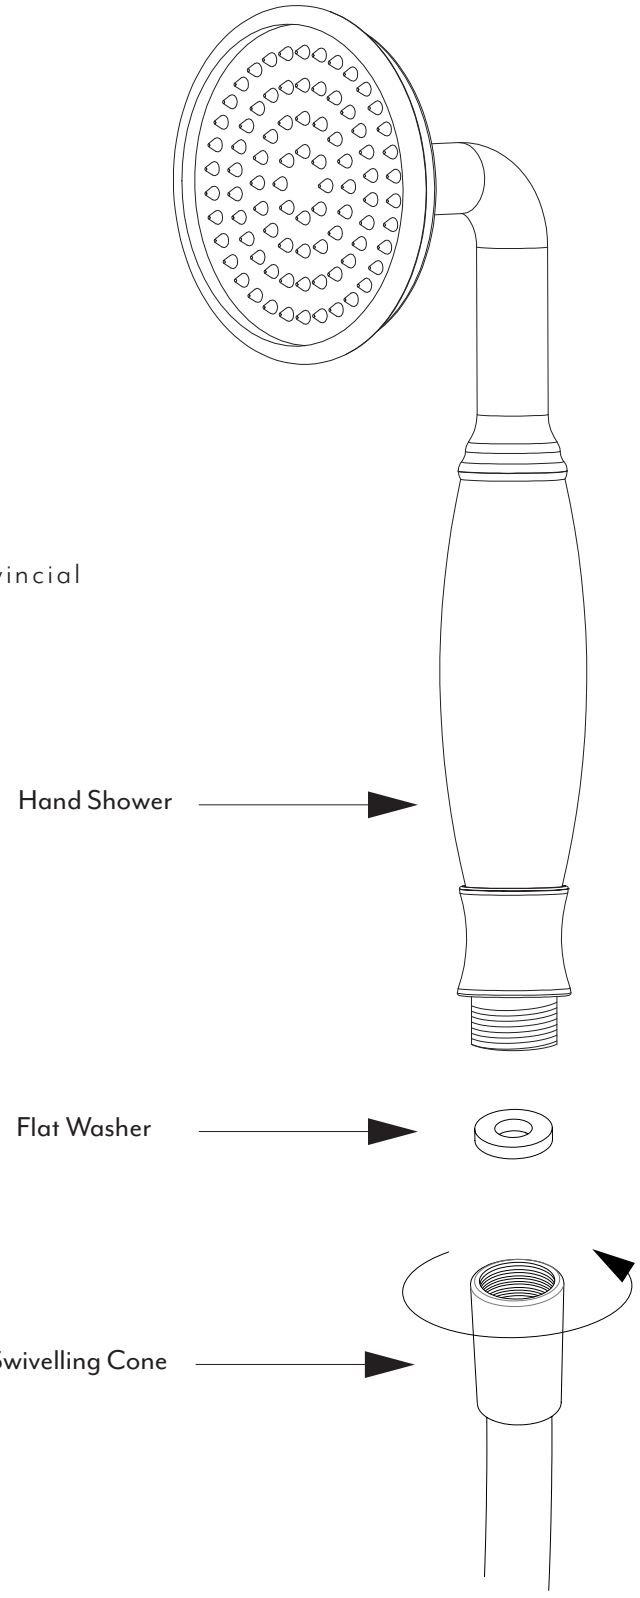



Regularly clean with mild liquid detergent or soap and water.




DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.

SHOWER HOSE

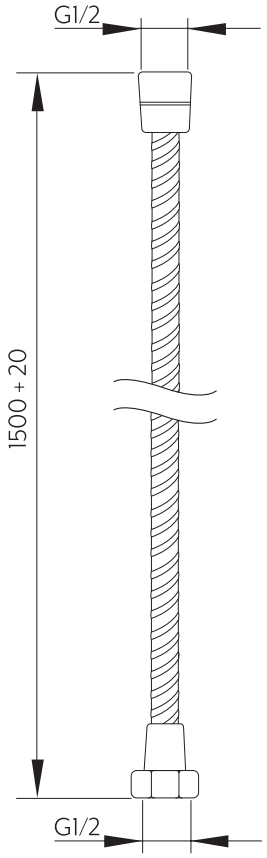


Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE	Domestic
MATERIAL	Stainless Steel
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C,an approved tempering valve must be fitted
PRESSURE RATING	Recommended maximum working pressure 5 Bar Hot and cold water inlet pressure should be equal

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd

KINGSLEY ROUND SHOWER BP

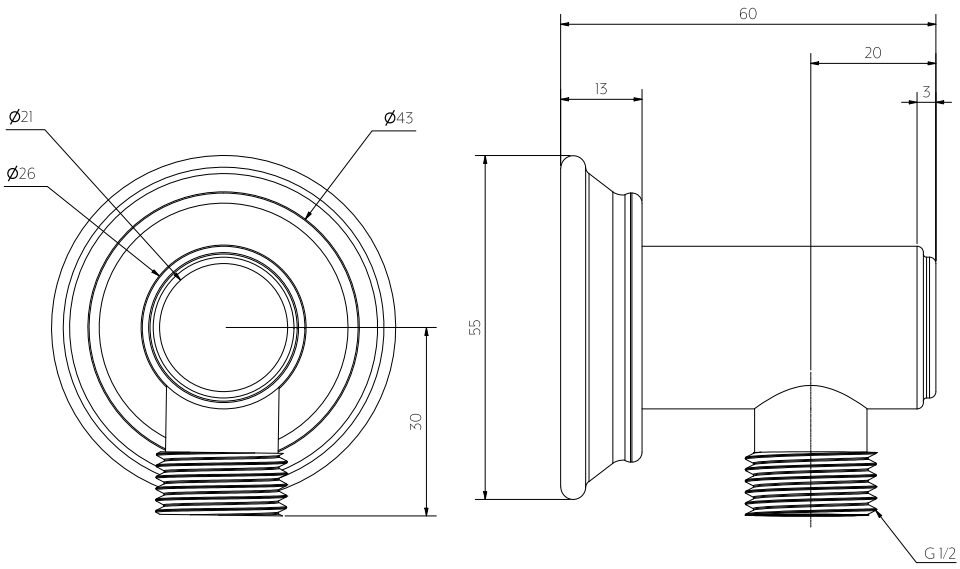

Note: Dimensions are nominal measurements only

SPECIFICATIONS


RECOMMENDED USE	Domestic
MATERIAL	Solid Brass
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C,an approved tempering valve must be fitted
PRESSURE RATING	Recommended minimum working pressure 0.2 Bar Recommended maximum working pressure 5 Bar Hot and cold water inlet pressure should be equal
SUITABLE HOT WATER UNITS	Storage tank: Yes Continuous Flow: Yes Gravity Feed: Suitable

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2022 Pty Ltd


INSTALLATION GUIDE


This product must be installed by a licensed tradesperson.
This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with the standards in your respective country and must be adhered to by your licensed tradesperson.

1 Slide back plate onto BP Body. Ensure o-ring is firmly gripping the spout and creating a tight seal.

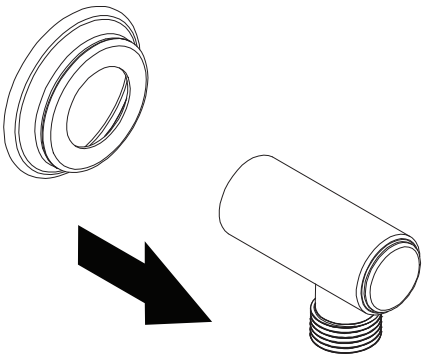

2 Apply the teflon tape to the brass outlet pipe. Twist the BP on and hand tighten. Push back plate to the wall surface.

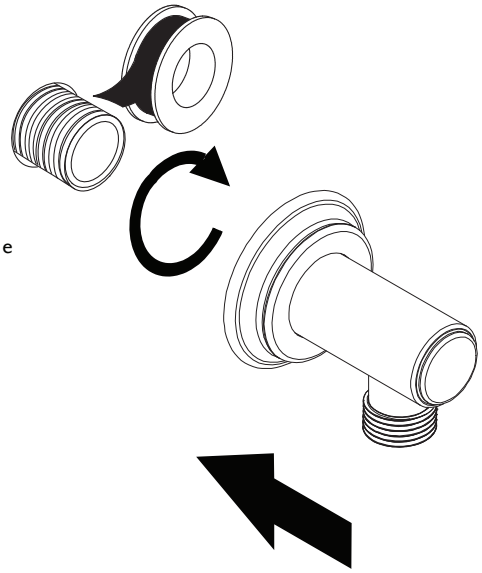

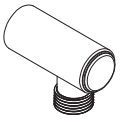WHAT'S IN THE BOX	
	
1x Back plate	1x BP Body



Regularly clean with mild liquid detergent or soap and water.




DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.

KINGSLEY SHOWER RAIL

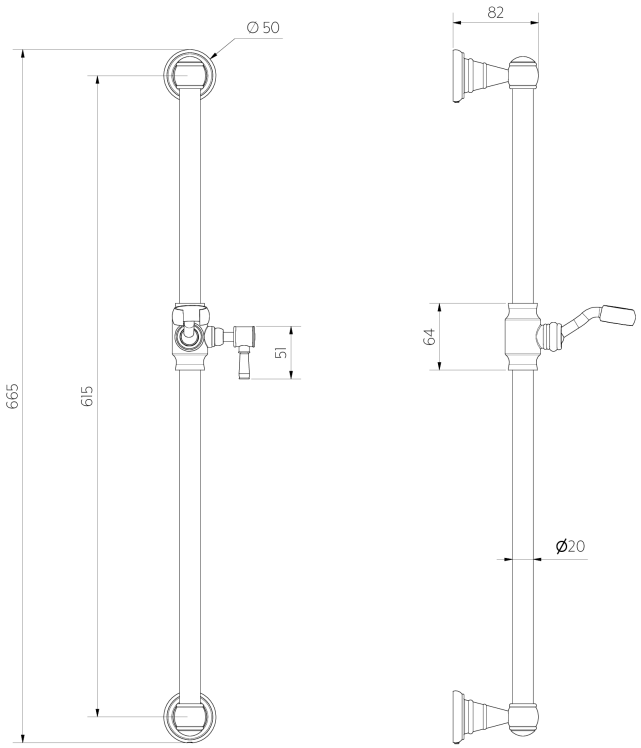

Front View

Side View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE	Domestic
MATERIAL	Solid Brass
MOUNTING HARDWARE INCLUDED	Yes, 4 x masonry screw, 4 x wall plug


Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd

INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

ABI INTERIORS


1. Measure centre to centre, brass fixing holes in rail.
2. Measure & mark desired position of the rail on the wall.
3. Drill holes with masonry drill bit & fit the plugs using a rubber mallet.
4. Remove all mountings with the supplied allen key.
5. Screw the mountings into the plugs.
6. Fit shower rail onto the mountings to wall using the allen key.

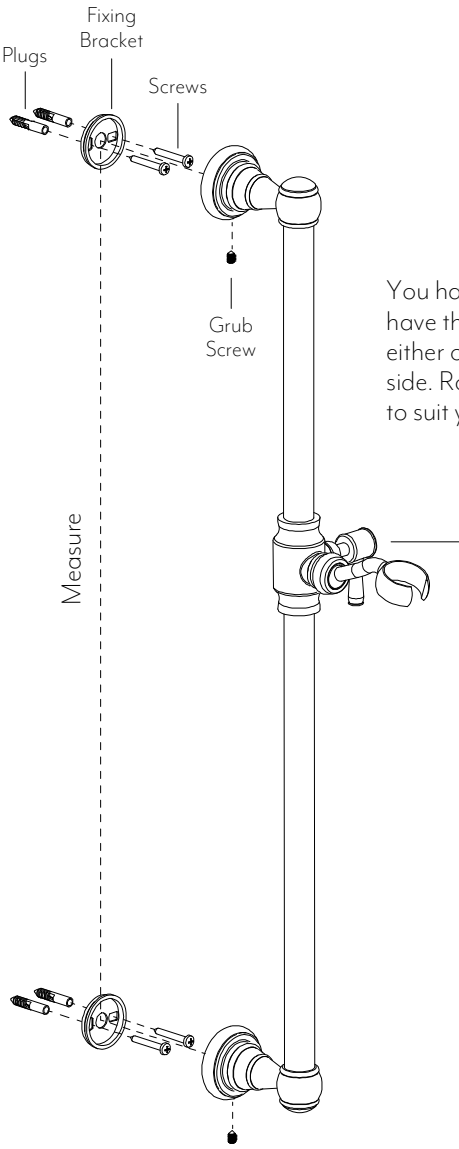


IN THE BOX	
4 x Plugs	1 x Shower Rail
2 x Mounting Brackets	
4 x Screws	
2 x Grub Screws	1 x Allen Key



Regularly clean with mild liquid detergent or soap and water




DO NOT use cream cleaners or bleach. These substances are abrasive

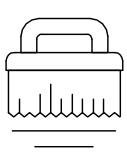

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

BATH FILLER WITH INTEGRATED WASTE AND OVERFLOW

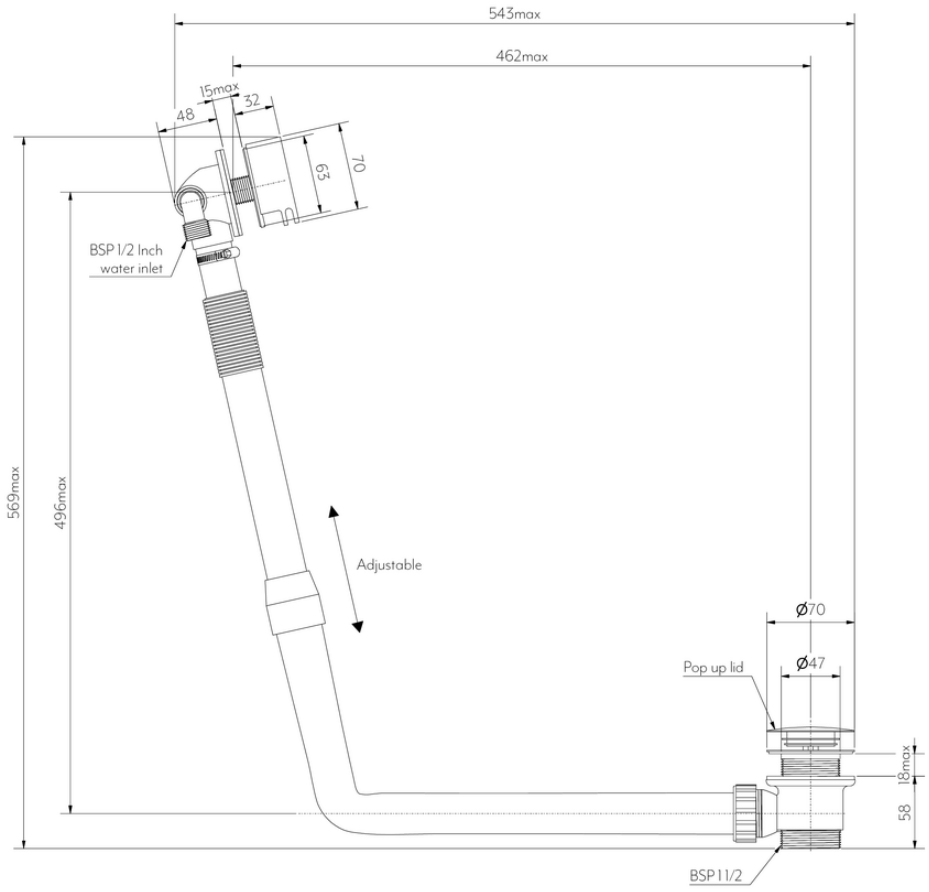

Side View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE	Domestic/ Commercial
MATERIAL	Solid Brass


Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

ABI INTERIORS


1. Install the plug and the other joining parts as shown below. Use silicone for a watertight seal. Attach the trap.

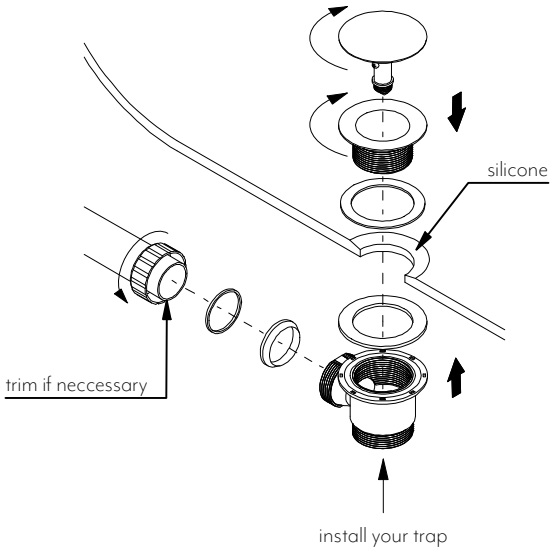


2. Attach the water outlet overflow base, connect the pipe and fasten the hose clamp.

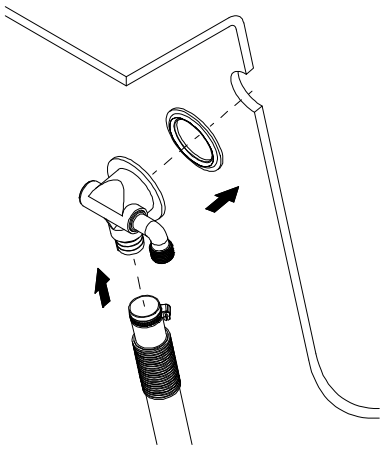

3. On the front side of the bath connect the other parts as shown below. Connect the BSP half inch to the tap.

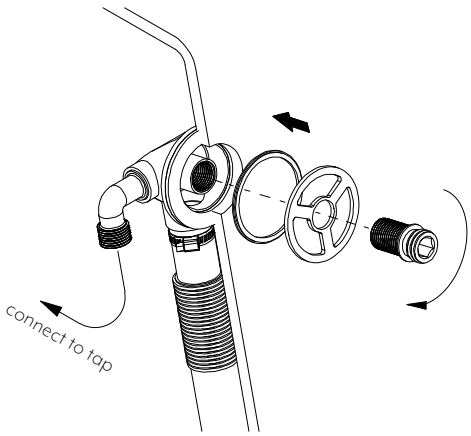


4. Attach the housing and fasten the grub screw underneath. Test for leaks and commission.

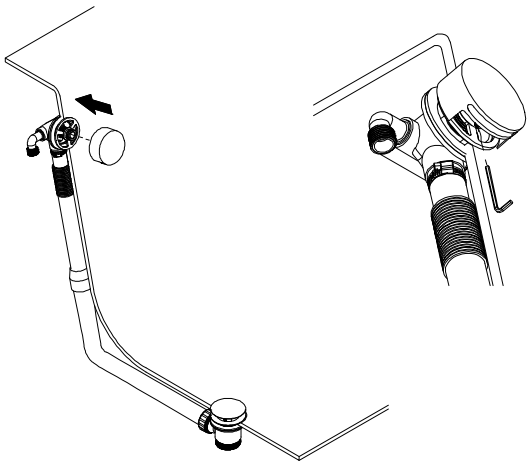




Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

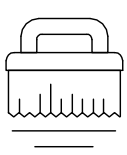


DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.


ABI INTERIORS

INSTALLATION WITH ASSEMBLY TAPS

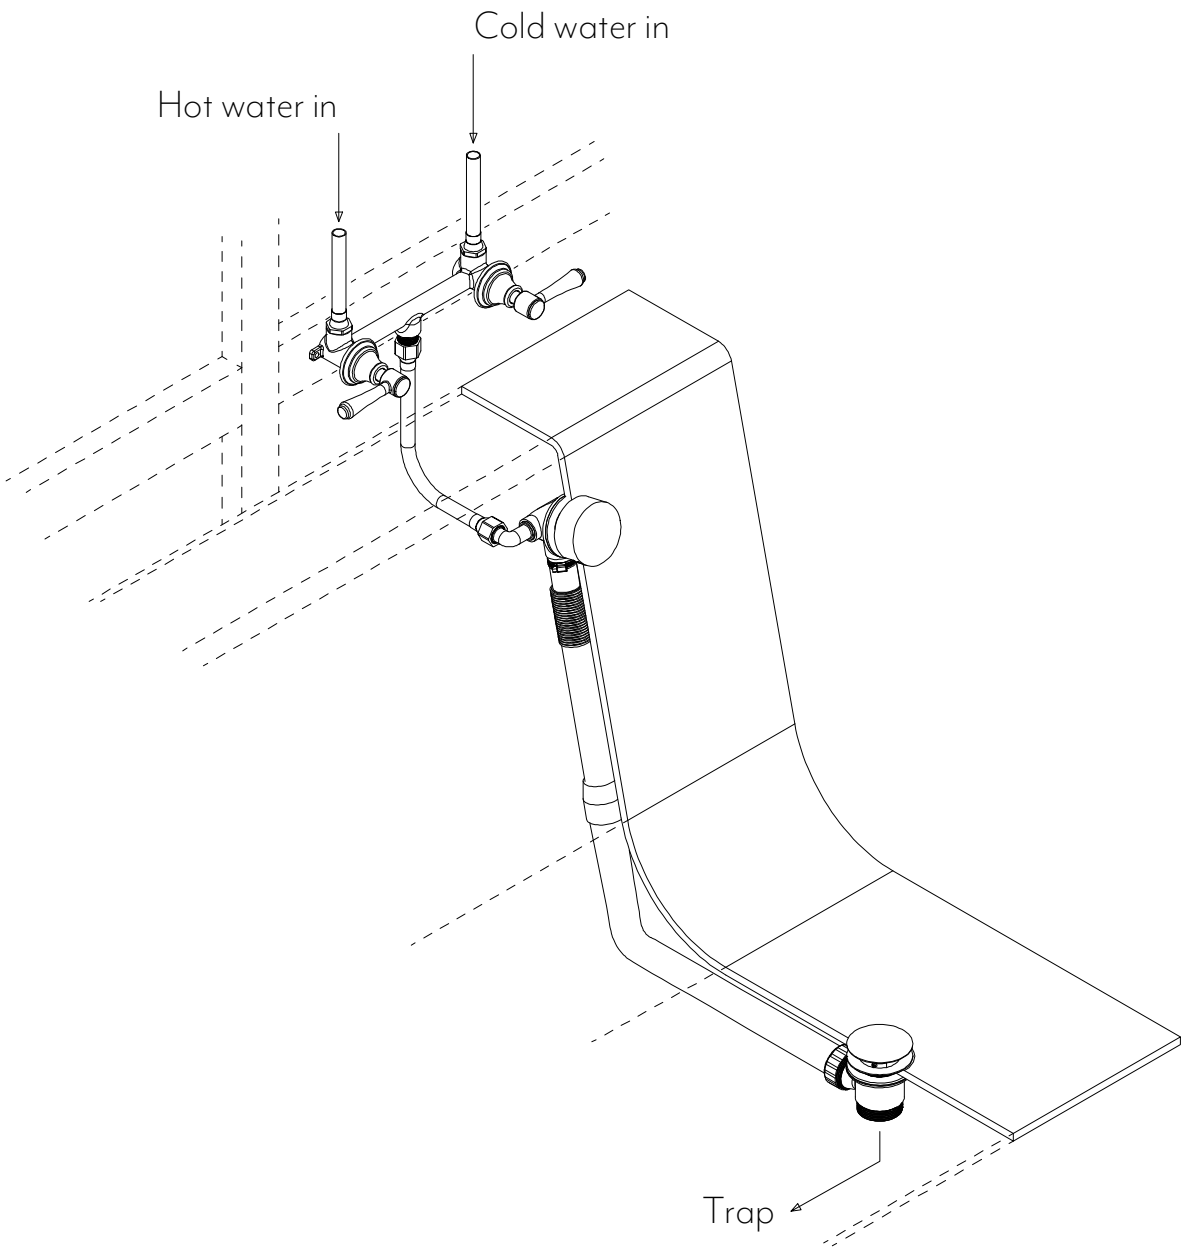




Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

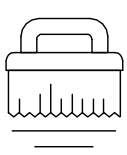

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.


ABI INTERIORS

In The Box

Waste Assembly
1. Bottom base
2. Black washer
3. Opaque washer
4. Top base
5. Spring mechanism
6. Lid

Outlet Assembly
7. Allan key (2.5mm)
8. Grub screw (M5)
9. Water outlet overflow housing
10. Threaded outlet
11. Metal plate
12. Thin opaque washer
13. Thick opaque washer
14. BSP 1/2 inch plug
15. Water outlet overflow base
16. BSP 1/2 inch elbow (x2)

Hose Assembly
17. Hose clamp
18. Plastic flex pipe
19. Rubber joining grommet
20. Plastic pipe
21. Fastening nut
22. Plastic collar
23. Rubber seal

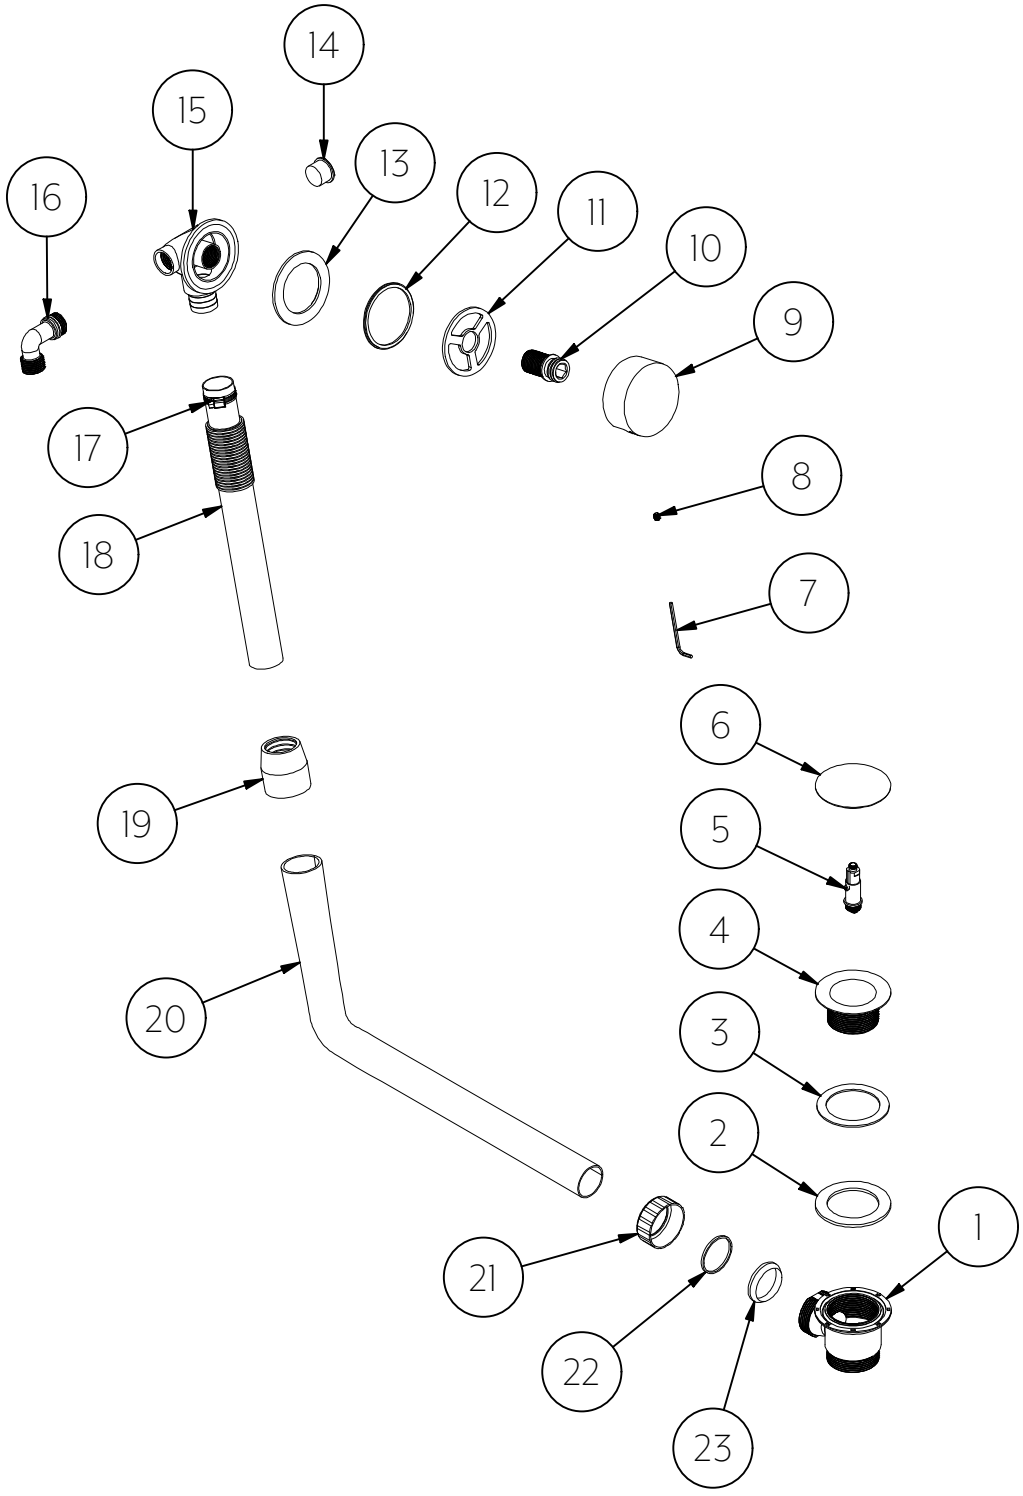




Regularly clean with mild liquid detergent or soap and water




DO NOT use cream cleaners or bleach. These substances are abrasive

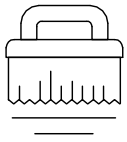


DO NOT use cleaning pads with abrasive surfaces as this may scratch the material


THERMOSTATIC MINIMAL 3-OUTLET IN-WALL

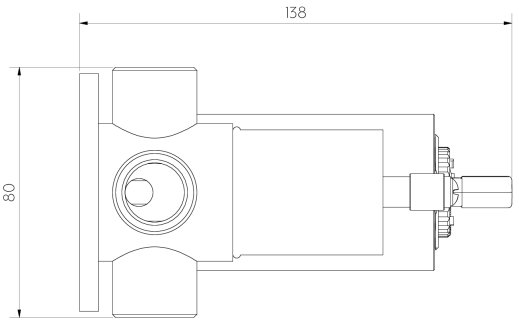

Top View

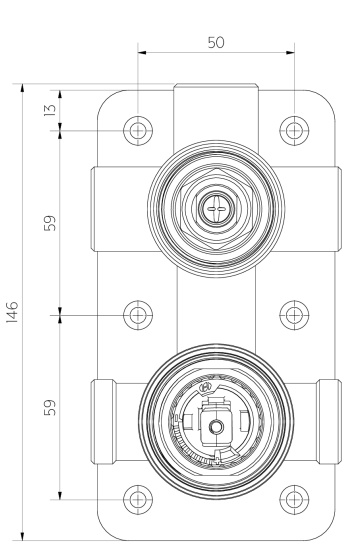

Front View

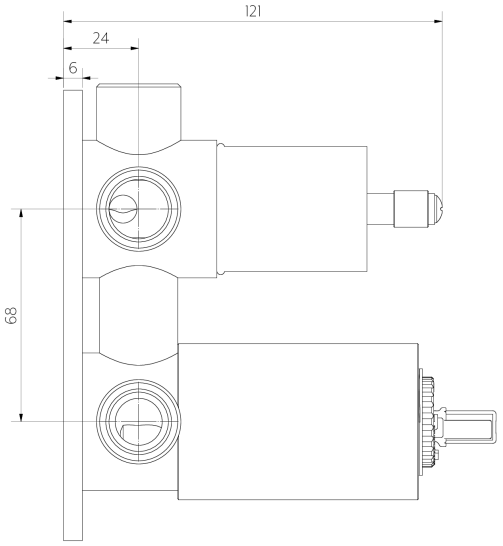

Left View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE	Domestic / Commercial
MATERIAL	Stainless Steel 304
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C,an approved tempering valve must be fitted
PRESSURE RATING	Recommended minimum working pressure 0.5 Bar Recommended maximum working pressure 5 Bar Hot and cold water inlet pressure should be equal
SUITABLE HOT WATER UNITS	Storage tank: Yes Continuous Flow: Yes Gravity Feed: Suitable

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

ABI INTERIORS


INSTALLATION - 3-OUTLET DIVERTER - IN-WALL COMPONENT

1. Determine the position for your diverter and mixer handles. Adjust the depth to ensure optimal set-out considering the wall finish material.
Ensure the body is level in all directions.

   Fix to the wall structure using the appropriate screws.

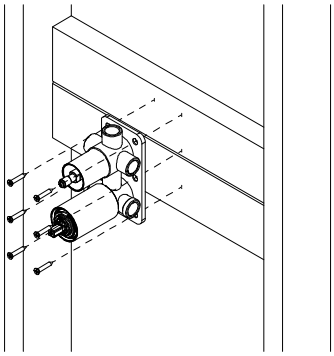



2. Connect the water pipes. Flush pipes to ensure no debris is in the lines. Use appropriate thread sealant.
Check and ensure no leaks before proceeding.

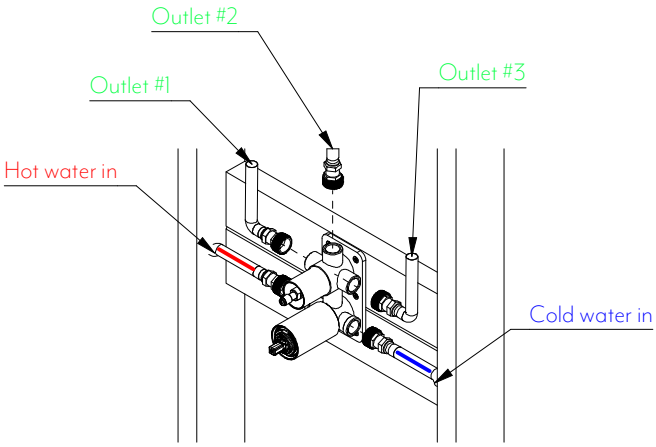


3. Apply the wall and wall finish. Trim sleeve with a knife so that the edge is flush with the wall finish.*
Silicone between waterproof sleeve and wall.

   *Mark and remove sleeves for easier cutting if neccessary.

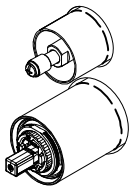


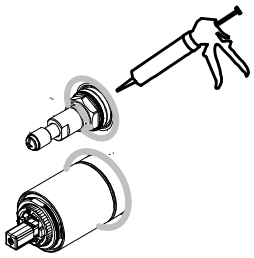


4. Recommended set-back range 55-90mm from the wall finish surface.

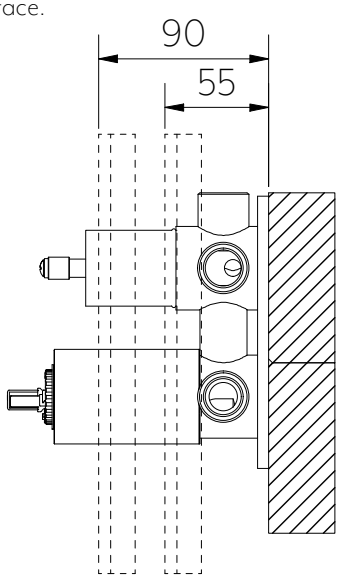

In-wall Sub Components

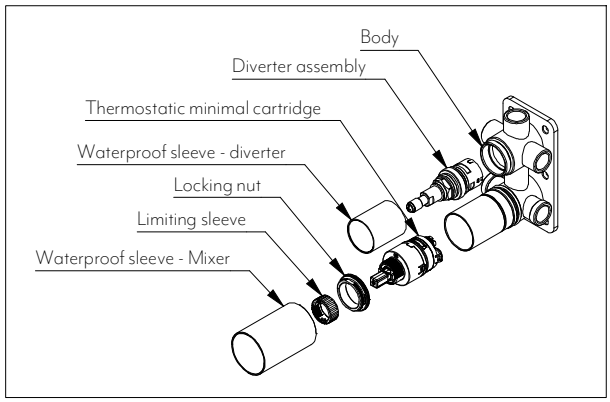

In The Box



1 x 3-Outlet Diverter In-wall Body



6 x Wall plugs




6 x Fixing screws



Regularly clean with mild liquid detergent or soap and water




DO NOT use cream cleaners or bleach. These substances are abrasive

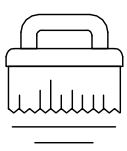


DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

KINGSLEY THERMOSTATIC HANDLE KIT

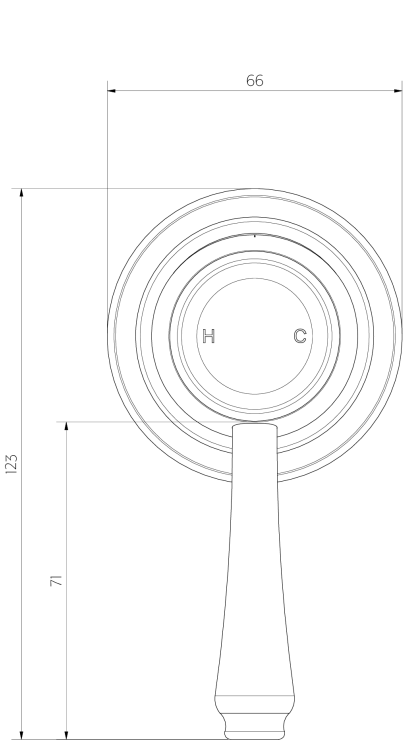

Front View

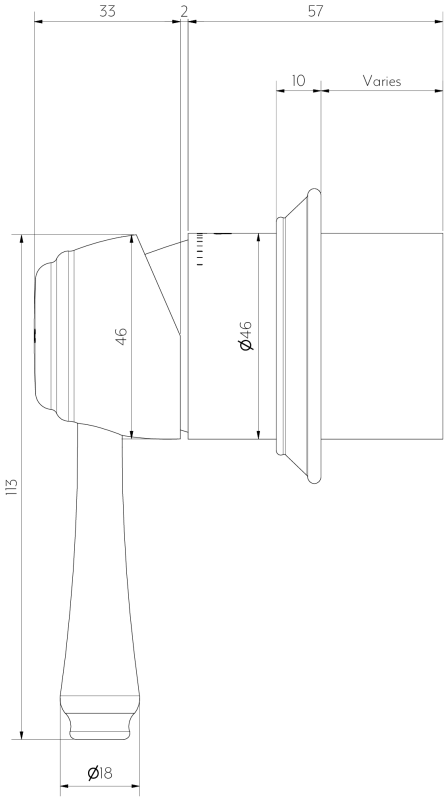

Side View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE	Domestic
MATERIAL	304 Stainless Steel

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd


INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.


ABI INTERIORS


INSTALLATION - HANDLE KIT

1. Push on the sleeve and backplate. Screw the dome on.

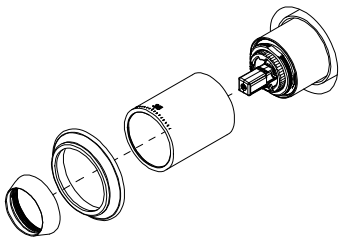

2. 1. Push the handle onto the cartridge.
   2. Fasten the grub screw underneath.
   3. Screw on the handle stick.

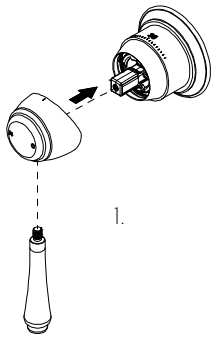


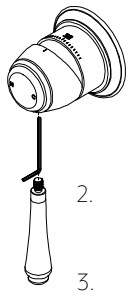


ADJUSTING THE LIMITING COLLAR

The limiting collar must be set so that the maximum temperature coming out of your shower head is no more than **43 degrees celcius**. Please use a temperature gauge.

1. Unscrew the dome and remove the limiting sleeve with needle nose pliers.
2. Put the handle on and run the water, use the temperature gauge to check the water temperature at the shower head. Once it's at 43 degrees celcius, leave it in position and remove the handle again.
2. Re-install the sleeve and position the limiting sleeve so that rotation is limited to the current position of the cartridge (43 degrees celsius).

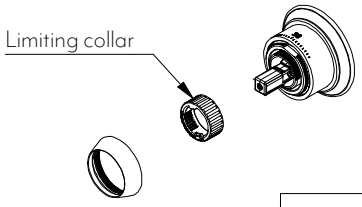


Be careful of
HOT WATER

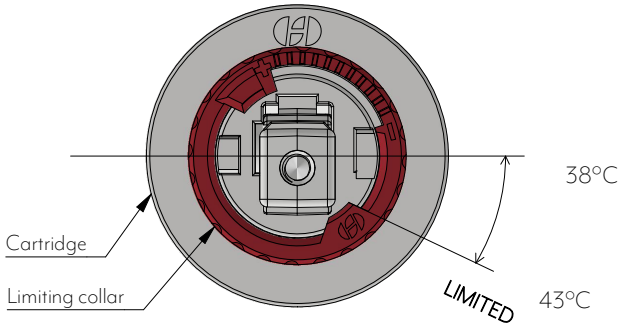


SET 38 DEGREES CELSIUS

Depending on your inlet water temperatures, you may need to rotate the sleeve so the display temperature of 38 degrees Celsius is aligned to the handle mark.

Do this while the handle is rotated to the correct angle that the outlet water from the shower head is 38 degrees celcius.

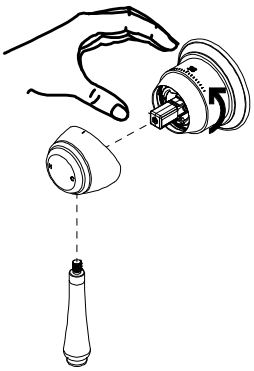

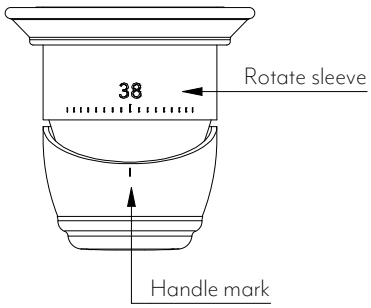

IN THE BOX


1x Dome


1x Backplate


1x Grub screw



1x Handle


1x Sleeve



1x Allen key



Regularly clean with mild liquid detergent or soap and water




DO NOT use cream cleaners or bleach. These substances are abrasive

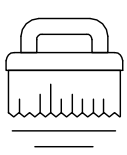


DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

KINGSLEY THERMOSTATIC DIVERTER HANDLE KIT

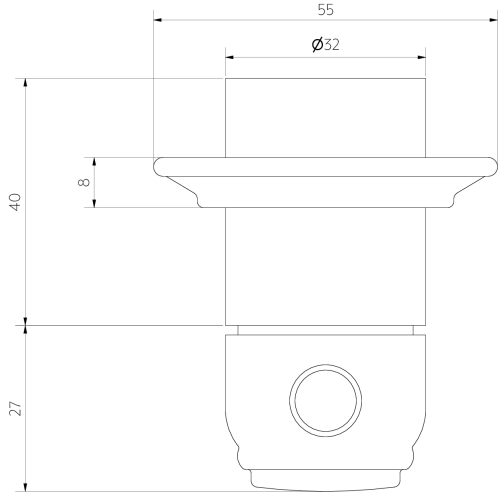

Top View

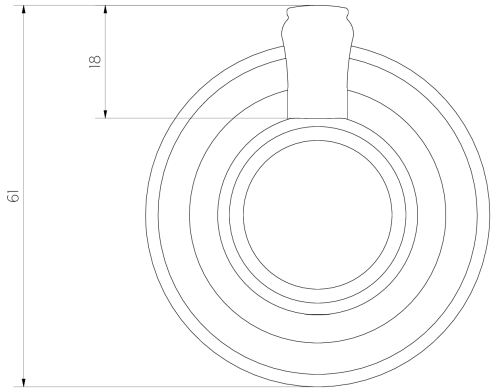

Front View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE | WARRANTY	Domestic / Commercial
MATERIAL	Stainless Steel 304

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd


INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.


ABI INTERIORS

INSTALLATION - DIVERTER HANDLE KIT

1. Screw on diverter sleeve.
Slide diverter backplate onto the sleeve ensuring not to scratch.

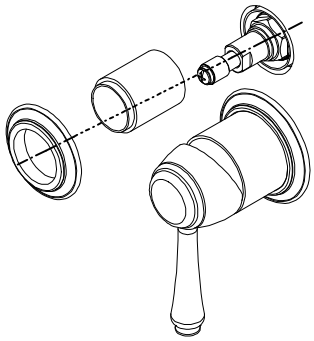


2. Install handle by tightening grub screw with provided Allen key.
Screw on handle stem, using o-ring to tighten.

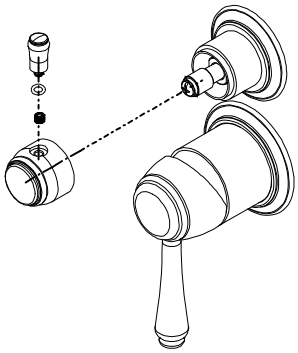


OPERATION

2 - Outlet variant

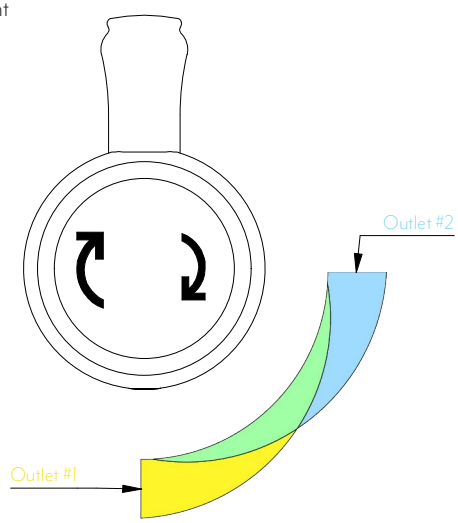

3 - Outlet variant

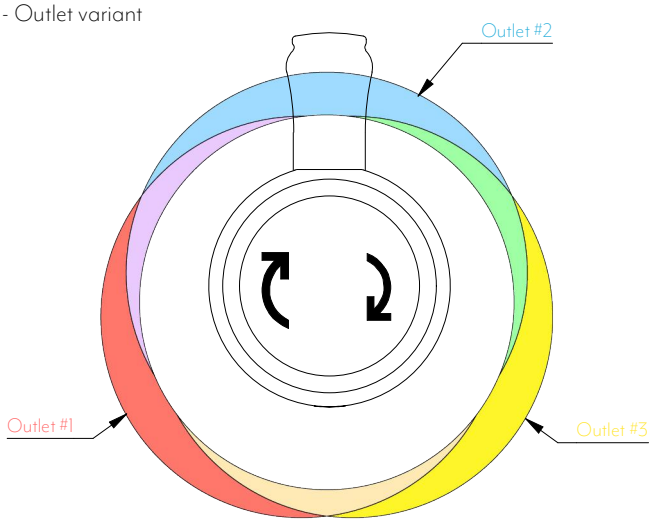

IN THE BOX

1 x Grub screw

1 x O-ring


1 x Handle stem


1 x Handle



1 x Allen key


1 x Diverter sleeve



1 x Backplate


Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

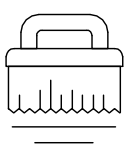
DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

1/2 MALE THREAD ADAPTER

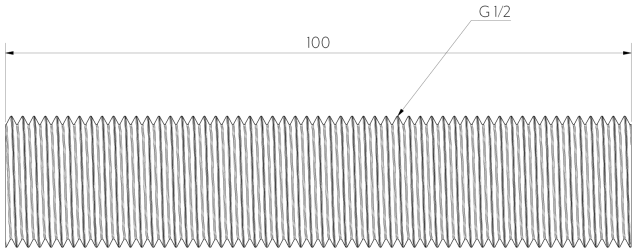

Side View

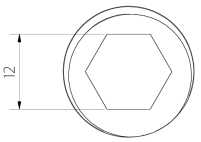

Front View

Note: Dimensions are nominal measurements only

SPECIFICATIONS


MATERIAL	Solid Brass

Disclaimer: Products in this manual must by law be installed by licensed and registered tradespeople in accordance with the relevant standards. ABI and the manufacturer/distributor reserve the right to vary specifications or delete models from their range without prior notification. Dimensions are nominal measurements only. The information listed is correct at the time of publication, however ABI and the manufacturer/distributor takes no responsibility for printing errors. Copyright © ABI Interiors 2024 Pty Ltd


1/2 INCH MALE ADAPTOR INSTALLATION GUIDE

Note: This product must be installed by a licensed tradesperson.
This is a general installation guide - there are many factors that are involved that can alter the installation method.

1 Apply teflon tape to 1/2 inch male adaptor.

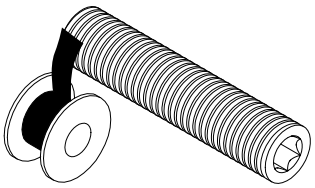

2 Fit 1/2 inch male adaptor to female BP and tighten with a 12 mm metric Allan key.

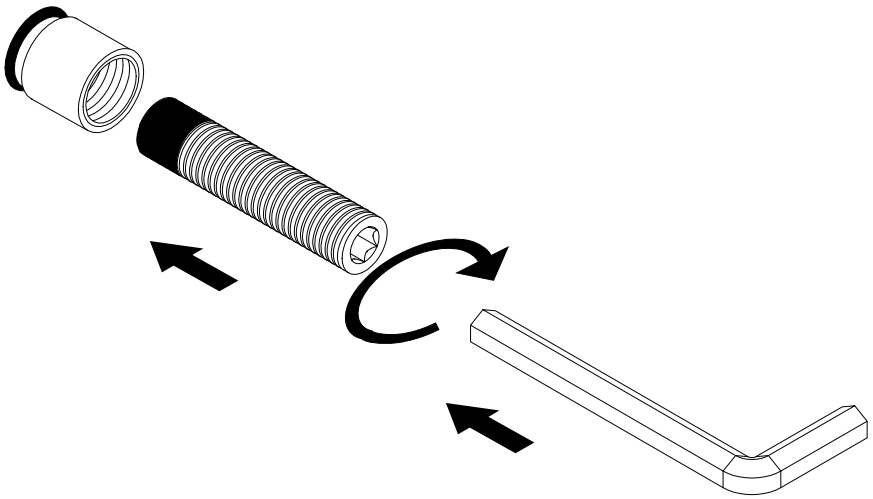

3 Cut 1/2 inch male adaptor to suit wall thickness and product.

