

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

Domestic/ Commercial

MATERIAL

Solid Brass

PACKAGING


Box 1 of 1 - Namika Assembly Handle Kit (Fit off)

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

ABI
INTERIORS

- 1 Install the sleeve onto the locking nut and hand tighten. Slide backplate over sleeve.

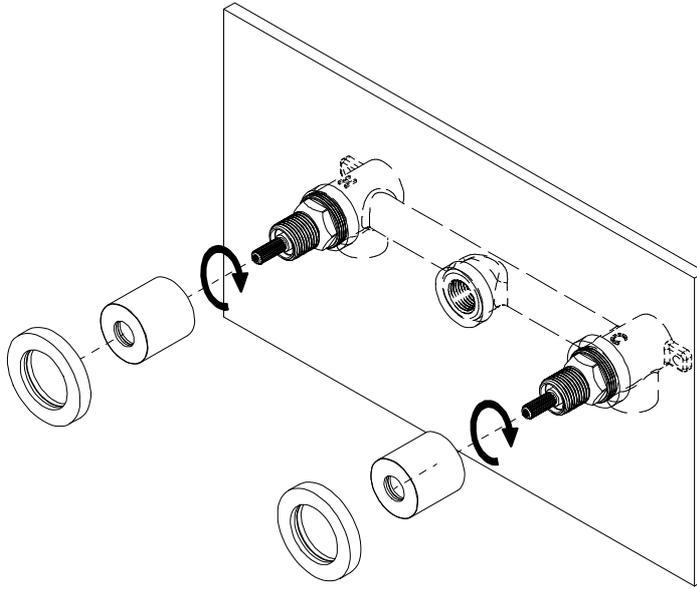


- 2 Install tap handle onto spindle and tighten in place using grub screw.

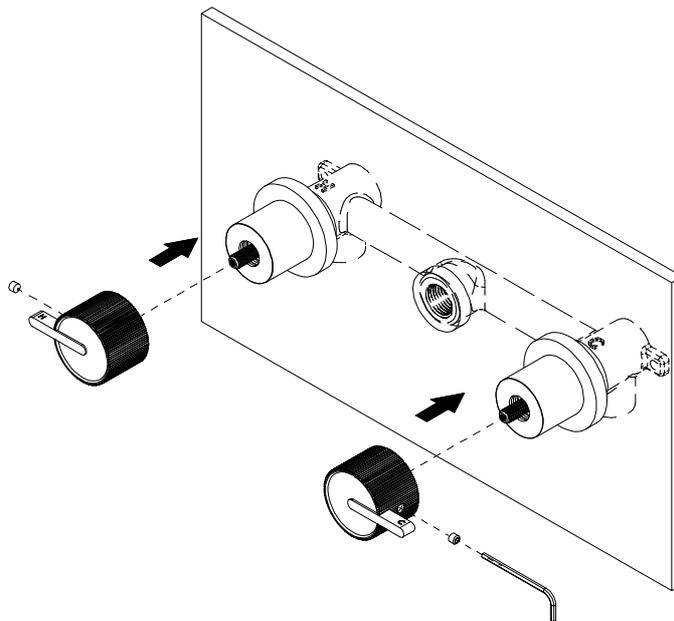

Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

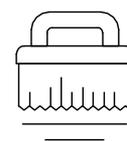

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material


INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.




ASSEMBLY SETUP GUIDE


Example One:
Off-set basin mixer/ bath spout set-up

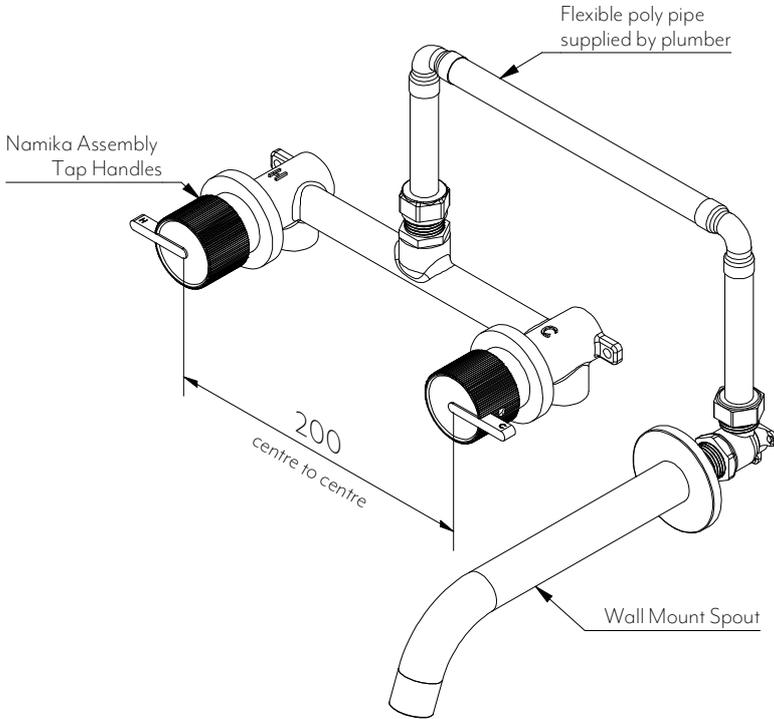

Example Two:
Centred basin mixer/ bath spout set-up

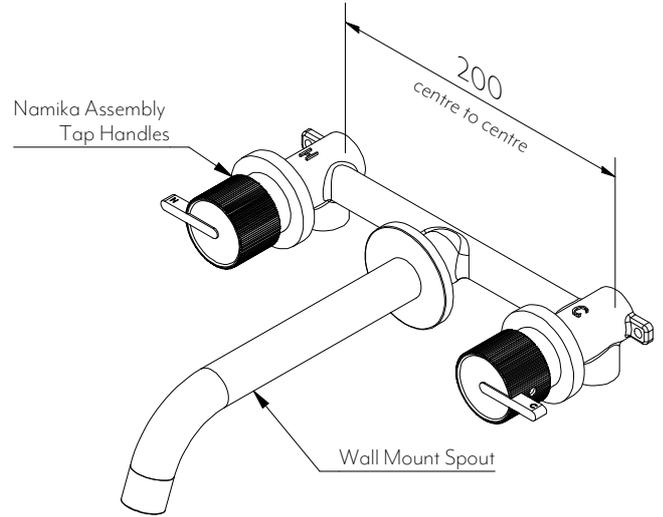


Example Three:
Shower set-up

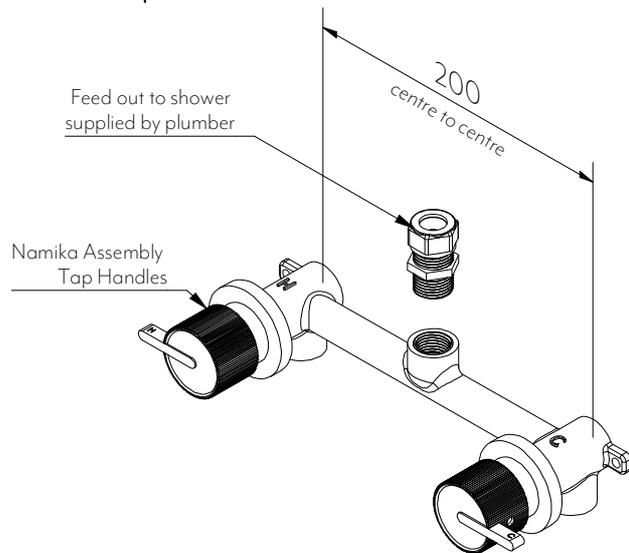

In The Box

2 x Handle



2 x Sleeve



2 x Back plate



2 x Grub screw



1 x Allen key



Note: In-line plumbing breech available for purchase from ABI