

**Note: Dimensions are nominal measurements only**

## SPECIFICATIONS

### RECOMMENDED USE

Domestic / Commercial

### MATERIAL

Stainless Steel 304

### TEMPERATURE RATING

Maximum continuous working temperature 75°C  
If the water temperature exceeds 75°C, an approved tempering valve must be fitted

### PRESSURE RATING

Recommended minimum working pressure 0.2 Bar  
Recommended maximum working pressure 5 Bar  
Hot and cold water inlet pressure should be equal

### SUITABLE HOT WATER UNITS


Storage tank: Yes  
Continuous Flow: Yes  
Gravity Feed: Suitable

# INSTALLATION GUIDE


**Note:** This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.




- ① Ensure rubber o-ring is correctly recessed into BP.

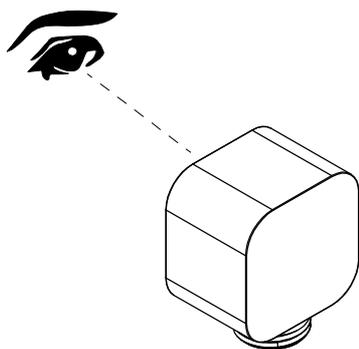



- ② Use a hack saw and trim wall outlet so that a maximum of 13mm protrudes from wall finish.

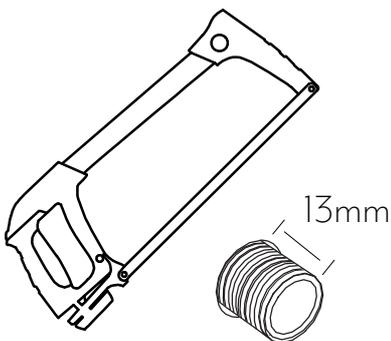

- ③ Apply thread tape to G 1/2 water outlet.

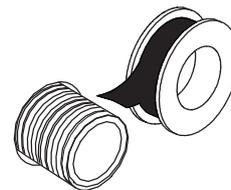


- ④ Install BP onto water outlet.  
\*To ensure level installation apply sufficient thread tape to outlet.

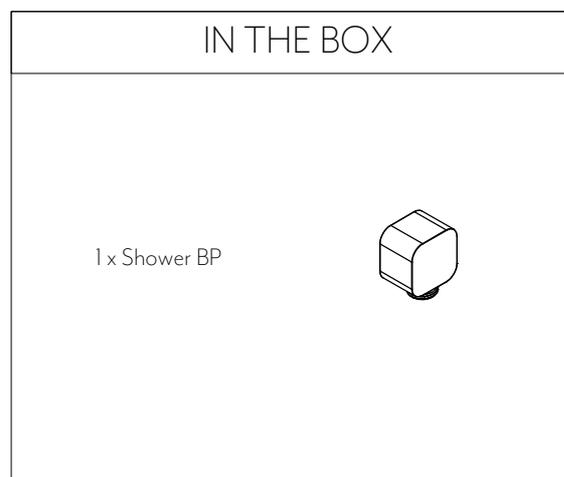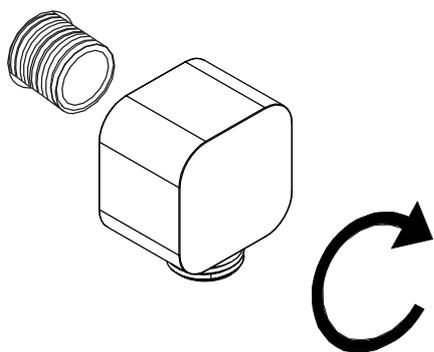

Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

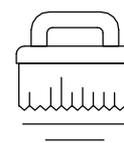


DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

# 1/2 INCH MALE ADAPTOR INSTALLATION GUIDE




**Note:** This product must be installed by a licensed tradesperson.  
This is a general installation guide - there are many factors that are involved that can alter the installation method.

① Apply teflon tape to 1/2 inch male adaptor.

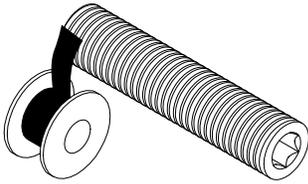

② Fit 1/2 inch male adaptor to female BP and tighten with a 12 mm metric Allan key.

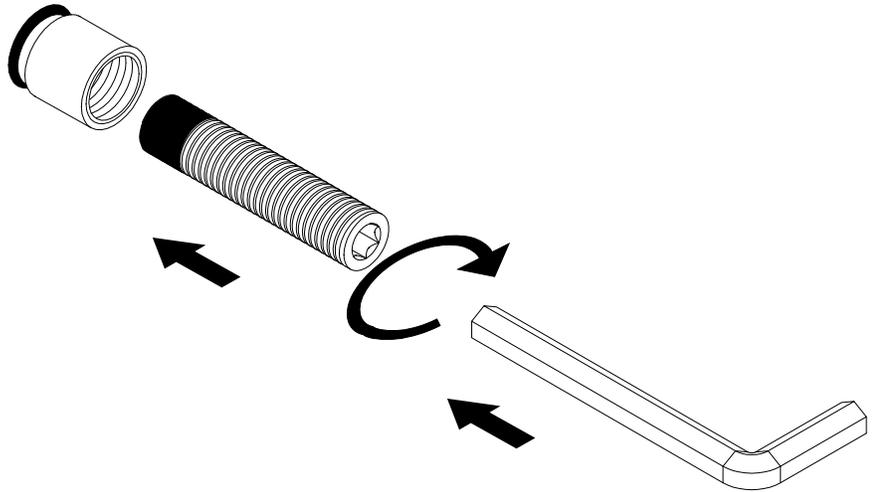

③ Cut 1/2 inch male adaptor to suit wall thickness and product.

