

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

Domestic

MATERIAL

5mm Cast acrylic

INSTALLATION

Inset

MOUNTING HARDWARE INCLUDED

Yes

OVERFLOW


Yes - Overflow sold separately

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

ABI
INTERIORS


- 1 Remove protective film from bath and inspect for any damage or blemish prior to installation.

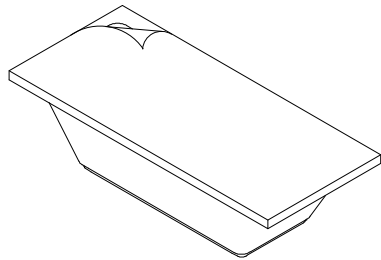

- 2 Place bath on a soft flat surface to install channels and feet. Install channels evenly spaced on base of bath.

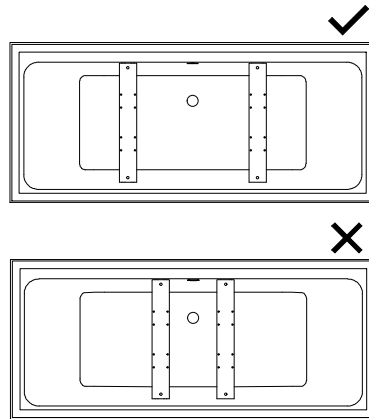


- 3 Install plastic legs and feet onto the threaded rods and into metal channels as shown below. Note: Screw metal channels to the bottom of bath using only provided 19mm self tapping screws.

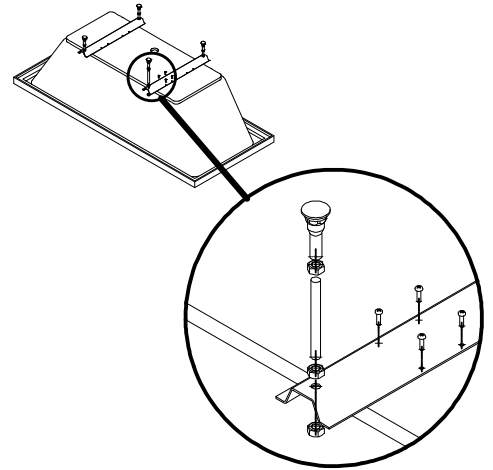


- 4 Install your selection of overflow and overflow waste. (Overflow & Waste sold separately).


Example below of Click Clack Bath waste with overflow available from ABI.

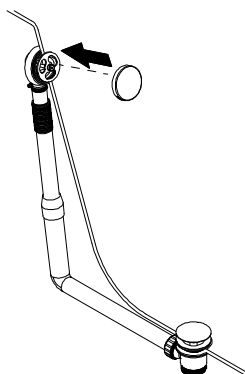

- 5 Baths being installed into a room with no supporting walls should have a supporting frame built in place of wall brackets. *Note: Height can be adjusted by ± 30 mm by rotating the adjustable feet.

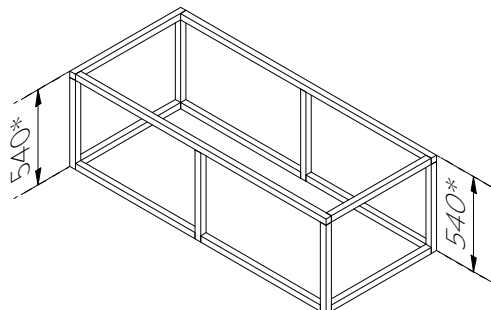


- 6 When installing bath into place it is recommended to cover the surface to prevent damage.

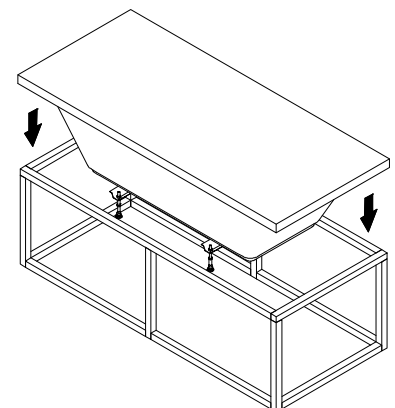

Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

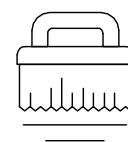


DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

INSTALLATION GUIDE


Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

ABI
INTERIORS



- 7 Ensure bath is level in all directions by adjusting feet.

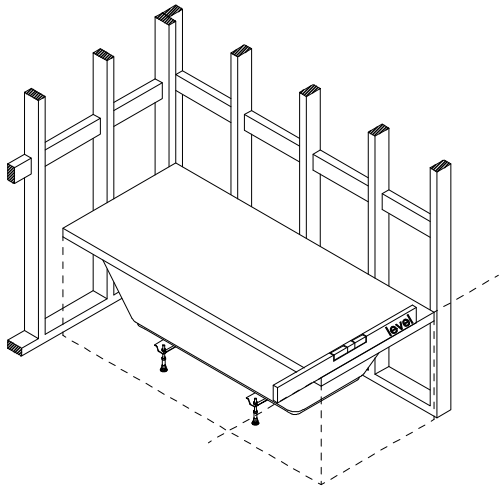


- 8 Ensure locking nuts are in place after the bath has been leveled.

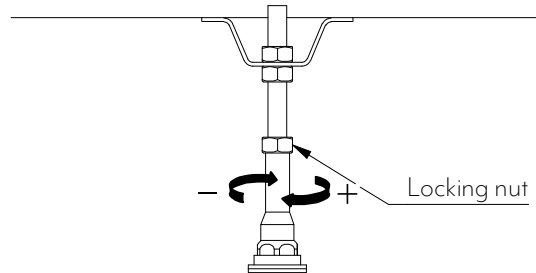

- 9 When installing into wall structure use provided wall brackets to fix bath to framing.

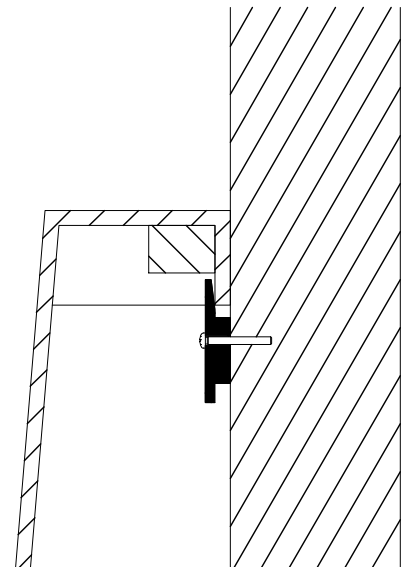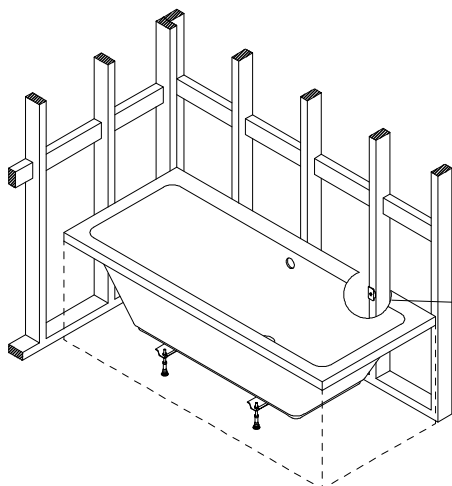

What's in the box

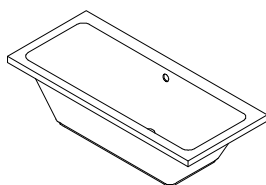

1 x Inset bath



4 x Wall bracket



2 x Metal channel



8 x 19mm Screw



12 x M10 Nut



4 x M10 Threaded rod



4 x M10 Plastic leg




4 x Plastic leg foot



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

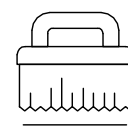

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material