



Top View

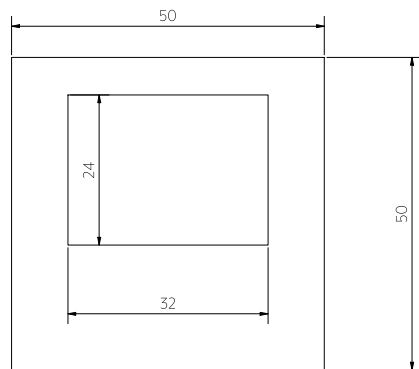

Front View

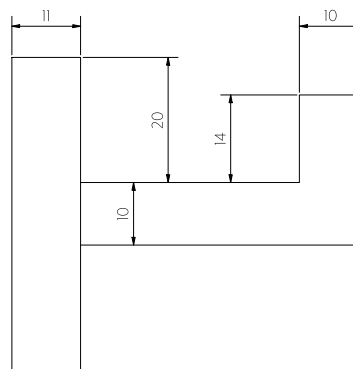

Side View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

Domestic

MATERIAL

Stainless Steel

MOUNTING HARDWARE INCLUDED

Yes, 2x Phillips Head Masonry Screw/ 2x Wall Plug

INSTALLATION GUIDE


This product must be installed by a licensed tradesperson.

This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with the standards in your respective country and must be adhered to by your licensed tradesperson.




- 1 Using the fixing bracket as a guide, drill holes in desired position and insert wall plugs.
- 2 Remove bracket from the robe hook using the allen key to loosen the grub screw. Install bracket by fastening the supplied screws into the wall plugs.
- 3 Place the robe hook onto the bracket and firmly tighten grub screws using allen key.


IMPORTANT - If installing onto plasterboard please use appropriate fixings.

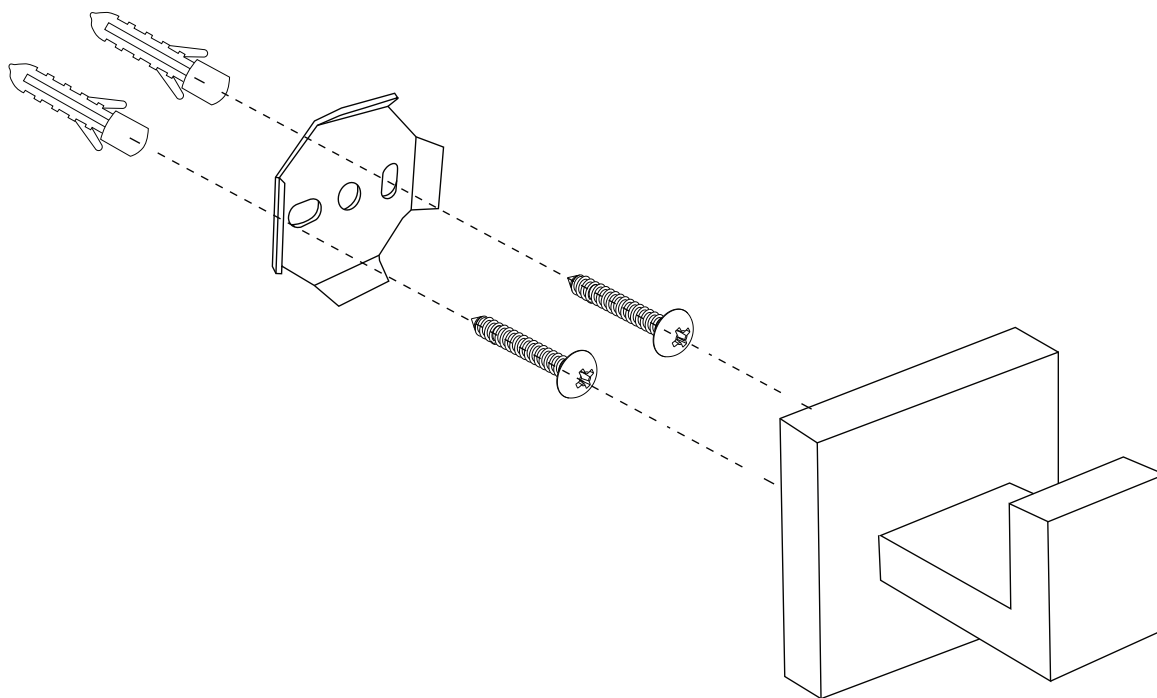


IN THE BOX



Wall Bracket

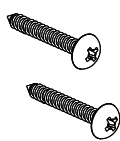

Fixing Screws

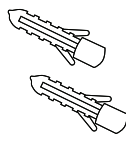

Wall Plugs



Allen Key



Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.