




VERA - SINGLE SINK 560MM (OVERFLOW)

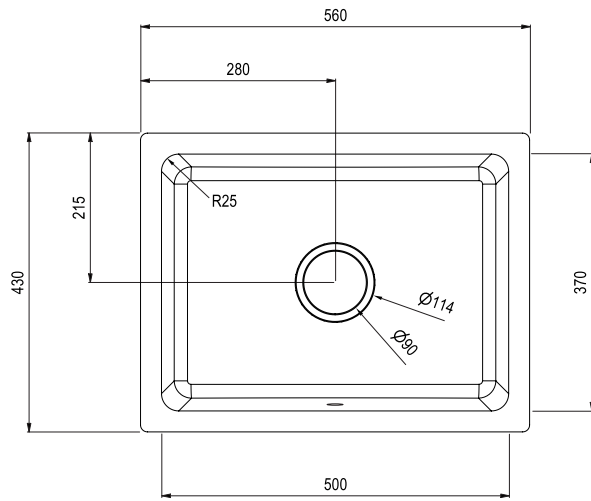

Top View

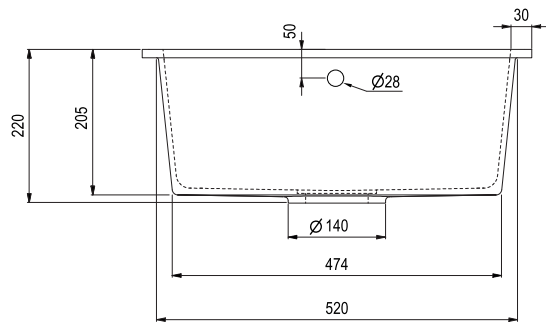

Back View

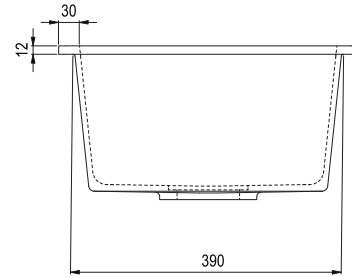

Side View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

Domestic/Commercial

MATERIAL

Composite Black Granite

INSTALLATION

Undermount, Top Mount

OVERFLOW

Yes

CAPACITY

32L

RIM THICKNESS

12mm


INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.






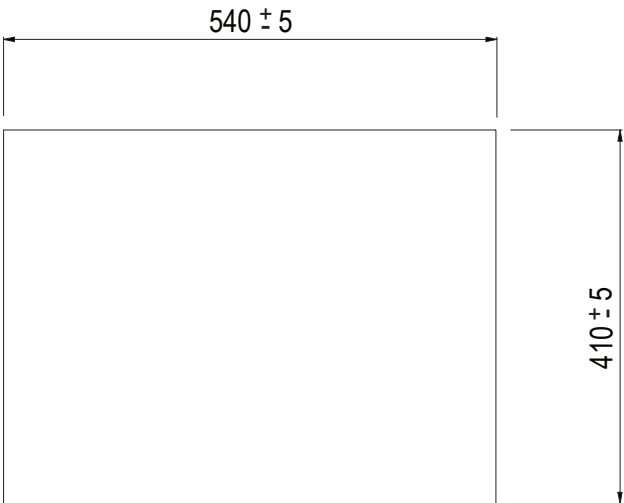


CUT-OUT TEMPLATES

TOPMOUNT INSTALLATION

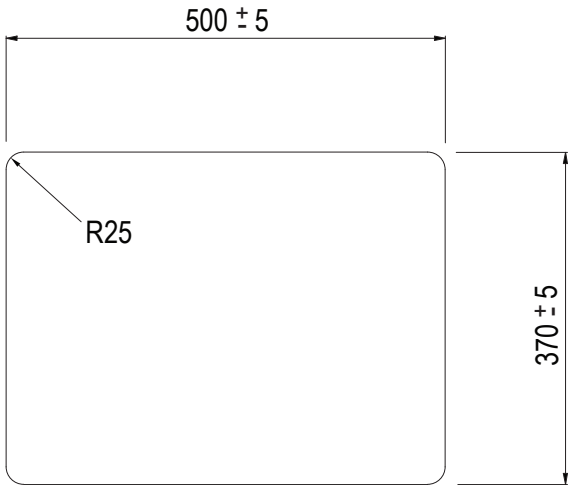

UNDERMOUNT INSTALLATION

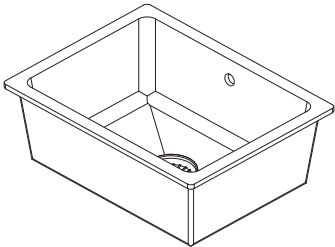

Whats in the Box	1x Screw	
	1x Cap	
	1x Bracket	
	1x Overflow	
	1x Sink	


Note: Product does not include basket waste



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

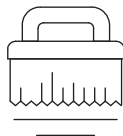


DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

INSTALLATION GUIDE - UNDERMOUNT SINK


- 1 Mark out desired location of sink using the cut out template dimensions provided.

Cut out sink hole using preferred method.

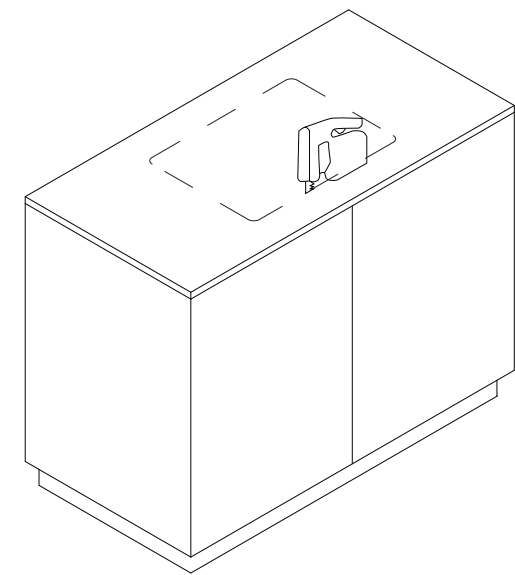

- 2 Clean around the edge of benchtop sink hole & perimeter of sink rim.


Position the sink in the cabinet below the benchtop hole. Apply adhesive to the perimeter of sink rim & lift into position.

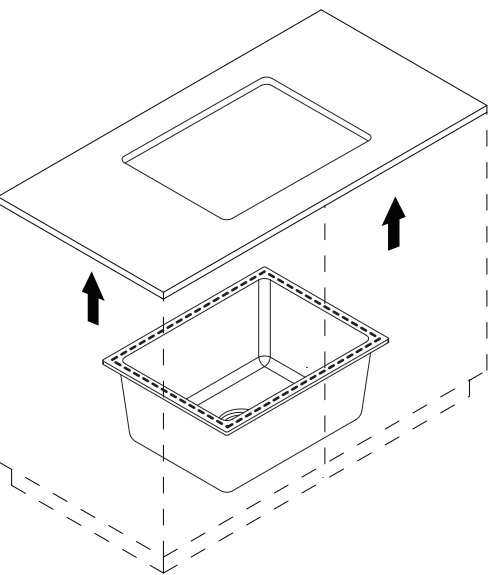

- 3 Lay a piece of timber across the benchtop hole & position in line with sink hole below.

Place clamp through the sink hole & tighten the clamp to hold the sink in place. Wipe away any excess adhesive around benchtop opening.

Note: Use rags to protect surfaces when either the clamp or timber is making contact with the benchtop or sink.

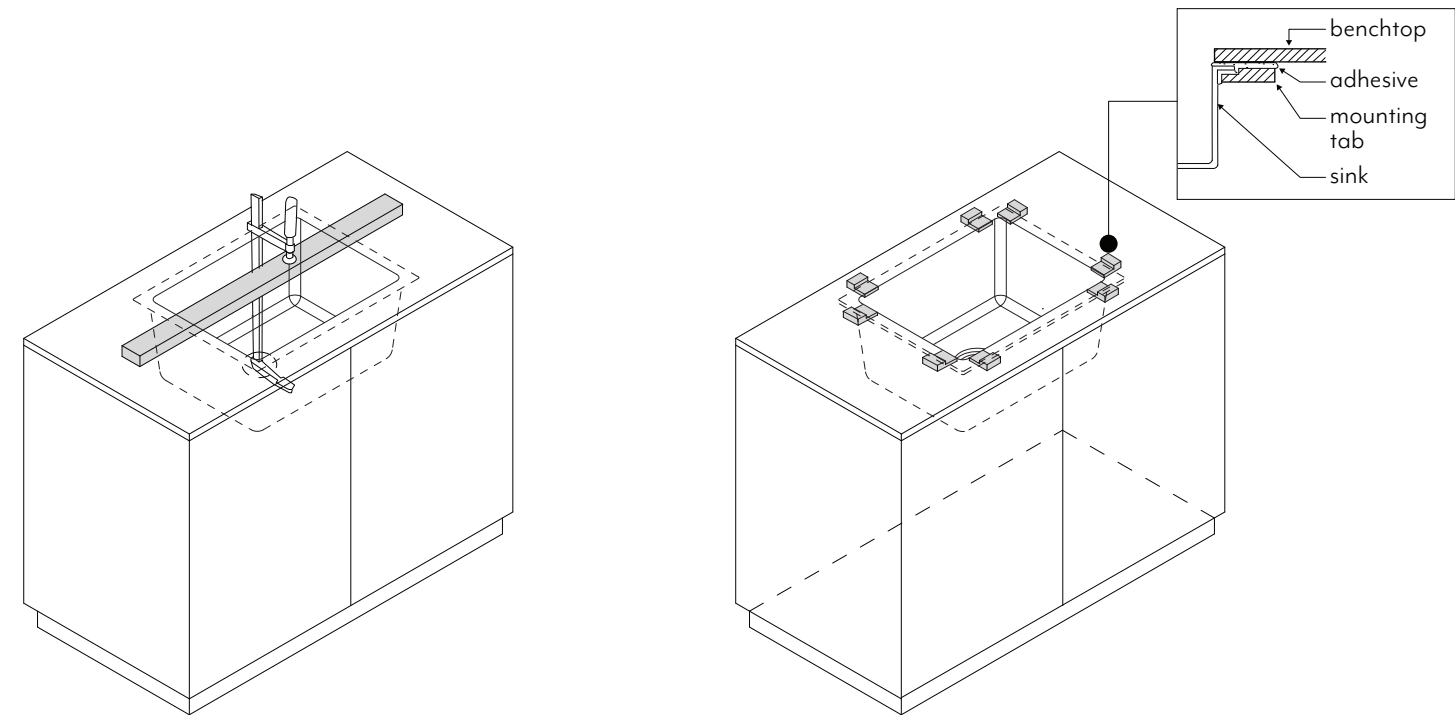

- 4 Using the benchtop material build rebated mounting tabs.

Clean around the underside perimeter of the sink & the mounting tabs.

Apply adhesive to the mounting tab & fix it to the underside of the benchtop & sink rim. Repeat tabs at regular intervals.


Wipe away any excess adhesive around mounting tabs.

INSTALLATION GUIDE - TOP MOUNT SINK




- 1 Mark out desired location of sink using the cut out template dimensions provided.

Cut out sink hole using preferred method.

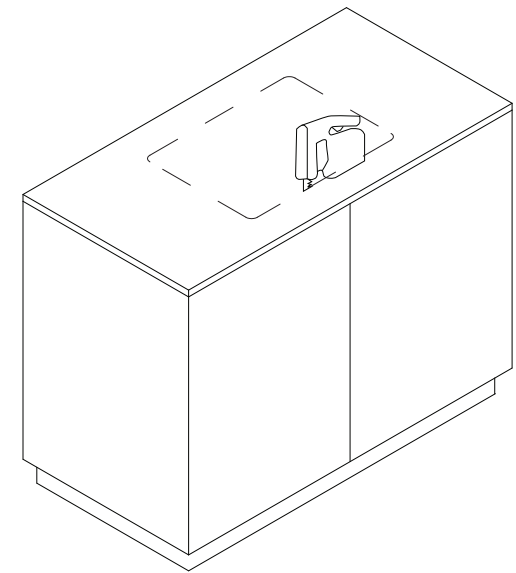


- 2 Clean around edge of benchtop sink hole & perimeter of sink rim.

Apply adhesive to the underside perimeter of sink rim & lower into position.

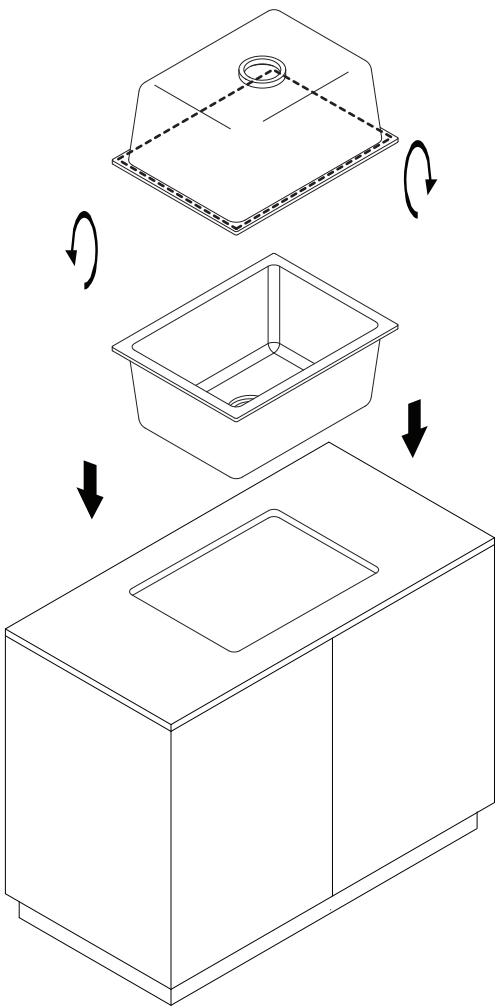

- 3 Wipe away any excess adhesive around sink rim.

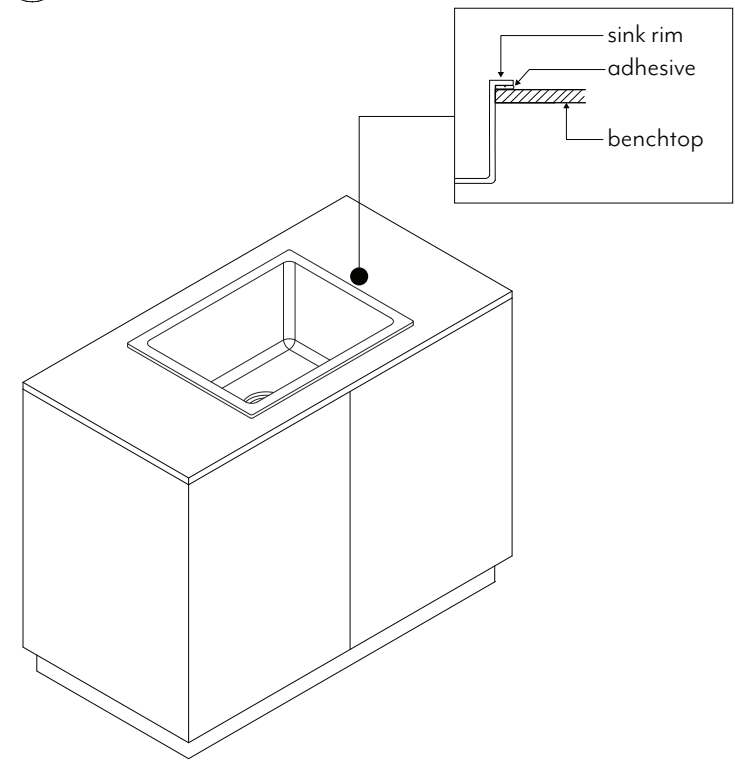

INSTALLATION GUIDE

Note: This product must be installed by a licensed tradesperson.

This is a general installation guide - there are many factors that are involved that can alter the installation method.

1

Disassemble the basket waste and install into sink. Washer & SS Strainer bowl should be installed from the top. Rubber pad and body to be on the underside of the sink - tighten screw to fix parts together. Add Basket (Diagram 1)

2

Connect the flexible pipe to the body and screw on fitting to tighten. Push pipe onto the overflow fitting - pushing as far as possible


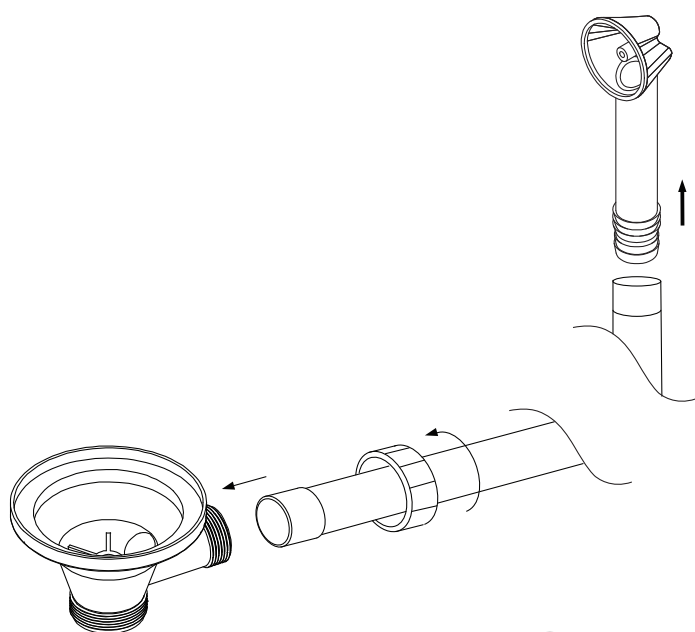


DIAGRAM 1



3

Add rubber seal into the overflow fitting, line up with hole and place on outside of sink. Tighten screw to fix parts together.

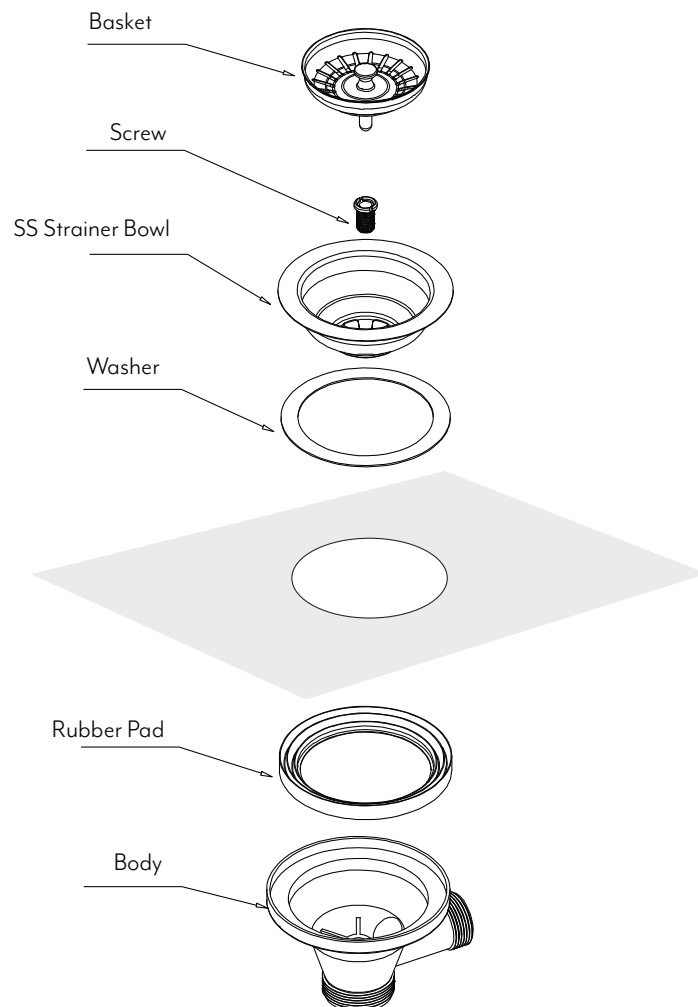