




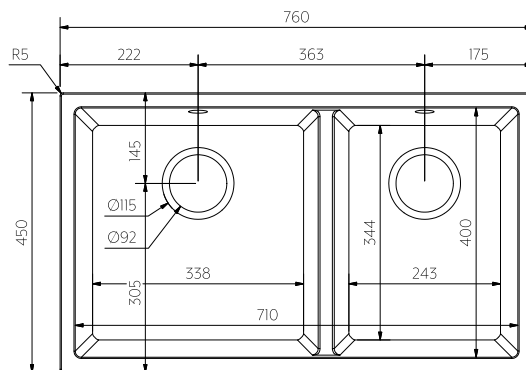

Top View

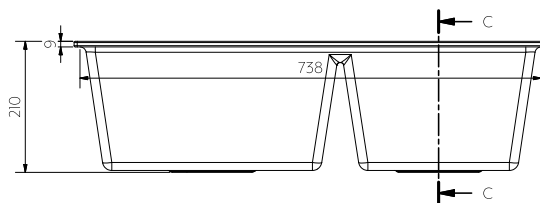

Front View

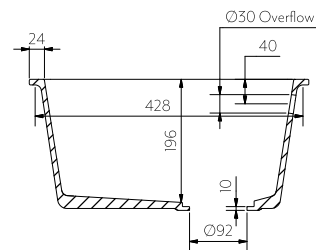

Section View C-C

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE	Domestic/Commercial
MATERIAL	Composite White Granite
INSTALLATION	Undermount, Top Mount
OVERFLOW	Yes
CAPACITY	18L & 13.2L


INSTALLATION GUIDE - TOPMOUNT SINK

This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. AU/NZ: For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. UK: For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. Other: For installations outside these countries, this product must be installed in compliance with the standards in your respective country.



- 1 Mark out the cutting lines in the desired location on your bench.

Cut out sink hole using preferred method.

Note: If cutting a stone benchtop, it will need to be cut in a controlled environment by a licensed tradesperson as per OH&S regulations.

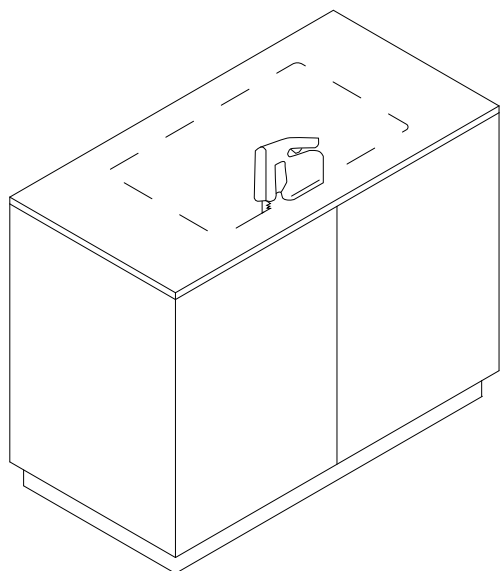


- 3 Wipe away any excess adhesive around sink rim.

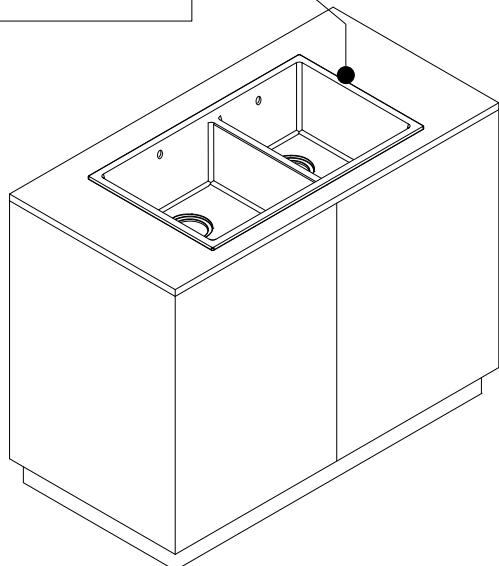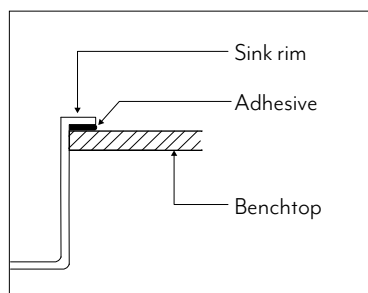


- 2 Clean around edge of benchtop sink hole & perimeter of sink rim.

Apply adhesive to the underside perimeter of sink rim & lower into position.

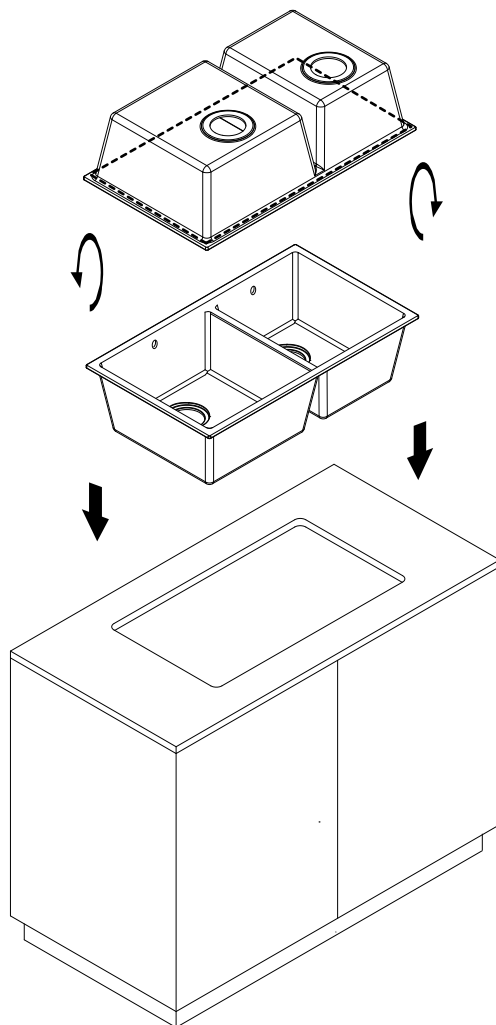

IN THE BOX



Vienna double sink x 1



Plate x 2



Mounting clip x 9



Overflow cover x 2



Overflow connector x 2



Screw x 2


INSTALLATION GUIDE - UNDERMOUNT - SINK

This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. AU/NZ: For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. UK: For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. Other: For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

- 1 Mark out the cutting lines in the desired location on your bench.


Cut out sink hole using preferred method.

Note: If cutting a stone benchtop it will need to be cut in a controlled environment by a licensed tradesperson as per OH&S regulations.

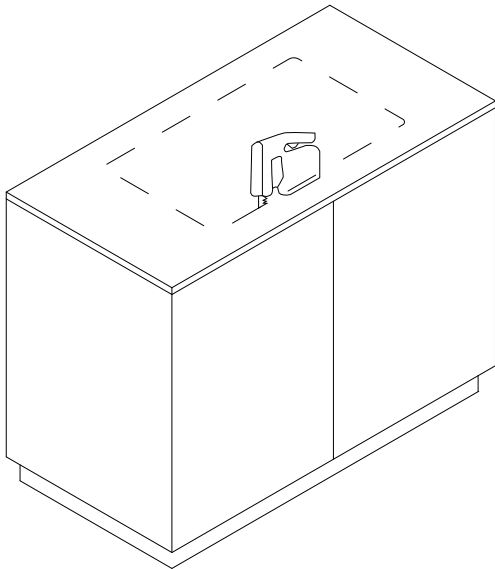

- 2 Clean around the edge of benchtop sink hole & perimeter of sink rim.


Position the sink in the cabinet below the benchtop hole. Apply adhesive to the perimeter of sink rim & lift into position.

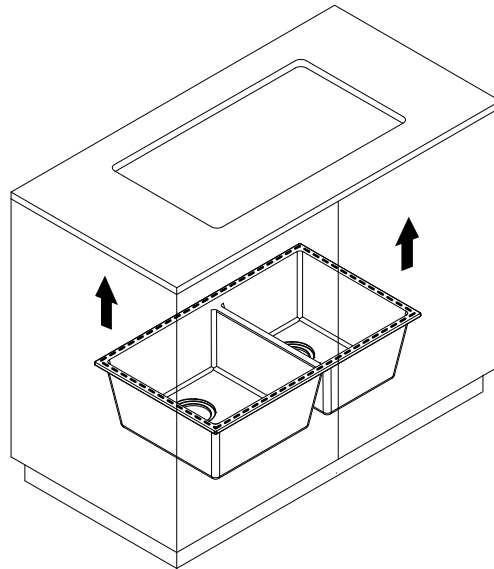

- 3 Lay a piece of timber across the benchtop hole & position in line with sink hole below.

Place clamps through the sink holes & tighten the clamps to hold the sink in place. Wipe away any excess adhesive around benchtop opening.

Note: Use rags to protect surfaces when either the clamp or timber is making contact with the benchtop or sink.



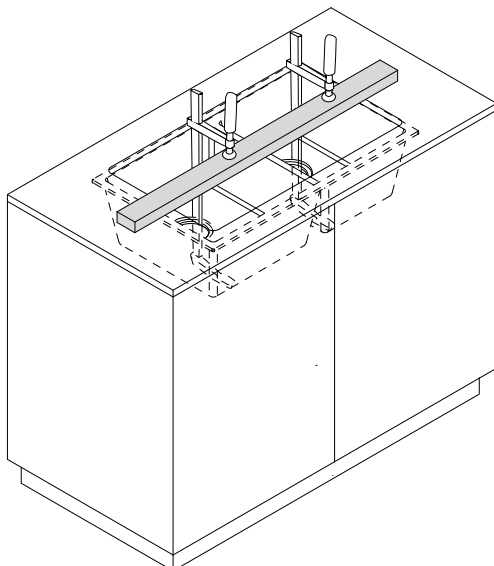


- 4 Depending on material of the benchtop, mount brackets using either 1. adhesive, or 2. screws.

1. Apply adhesive to the mounting bracket & fix it to the underside of the benchtop & sink rim. Repeat brackets at regular intervals. Wipe away any excess adhesive.

OR

2. Screw mounting brackets into benchtop at regular intervals. Mark and predrill holes if required.

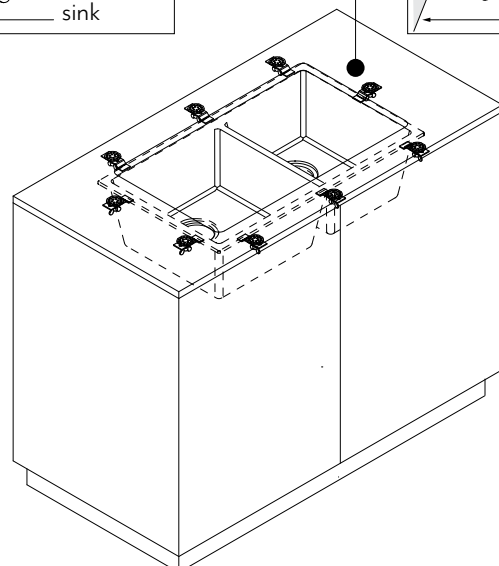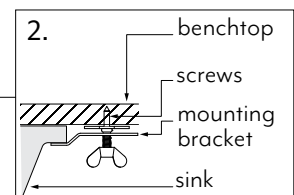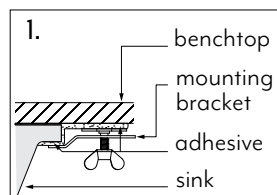

INSTALLATION GUIDE


This product must be installed by a licensed tradesperson.

This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with the standards in your respective country and must be adhered to by your licensed tradesperson.




CUT-OUT TEMPLATES

UNDERMOUNT INSTALLATION

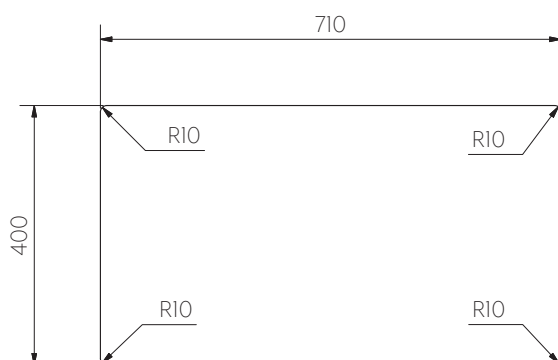

TOPMOUNT INSTALLATION

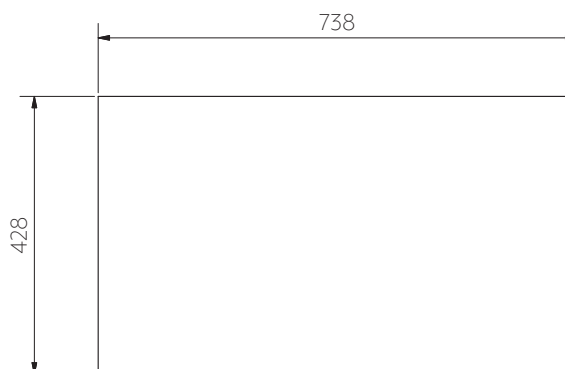

NOTE: PRODUCT DOES NOT INCLUDE BASKET WASTE



CARE GUIDE

Find the care guide for all ABI Interiors product via the QR Code.



INSTALLATION GUIDE


This product must be installed by a licensed tradesperson.

This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with the standards in your respective country and must be adhered to by your licensed tradesperson.




NOTE: PRODUCT DOES NOT INCLUDE BASKET WASTE


1 Assemble the basket waste, ensure watertight seal

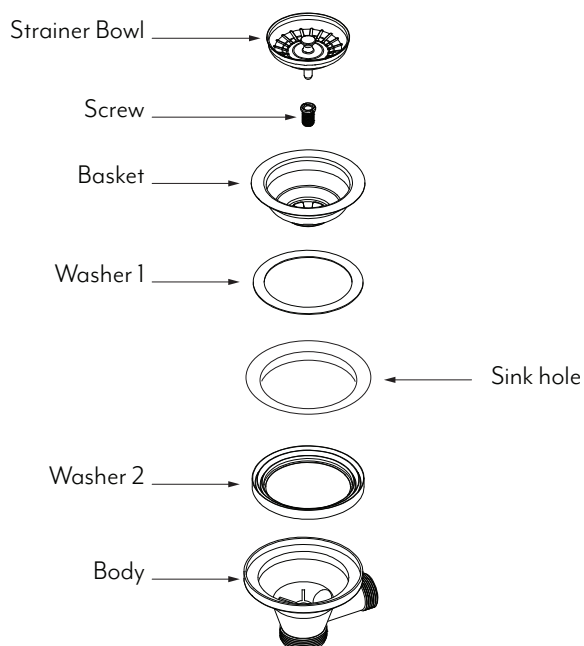

2 Attach the overflow connection, ensure a watertight seal

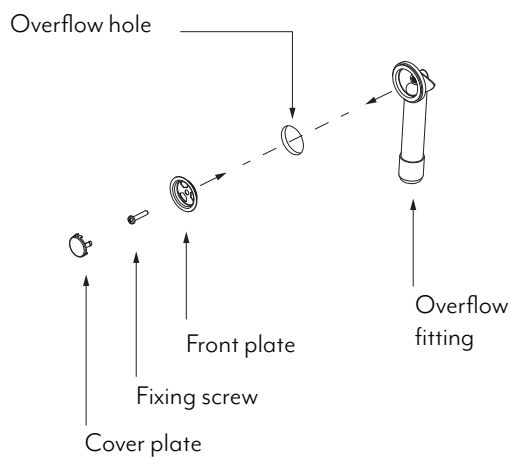

3 Connect all pipework, test and commission

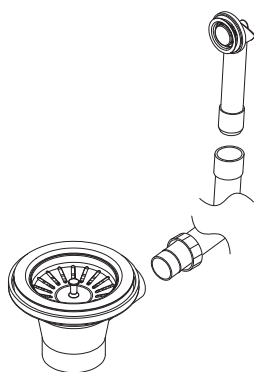

Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.