

Top View

Section A-A

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE Domestic

MATERIAL Acrylic

WEIGHT 44kg

OVERFLOW Yes

CAPACITY 334L

ADJUSTABLE FEET x6


INSTALLATION GUIDE

This product must be installed by a licensed tradesperson.


This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with the standards in your respective country and must be adhered to by your licensed tradesperson.

ABI
INTERIORS


- ① Adjust feet to level bath. Ensure you have selected compatible overflow waste for in-built channel.

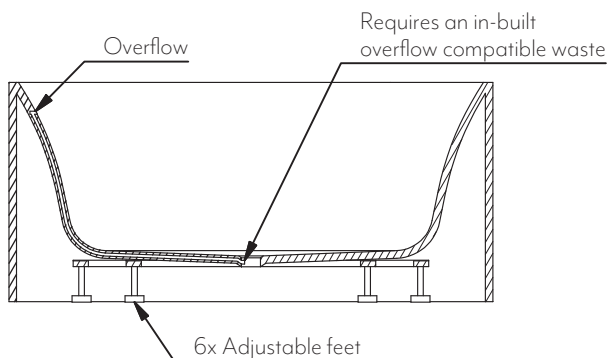


- ② Mark position of bath to determine length of drainage from floor waste to bath outlet.

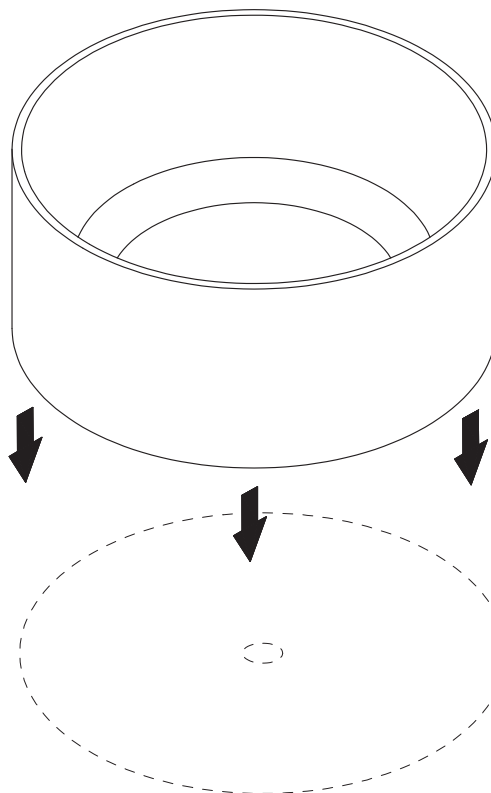


- ③ Plan out drainage connection to floor waste & alter if necessary. Fit plug waste (must have overflow) into bath outlet, seat and tighten as required.

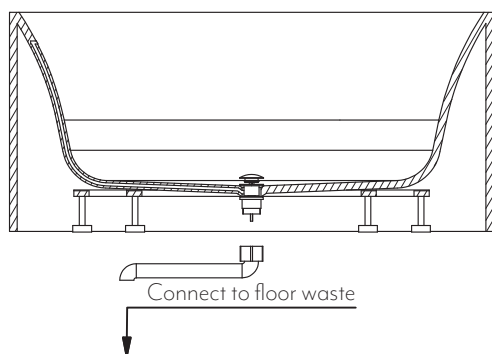

- ④ Fit out drainage connection to underside of bath. Position bath & connect drainage to floor waste.

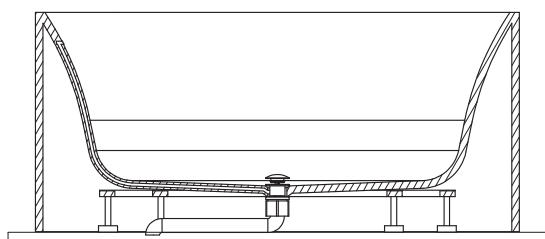


- ⑤ Silicone around the base of the bath, test and commission.

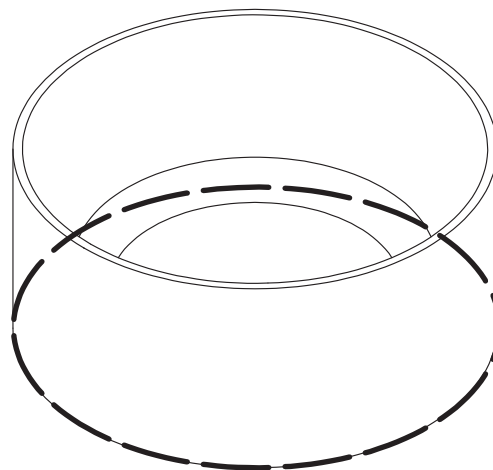

Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

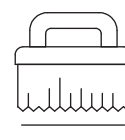

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material