



VERA - DOUBLE SINK 790MM

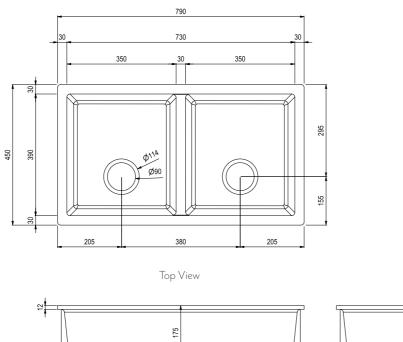

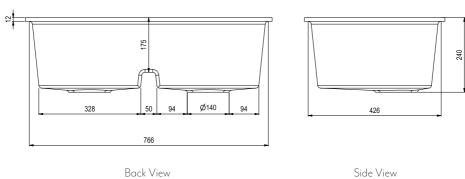

Note: Dimensions are nominal measurements only

SPECIFICATIONS	
RECOMMENDED USE	Domestic/Commercial
MATERIAL	Composite Black Granite
INSTALLATION	Undermount, Top Mount
OVERFLOW	No
CAPACITY	48L (2 × 24L)
RIM THICKNESS	12mm


INSTALLATION GUIDE

This product must be installed by a licensed plumber. This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with AS/NZS 3500.




CUT-OUT TEMPLATES

TOPMOUNT INSTALLATION

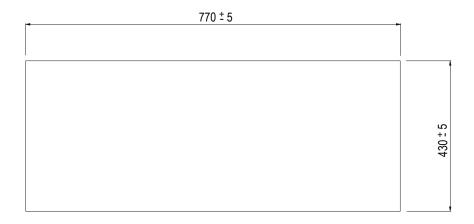

UNDERMOUNT INSTALLATION

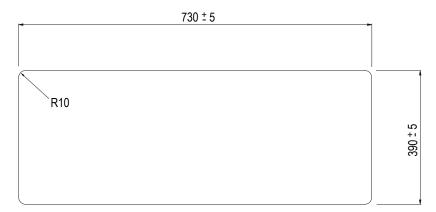

Note: Product does not include waste basket




Regularly clean with

mild liquid detergent

or soap and water.







INSTALLATION GUIDE

This product must be installed by a licensed plumber.

This is a general installation guide - there are many factors that are involved that can alter the installation method.

This product install must comply with AS/NZS 3500.




UNDERMOUNT INSTALLATION



Mark out desired location of sink using the cut out template dimensions provided.


Cut out sink hole using preffered method.

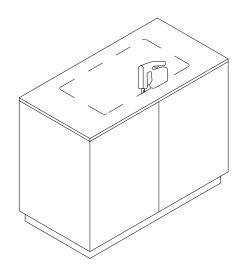




Clean around the edge of benchtop sink hole & perimeter of sink rim.

Position the sink in the cabinet below the benchtop hole. Apply adhesive sealant to the perimeter of sink rim & lift into position.

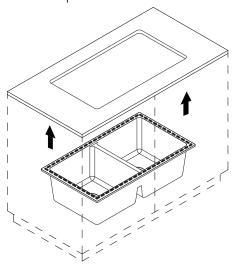



Lay a peice of timber across the benchtop hole & position in line with sink holes below.




Note: Use rags to protect surfaces when either the clamp or timber is making contact with the benchtop or sink.




Using the benchtop material build rebated mounting tabs.

Clean around the underside perimeter of the sink & the mounting tabs.

Apply adhesive sealant to the mounting tab & fix it to the underside of the benchtop & sink rim. Repeat tabs at regular intervals. Wipe away any excess adhesive around mounting tabs.

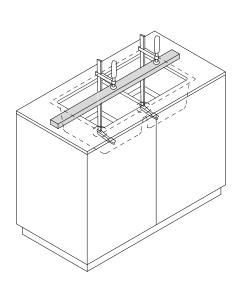

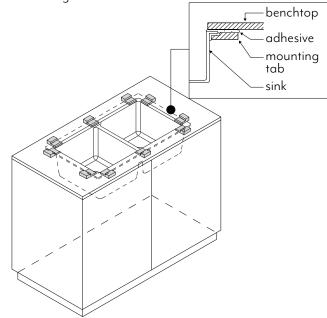



Regularly clean with mild liquid detergent or soap and water.



cleaners or bleach.
These substances are



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.

INSTALLATION GUIDE

This product must be installed by a licensed plumber. This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with AS/NZS 3500.



TOPMOUNT INSTALLATION



Mark out desired location of sink using the cut out template dimensions provided.


Cut out sink hole using preffered method.

ate dimensions provided.




Clean around edge of benchtop sink hole & perimeter of sink rim.


Apply adhesive sealant to the underside perimeter of sink rim & lower into position.

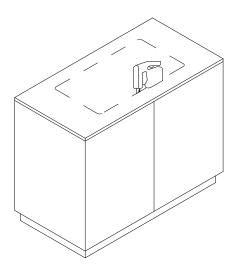



Wipe away any excess adhesive sealant around sink rim.

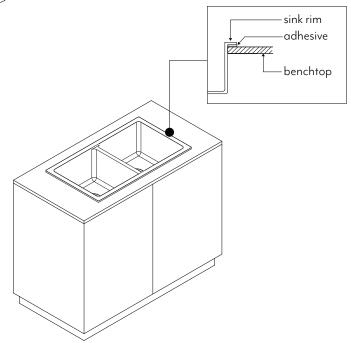

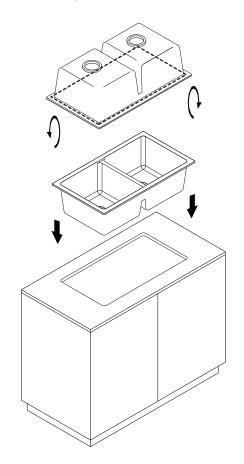



Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.