




# VERA SINGLE SINK 560MM

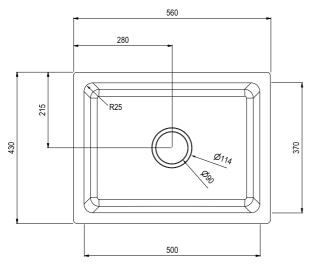

Top View

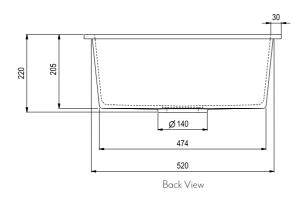

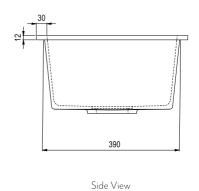

Note: Dimensions are nominal measurements only

#### **SPECIFICATIONS**

**RIM THICKNESS** 

RECOMMENDED USE

MATERIAL

Composite Black Granite

INSTALLATION

Undermount, Top Mount

OVERFLOW

No

CAPACITY

32L

12 m m


# **INSTALLATION GUIDE**

This product must be installed by a licensed plumber. This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with AS/NZS 3500.




# **CUT-OUT TEMPLATES**

#### TOPMOUNT INSTALLATION

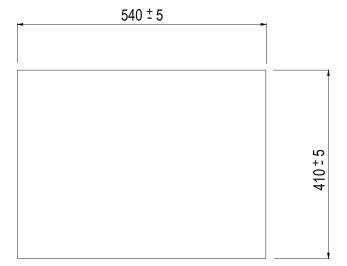

#### UNDERMOUNT INSTALLATION

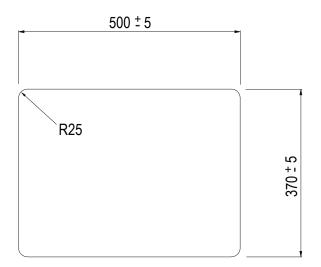


# **NOTE: PRODUCT DOES NOT INCLUDE BASKET WASTE**





abrasive.





### INSTALLATION GUIDE

This product must be installed by a licensed plumber. This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with AS/NZS 3500.




#### UNDERMOUNT INSTALLATION



Mark out desired location of sink using the cut out template dimensions provided.

Cut out sink hole using preffered method.

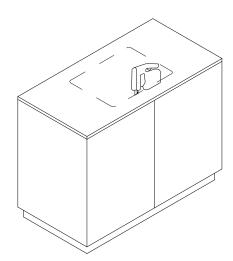




Lay a peice of timber across the benchtop hole & position in line with sink hole below.

Place clamp through the sink hole & tighten the clamp to hold the sink in place. Wipe away any excess adhesive around benchtop opening.


Note: Use rags to protect surfaces when either the clamp or timber is making contact with the benchtop or sink.

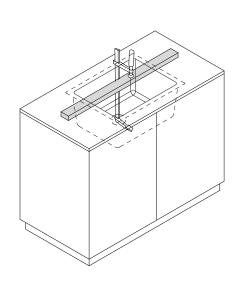



Clean around the edge of benchtop sink hole & perimeter of sink rim.

Position the sink in the cabinet below the benchtop hole. Apply adhesive to the perimeter of sink rim & lift into position.

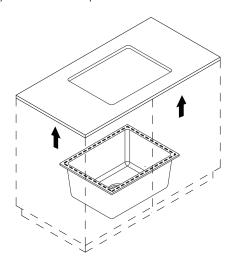




Using the benchtop material build rebated mounting tabs.

Clean around the underside perimeter of the sink & the mounting tabs.

Apply adhesive to the mounting tab & fix it to the underside of the benchtop & sink rim. Repeat tabs at regular intervals.

Wipe away any excess adhesive around mounting tabs.

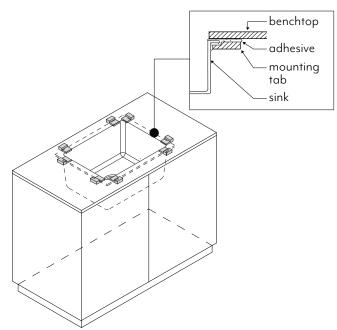



Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach.
These substances are



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.

# INSTALLATION GUIDE

This product must be installed by a licensed plumber. This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with AS/NZS 3500.




#### TOPMOUNT INSTALLATION




Mark out desired location of sink using the cut out template dimensions provided.

Cut out sink hole using preffered method.

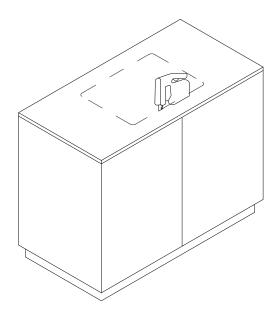


Wipe away any excess adhesive around sink rim.

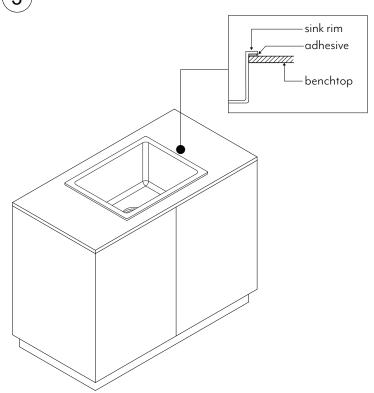



Clean around edge of benchtop sink hole & perimeter of sink rim.

Apply adhesive to the underside perimeter of sink rim & lower into position.

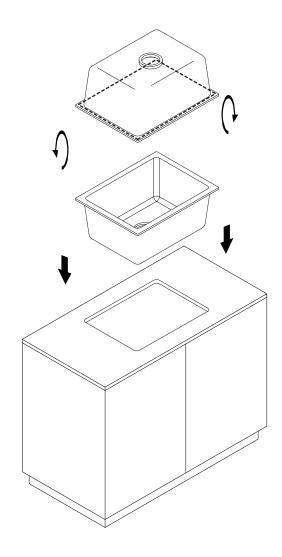



Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.