



MILANI ASSEMBLY TAPS



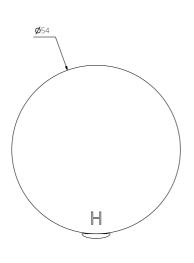

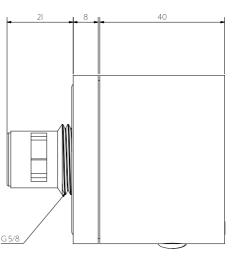

Front View

Side View

Note: Dimensions are nominal measurements only


SPECIFICATIONS	
RECOMMENDED USE	Domestic
MATERIAL	Solid Brass
TEMPERATURE RATING	Maximum continuous working temperature 75°C If the water temperature exceeds 75°C,an approved tempering valve must be fitted
PRESSURE RATING	Recommended minimum working pressure 150kPa Recommended maximum working pressure 500kPa Hot and cold water inlet pressure should be equal
SUITABLE HOT WATER UNITS	Storage tank: Yes Continuous Flow: Yes Gravity Feed: Not suitable


INSTALLATION GUIDE

Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.




New Build - Install breach in desired position (please refer to additional install information regarding breach set backs). **Retrofitting Existing** - Remove existing tapware & reseat body seats until shiny and smooth.

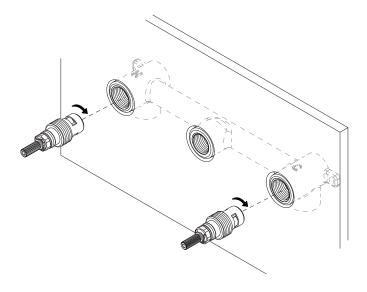

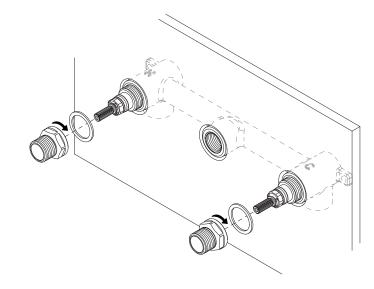

- Remove locking nut from spindle. Screw spindle into breach and hand tighten until rear of spindle meets the body seat, be sure not to over tighten. If necessary apply more pressure lightly with spanner.
- Fit the fibre washer over the spindle. Screw on the locking nut and tighten with spanner. TEST AND CHECK FOR LEAKS.

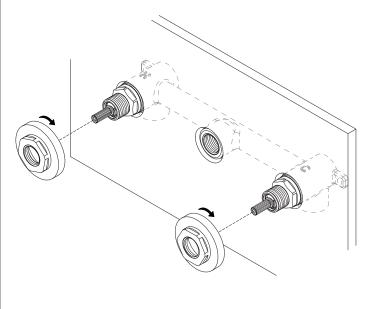

- Install the handle body onto the locking nut, twisting by hand until tightened. Slide back plate over handle body until firmly pressed against finished wall surface.
- 4 Install tap handle onto spindle and tighten in place using grub screw and allen key.



Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach.
These substances are abrasive.




DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.

SET BACK GUIDE


This product must be installed by a licensed plumber.

The set back of the wall breach and distance of the nogging to tile or finished wall surface will dictate the necessary extension parts that will be required for install.




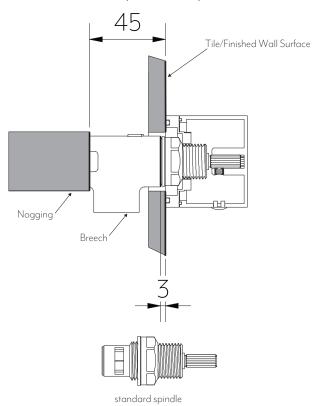

Minimum distance between nogging and finished wall surface is 45mm (or 3mm from in-wall breech to finished wall surface).

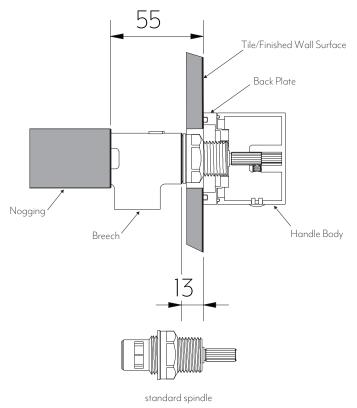


Maximum distance that can be achieved using a standard spindle between finished wall surface and nogging is 55 mm (or 13 mm from in-wall breech to finished wall surface).

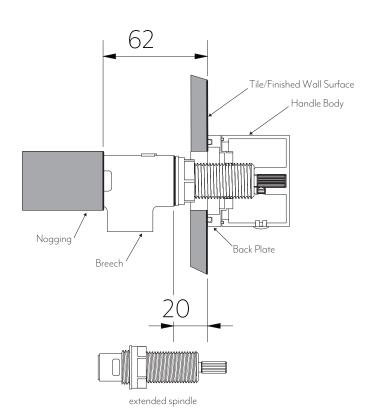

For installations when distance between nogging and finished wall surface is 62mm or more (20mm from in-wall breech to finished wall surface), an extended spindle is required (available for additional purchase).

Note: ABI offers additional parts for non-standard installs.

Contact our team at aftersales@abi-international.com.au for assistance.

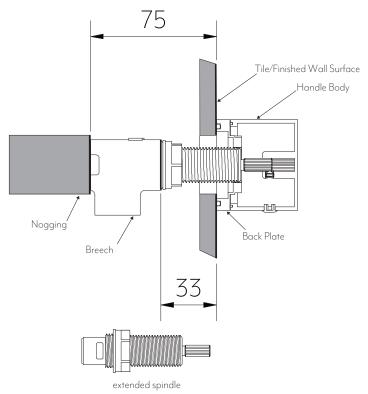

The maximum distance this assembly can achieve using an extended spindle from nogging to finishedwall surface is 75mm, (or 33mm from in-wall breech to finished wall surface).

ASSEMBLY SETUP GUIDE


This product must be installed by a licensed plumber.

This is a general installation guide - there are many factors that are involved that can alter the installation method. This product install must comply with AS/NZS 3500.



Example One: Off set basin mixer/bath spout setup

Example Two:
Centred basin mixer/bath spout setup

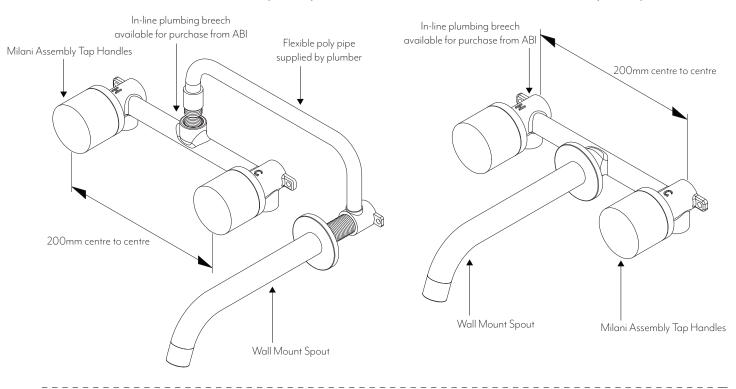

Example Three: Shower Setup

