



ALIRO ACCESSIBLE TOILET ROLL HOLDER

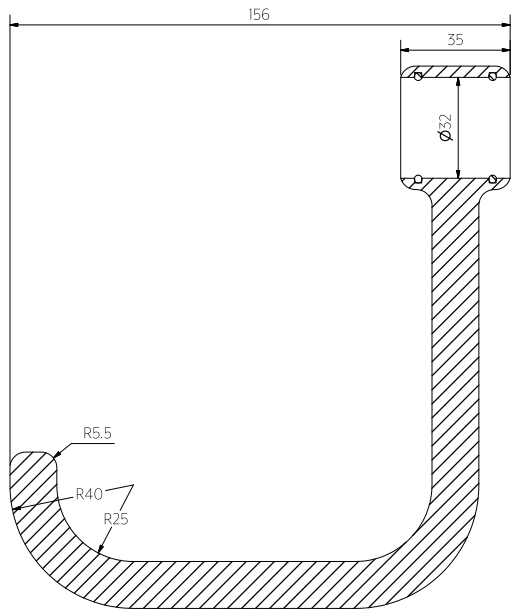

Section View A-A

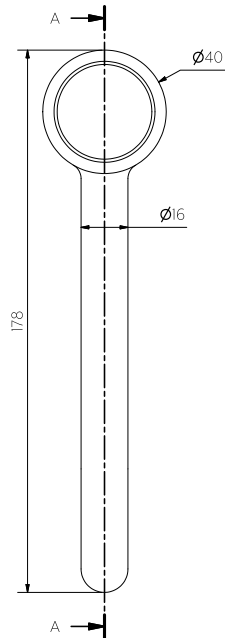

Side View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

Domestic/Commercial

MATERIAL

316 Stainless Steel

STANDARDS

AS1428.1:2021


INSTALLATION GUIDE





Note: This product must be installed by a licensed tradesperson.

This product's install must comply with AS1428.1:2021 for installation within Australia. This is a general installation guide - there are many factors that are involved that can alter the installation method. **ABI takes no responsibility if your product is not fixed to adequate wall structure.**

- 1 Toilet roll holder requires disassembly of grab rail for installation. Refer to your relevant grab rail install for set specific instructions.
Note: Ensure orientation is as desired prior to refitting of rail. Requires full disassembly for later alteration.

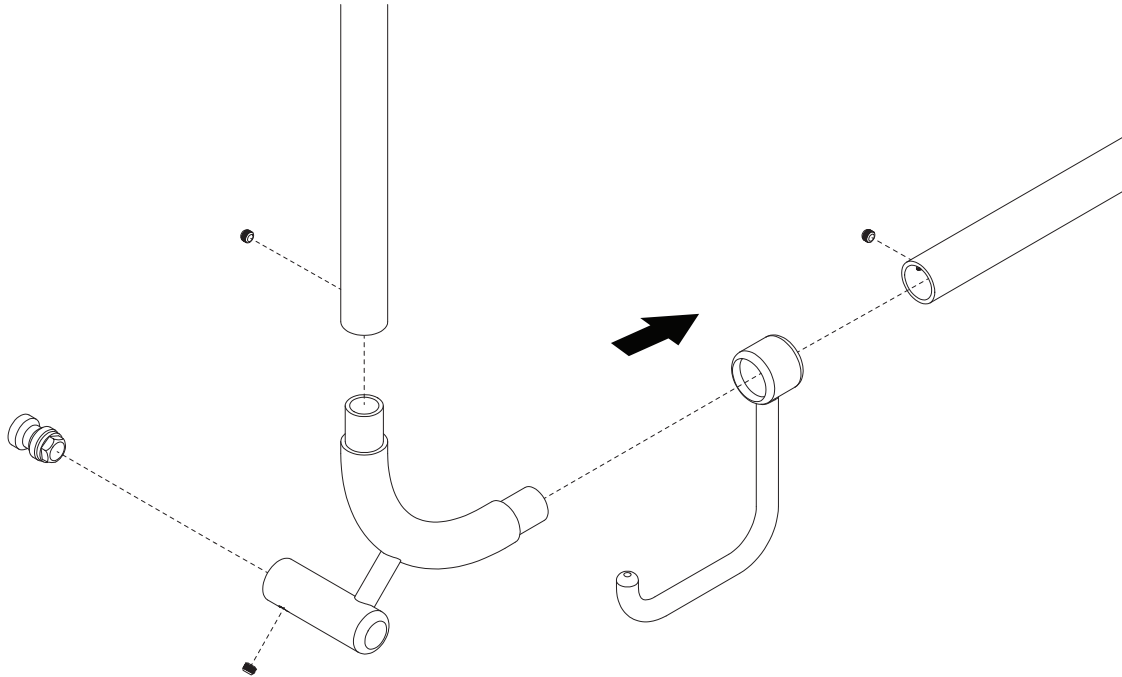

- 2 Reassemble rail ensuring placement meets **AS1428.1:2021 standards.**

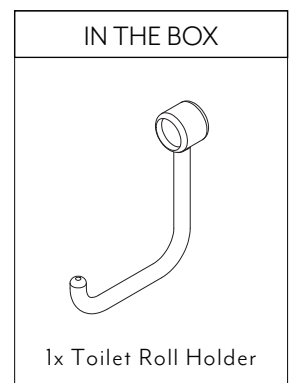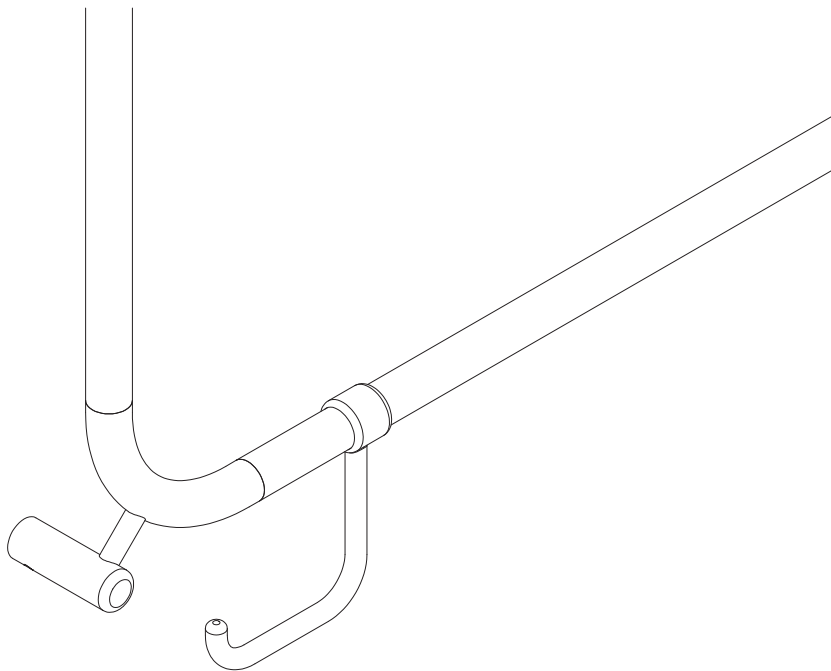

Regularly clean with mild liquid detergent or soap and water.



DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.