

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

Domestic, Commercial

MATERIAL

Solid Brass

TEMPERATURE RATING

Maximum continuous working temperature 75°C
If the water temperature exceeds 75°C, an approved tempering valve must be fitted

PRESSURE RATING

Recommended minimum working pressure 150kPa
Recommended maximum working pressure 500kPa
Hot and cold water inlet pressure should be equal

SUITABLE HOT WATER UNITS

Storage tank: Yes
Continuous Flow: Yes
Gravity Feed: Not suitable

STANDARDS

WELS 5 Star, 6L/min, T41699


INSTALLATION GUIDE

This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. AU/NZ: For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. UK: For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. Other: For installations outside these countries, this product must be installed in compliance with the standards in your respective country.




1. Mark out desired location of taps in relation to spout. Cut holes using a **35mm** hole saw.

Note: If cutting a stone bench top it will need to be cut in a controlled environment by a licensed tradesperson as per OH&S regulations.

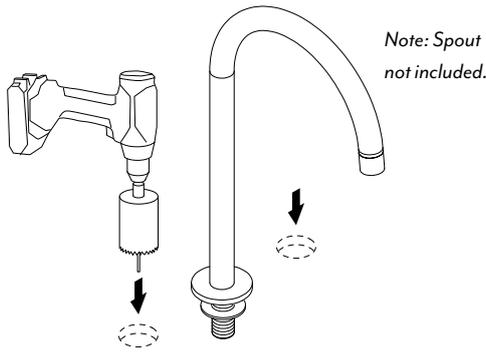


2. 1. Screw spindle into in-bench breech, followed by the brass nut and plastic washer.

2. Push spindles through holes and secure to the bench top, ensure the base plates are **45mm** down from spindle top.

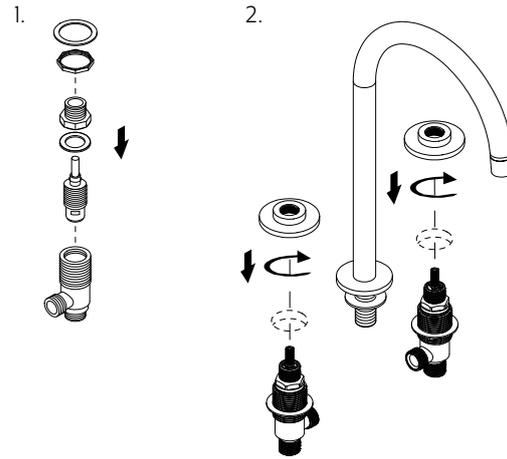

3. 1. Mount spindle attachment to spindle. **IMPORTANT:** Ensure spindles are in the off position, turn clockwise to turn off cold and ant-clockwise for hot.


2. Place cut tile on the face of the spindle attachment, adjust its offset until the front face of tile is 43mm from the face of the baseplate. Tighten the grub screw.

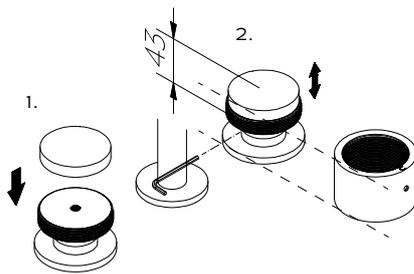

4. Remove the tile again and apply a bit of silicone to the perimeter of the tile face and to the spindle attachment.

How to orientate the H/C symbol


At this point note where the symbol is located when the handle is in the off position. Mark with a pencil the position it needs to be. Return to step 2 and adjust the base plates orientation by the referenced amount.

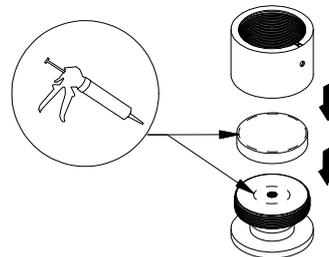

Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

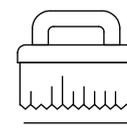

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

INSTALLATION GUIDE



This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. AU/NZ: For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. UK: For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. Other: For installations outside these countries, this product must be installed in compliance with the standards in your respective country.



- 5**
1. Screw handle on to spindle attachment, while holding then tile in disired position.
 2. Fix handle into postion by inserting and tightening the grub screw using allen key provided

- 4**
- Connect pipework to spout from taps using flexi hoses. **(flexi hoses not included)**

Clean up any excess silicone

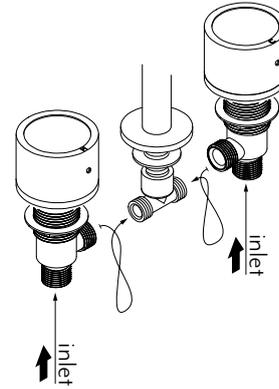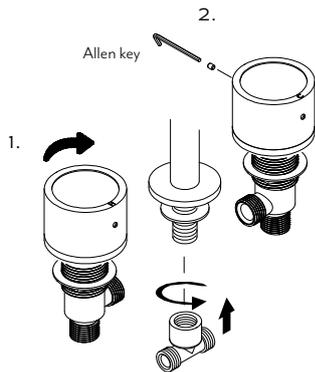

IN THE BOX - (Handle kit)

					
2 x handles	2 x baseplate	2 x spindle att.	1 x diamond hole saw	1 x 5mm allen key	4 x M5 grub screw

IN THE BOX - (Spindle kit)

	2 x spindle (1x R-hand turn, 1x L-hand turn)
	2 x o-ring
	2 x locking nut

IN THE BOX - (In-bench)


	2 x in-bench breach		1 x compression tee fitting
	2 x washer		2 x small nut
	2 x large nut		2 x olive



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive

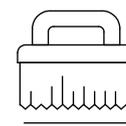

DO NOT use cleaning pads with abrasive surfaces as this may scratch the material

INSTALLATION GUIDE


This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. AU/NZ: For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. UK: For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. Other: For installations outside these countries, this product must be installed in compliance with the standards in your respective country.

How to cut your tile insert


HOLE SAWS ARE INCLUDED WITH TAPS

60mm Diamond Hole Saw

SKU: 15206

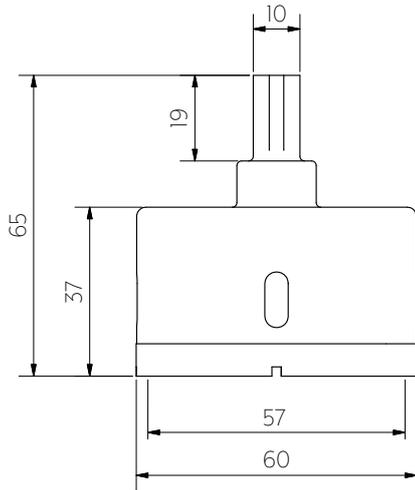

Front View

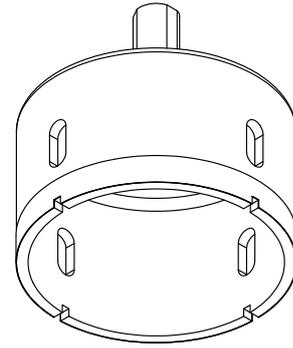


Isometric View

1

Drill press: we highly recommend getting a professional to cut your tile using a drill press.


Using the provided 60mm diamond hole saw, drill incrementally deeper into your tile until through.

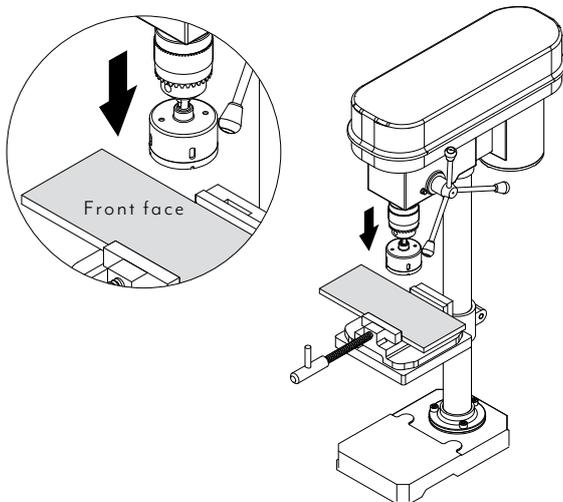


2

Hand drill: we **do not** recommend using this method unless you are highly experienced.

Work from the back face of the tile. Start the drill on an angle so it is easier for the hole saw to bite, then slowly bring the saw vertical.

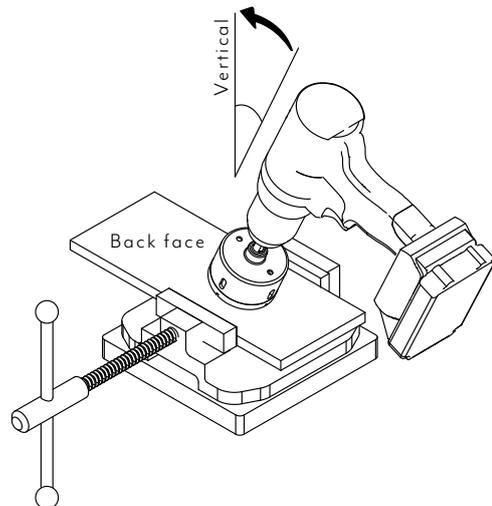

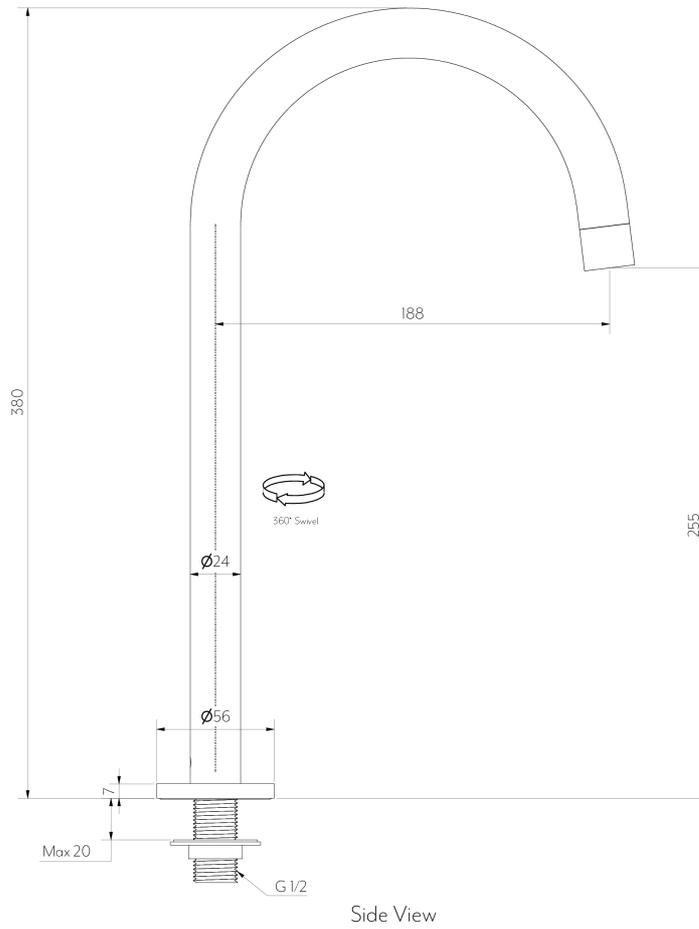

Side View

Note: Dimensions are nominal measurements only

SPECIFICATIONS

RECOMMENDED USE

Domestic

MATERIAL

Solid Brass

TEMPERATURE RATING

Maximum continuous working temperature 75°C
If the water temperature exceeds 75°C, an approved tempering valve must be fitted

PRESSURE RATING

Recommended minimum working pressure 150kPa
Recommended maximum working pressure 500kPa
Hot and cold water inlet pressure should be equal

SUITABLE HOT WATER UNITS

Storage tank: Yes
Continuous Flow: Yes
Gravity Feed: Not suitable

STANDARDS

WELS 5 Star, 6L/min, T40064


INSTALLATION GUIDE



Note: This product must be installed by a licensed plumber. This is a general installation guide - there are many factors involved that can alter the installation method. **AU/NZ:** For installations within Australia and New Zealand, this product must be installed in compliance with AS/NZS 3500. **UK:** For installations in the United Kingdom this product must be installed in compliance with the Water Supply (Water Fittings) Regulations and Water Supply (Water Fittings) (Scotland) Byelaws. **Other:** For installations outside these countries, this product must be installed in compliance with the standards in your respective country.


1 Mark out desired location of spout.

Cut hole using a 30mm hole saw.
 Note: If cutting a stone benchtop it will need to be cut in a controlled environment by a licensed tradesperson as per OH&S regulations.

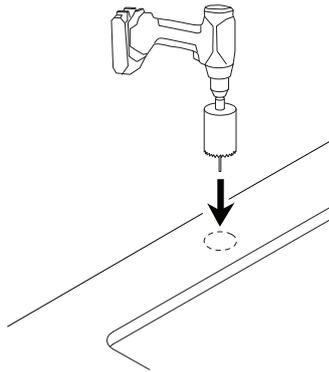


2 Remove the spout by pushing in the plastic clip with an Allen key or screwdriver.


Caution: be careful not to scratch the spout!

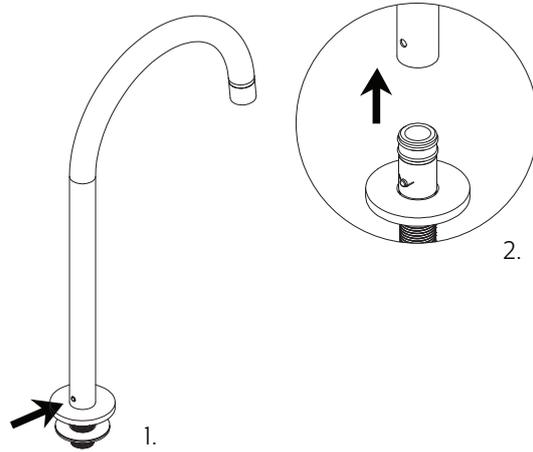

3 Fix base connection to benchtop with brass nut ensuring the rubber washer and spacer are fitted to the underside of the benchtop. Use pliers to hold the base connection while nut is tightened.

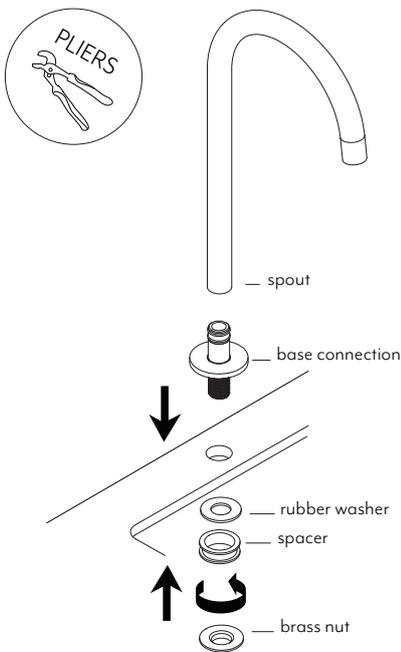

4 Connect pipework to inlet of spout.

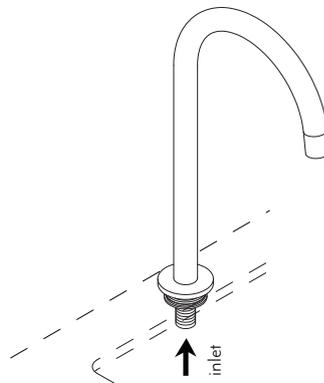

IN THE BOX		1 x spout		1 x spacer (if required)
		1 x base connection		1 x rubber washer
				1 x brass nut



Regularly clean with mild liquid detergent or soap and water



DO NOT use cream cleaners or bleach. These substances are abrasive.



DO NOT use cleaning pads with abrasive surfaces as this may scratch the material.